


E-MANUAL

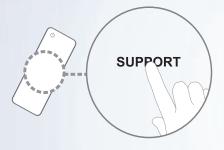

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at

www.samsung.com/register

| N AI - I | O! - I N I - | |
|----------|--------------|--|
| Model | Serial No. | |
| IVIOUCI | OCHAITIO. | |

Contents

| Channel Menu | | Preference Features | |
|---|-----|---|-----|
| Connecting the TV | 1 | Connecting to the Network | 163 |
| Using the INFO button | | Setting up a Wired Network | 180 |
| (Now & Next guide) | 24 | Setting up the Wireless Network | 193 |
| Using the Channel Menu | 26 | Managing the Network Connected | |
| Memorising Channels | 67 | Devices | 220 |
| Other Features | 82 | Setting the Time | 233 |
| | | Blocking Programmes | 250 |
| Basic Feature | | Economical Solutions | 255 |
| Changing the Preset Picture Mode | 99 | Picture In Picture (PIP) | 260 |
| Adjusting Picture Settings | 104 | Connecting to the TV with a | |
| Changing the Picture Size | 109 | Samsung Audio Device | 265 |
| | | Other Features | 269 |
| Changing the Picture Options | 123 | Support Menu | 299 |
| Using the TV with Your PC | 141 | | |
| Changing the Preset Sound Mode | 145 | | |
| Adjusting Sound Settings | 147 | | |

| Advanced Features | | Using the AllShare Play | 572 |
|-----------------------------|-----|---|-----|
| Using the 3D function | 325 | My list (In AllShare Play) | 576 |
| Smart Hub | 340 | Videos (In AllShare Play) | 595 |
| Customizing the Home Screen | 367 | Photos (In AllShare Play) | 614 |
| Using Samsung Apps | 397 | Music (In AllShare Play) | 631 |
| Search | 408 | Recorded TV (In AllShare Play) | 640 |
| Your Video | 416 | Timeshift | 653 |
| Family Story | 433 | Using the DLNA Function | 663 |
| • Fitness | 488 | Anynet+ (HDMI-CEC) | 674 |
| • Kids | 500 | | |
| Web Browser | 515 | | |

545

549


Skype

AllShare Play

| Other Information | | AllShare Play (Troubleshooting) | |
|---|-----|---|-----|
| Troubleshooting | 692 | Smart Hub (Troubleshooting) | 748 |
| Picture Quality (Troubleshooting) | 693 | Web Browser (Troubleshooting) | 750 |
| Sound Quality (Troubleshooting) | 701 | Supported Subtitle and | |
| No Picture, No Video (Troubleshooting) | 706 | AllShare Play file formats | 759 |
| Aerial (Air / Cable) Connection | | Data Service | 768 |
| (Troubleshooting) | 710 | HbbTV | 776 |
| PC Connection (Troubleshooting) | 713 | Connecting to a TV Viewing Card slot | 780 |
| Network Connection (Troubleshooting) | 714 | Teletext Feature | 790 |
| Recording / Timeshift (Troubleshooting) | 715 | Anti-theft Kensington Lock | 797 |
| Others (Troubleshooting) | 724 | • Licence | 802 |
| Anynet+ (HDMI-CEC) (Troubleshooting) | 739 | | |

Connecting the TV

Connecting to an Aerial or Satellite

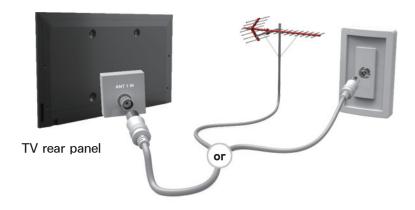

The displayed image may differ depending on the model.



Connecting to an AV Device

Using a HDMI (up to 1080p)





Using an HDMI cable (up to 1080p)

Metal March Mar

For better picture and audio quality,

- connect to a digital device using an HDMI cable.
- An HDMI cable supports digital video and audio signals, and does not require an audio cable.
 - To connect the TV to a digital device that does not support HDMI output, use an HDMI/DVI and audio cables.
 - The picture may not display normally (if at all) or the audio may not work if an external device that uses an older

- version of HDMI mode is connected to the TV. If such a problem occurs, ask the manufacturer of the external device about the HDMI version and, if out of date, request an upgrade.
- for LED 6500 Series and above Be sure to use an HDMI cable with a thickness of 14 mm or less.
- Be sure to purchase a certified HDMI cable. Otherwise, the picture may not display or a connection error may

occur,

- A basic high-speed HDMI cable or one with Ethernet is recommended. This product does not support the Ethernet function via HDMI.
- This product supports the 3D and ARC
 (Audio Return Channel) functions via an HDMI cable. Note that the ARC function is supported by the HDMI IN 2(ARC) port only.
 - The ARC function allows digital audio

to output via the HDMI IN 2(ARC) port. It can be enabled only when the TV is connected with an audio receiver that supports the ARC function.


Using a Scart Cable




The displayed image may differ depending on the model.



Using a Component (up to 1080i)

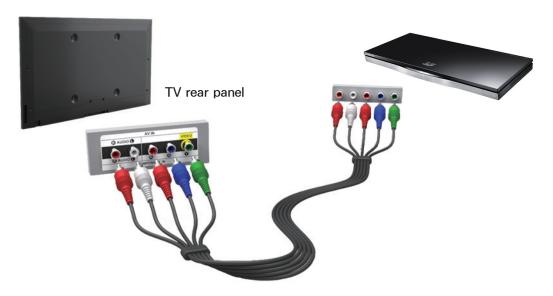

The displayed image may differ depending on the model.

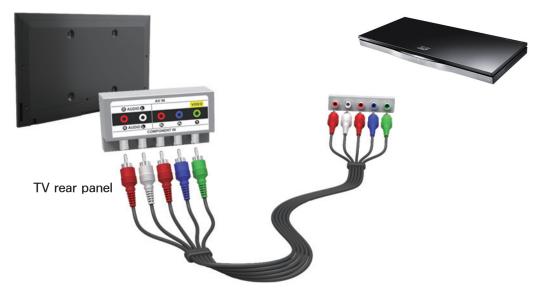

Using a Component (up to 1080i) or an Audio/Video (480i only) and a Scart Cable

In Ext. mode, DTV Out supports
MPEG SD Video and Audio only.

- When connecting to AV IN or

 COMPONENT/AV IN connect the AV

 connector (yellow) to the TV jack

 (Green), (Depending on the model)
- To obtain the better picture quality, the Component connection or Scart connection are recommended over the A/V connection.

Connecting to an Audio device

Using an Optical (Digital) Connection





The displayed image may differ depending on the model.

DIGITAL AUDIO OUT (OPTICAL)

of both the TV and the system.
Use the System speakers for audio.
5.1 CH (channel) audio is available when the TV is connected to an external device supporting 5.1 CH.

When you connect a Digital Audio

System to the DIGITAL AUDIO OUT

(OPTICAL) jack, decrease the volume

to on, you can hear sound output from the TV's optical jack. When the TV

When the receiver (home theatre) is set

is receiving a DTV signal, the TV will send 5.1 CH sound to the home theatre receiver. When the source is a digital component such as a DVD / Bluray player / cable box / STB (Set-Top-Box) satellite receiver and is connected to the TV via HDMI, only 2 CH audio will be heard from the home theatre receiver. If you want to hear 5.1 CH audio, connect the digital audio out jack from your DVD / Blu-ray player / cable box / STB

satellite receiver directly to an amplifier or home theatre.

Using a Headphone Connection

for LED TV



The displayed image may differ depending on the model.



The displayed image may differ depending on the model.

Headphones 🞧

You can connect your headphones to the headphones output on your set.
While the headphones are connected, the sound from the built-in speakers

will be disabled.

- Sound function may be restricted when connecting headphones to the TV.
- Headphone volume and TV volume are adjusted separately.
- The headphones jack supports only the 3 conductor tip-ring-sleeve (TRS) type.

Connecting to a PC

Using an HDMI/DVI Cable



The displayed image may differ depending on the model.



The displayed image may differ depending on the model,

Using an HDMI cable or an HDMI to DVI cable

Connecting through the HDMI cable

may not be supported depending on the PC.

Optimal resolution is 1920 X 1080 @ 60 Hz.

For HDMI/DVI cable connection, you must use the HDMI IN 1(DVI) jack.

The interlace mode is not supported.

The set might operate abnormally if a non-standard video format is selected.

Separate and Composite modes are

supported. SOG (Sync On Green) is not supported.

PC (D-Sub) input is not supported.

Using the INFO button (Now & Next guide)

The display identifies the current channel and the status of certain audiovideo settings.

TV programme information for each channel according to the broadcasting time.

The Now & Next guide shows daily

 Scroll <, > to view information for a desired programme while watching the current channel. Scroll ▲, ▼ to view information for other channels. If you want to move to the currently selected channel, select
 ♣ using your remote.

Using the Channel Menu

Press the button to select the menu you want to use. Each screen will be displayed.

Guide



The EPG (Electronic Programme Guide) information is provided by broadcasters.

Using programme schedules provided by broadcasters, you can specify

programmes you want to watch in advance so that the channel automatically changes to the selected programme channel at the specified time. Programme entries may appear blank or out of date depending on a channel status.

Using Channel View

 A (Sche, Mgr): Displays the Schedule Manager.

- B (-24 Hours): Viewing the list of programmes to be broadcasted before 24 hours.
- (+24 Hours): Viewing the list of programmes to be broadcasted after 24 hours.
- D (Ch. Mode): Select the type of channels you want to display on the Channel View window.
- *i* Information: Displays details of the selected programme.

- Page: Move to next or previous page.
- Watch / Schedule: When selecting the current programme, you can watch the selected programme. / When selecting the future programme, you can reserve to watch the selected programme.

Channel



Using this function, you can delete channels, set favourite channels and edit the channel name for analogue broadcasts.

The available items may differ depending on the selected aerial source.

All

Shows all channels.

TV

Shows TV channels.

Radio

Shows radio channels.

Data/Other

Shows data channels and other channels.

Analogue

Shows analogue channels.

Favourites 1 - Favourites 5

Shows all favourite channels, in up to five groups. Each group has separate channels.

The TV displays favourites only if you have added favourites using Edit Favourites in the Tools menu.

Favourites 1 - Favourites 5 category, you can change the name of category by selecting **B** using your remote.

If the highlight located in the

Recently Viewed

Shows the most recently viewed channels.

Most Viewed

Shows the most frequently viewed channels.

Using the coloured and function buttons with Channel

Air / Cable / Satellite for PDP 570, PDP
 6500, LED 5700, LED 5800, LED 6200 Series and

above

Select the desired aerial source.

The option may differ depending on

country.

Appears only if your TV stored both Air and Cable.

• B Delete

Delete the selected channel(s).

• *i* Information

Displays details of the selected channel,

Page

Scrolls the channel list to the next or previous page.

Select / Deselect

Selects or deselects a channel.

• 🖈 Tools

Displays the option menu.

• 5 Return

Return to the previous menu.

Using the Tools menu with the Channel

Edit Favourites

Lets you assign channels you watch frequently to a favourite group and remove channels from a favourite

group. You access Edit Favourites on the Tools menu.

Lock / Unlock

Lock a channel so that the channel cannot be selected and viewed.

This function is available only when the Channel Lock is set to On.

Rename channel

(Appears only if you have selected an analogue channel.)

Lets you assign a name of up to five

characters to an analogue channel. For example, Food, Golf, etc. This makes it easier to find and select the channel.

Edit Channel Number

Edit the channel number by select the numbers.

This function may not be supported depending on the region.

• Sorting (digital channels only)

Change the list ordered by name or number.

Channel Info

Displays information of channel signal.

The item may differ depending on channel.

 Search (when the aerial was set to Satellite)

Channel scan is started.

Delete

Delete a channel to display the channels you want.

Select All / Deselect All

Select all channels in the list, / Deselect all channels you selected.

To delete a channel from a Category list on the Channel screen, follow these steps:

- 1. If you want to delete a channel, select a category of the channel.
- 2. Select a channel in the category list.
 A \(\sqrt{} \) mark appears to the left of the channel.

- You can select more than one channel.
- ∅ If you select the selected channel again, a
 ✓ mark disappears.
- 3. Open the Tools menu using your remote.
- 4. Select Delete. The message Delete the selected channels? appears.

 Select OK.
- You can delete the selected channel immediately by selecting B using

your remote.

When you delete a channel in the Recently Viewed or Most Viewed category, the channel will disappear from the category list. But, the channel is not deleted.

To set channels as favourites, follow these steps:

- 1. Select the All category.
- 2. Select a channel. A \checkmark mark appears

- to the left of the channel.
- You can select more than one channel.
- ∅ If you select the selected channel again, a
 ✓ mark disappears.
- 3. Open the Tools menu using your remote.
- 4. Select the Edit Favourites. The Edit Favourites screen appears.
- 5. Select A using your remote. The selected channel will be moved to

the favourite group.

Also, you can select a channel in the Edit Favourites screen.

You can add a favourite channel to any one of the groups. To change favourites group, select using your remote. Each time you select n, a favourites group will be changed.

6. When done, select OK. The channel is made as a favourite and is assigned

to the favourite group you selected.

☑ The TV displays the "☆" symbol next to the channel, indicating it is a favourite.

Using the coloured and function buttons with Edit Favourites

- On the Edit Favourites screen, you can use these functions buttons:
 - A Add

Add selected channels to the

- favourites group.
- Change Fav.
- Change the favourites group.
- Each time you select **D** using your remote, the favourites group changes.
 - 0~9 **Go To**
 - You can enter a channel number immediately using your remote.
 - ら Return

Return to the previous menu.

- When you highlight a favourite
 channel in a favourites group on the
 Edit Favourites screen, you can use
 these options:
 - A Delete

Delete the selected channel.

- B Change order
- Change the favourite group list order.
- → Done

Finish the Change order function.

- Copy
 - Copy a selected channel to other favourites groups.
- Change Fav.
 - Change the favourites group.
 - Each time you select **D** using your remote, the favourites group changes.
- − 0~9 Go To
 - You can enter a channel number immediately using your remote.

- ら Return

Return to the previous menu.

To remove a channel from a favourites group, follow these steps:

- 1. Select the favourite's group category.
- 2. Select a channel in the favourites group. A ✓ mark appears to the left of the channel.
 - You can select more than one channel.

- ∅ If you select the selected channel again, a
 ✓ mark disappears.
- 3. Open the Tools menu using your remote.
- 4. Select the Delete. The message

 Do you want to delete the selected item(s)? appears.
- 5. Select OK. The message Deleted the selected item(s), appears.
 - You can delete the selected channel from the list of favourites

group immediately by selecting Busing your remote.

Display Icons Used in the Channel screens

- An analogue channel.
- √: A channel selected.
- ☆: A favourite channel.
- A locked channel.

Schedule Manager



Using this function, you can set the TV to display a desired channel automatically on a day and at a time of your choice.

You must set the current time first using the Time → Clock function in the System menu to use this function.

To use Schedule Viewing, follow these steps:

- 1. On the Schedule Manager screen, select \(\text{\ti}\text{\texi{\texi{\texi{\text{\text{\text{\texi}\text{\text{\text{\text{\text{\texit{\text{\text{\tet
- 2. A pop up screen will appear, Select Schedule Viewing.
- 3. Set Aerial, Channel, Repeat, and Start Time.
- Aerial

Select the desired aerial source.

Channel

Select Channel to view the channel numbers. Select the desired channel.

- You can only select memorised channels.
- You can also enter the channel number directly using the number buttons on the remote.

Repeat

Select Once, Manual, Sat~Sun,
Mon~Fri or Everyday, If you select
Manual, you can set the day you
want.

ve selected.

Date: You can set a desired date.

The Date is available only when you select Once in Repeat.

Start Time

You can set the start time you want.

- 4. When done, select the OK. The selected channel is scheduled for viewing.
 - On the Schedule Manager screen, you can view a list of Schedule

Viewing.

If you press the INFO button after Highlighting an item, the Information screen appears. On the Information screen, you can change or cancel the Schedule Viewing.

Cancel schedule: Cancel the Schedule Viewing.

Edit Schedule: Change the Schedule Viewing.

Return: Return to the previous screen.

To delete an item in a list of scheduled, follow these steps:

- On the Schedule Manager screen,
 highlight an item you want to delete.
- 2. Open the Tools menu using your remote.
- 3. Select the Cancel schedule. The Cancel selected list(s)? message

appears.

4. Select Yes. The selected schedule is cancelled.

To use the Schedule Recording, follow these steps:

for LED 4500, 5400 Series: This function is not supported.

(Digital channels only)

Allows you to make a reservation to record a programme scheduled for

broadcast.

Set the current time first to use this function.

- Select Schedule Manager, The
 Schedule Manager screen will be displayed.
- 3. Select the Schedule Recording.
 - We recommend using a USB
 HDD with at least 5,400 rpm, but

a USB HDD of RAID type is not supported.

More than 2TB USB HDD is not supported.

A USB storage device cannot record until it completes the Device Performance Test.

USB memory stick is not compatible.

4. Set the Aerial, Channel, Repeat, Date, Start / End Time.

If you want to play a recorded programme, refer to Recorded TV in the e-Manual.

Channel List

Using this function, you can view the channel list, programme information, favourite channel, and manage of Schedule Viewing.

 Press the CH LIST button. The Channel List screen is displayed immediately.

2. Change a channel or channel list mode.

Using the coloured and function buttons with the Channel List

If you press the INFO button, the TV displays details of the selected programme.

A Aerial

Select the desired aerial source.

The option may differ depending on country.

Programme View / Channel View

Displays the programme when digital channel is selected. Returns to the channel view.

◆ Ch. Mode / Channel

Move to the type of channels you want to display on the Channel List screen. / On Programme View screen, change a channel.

Watch / Information

Watches the channel you select.

/ Displays details of the selected

Page

programme.

Move to next or previous page.

Using the Schedule Viewing in Channel List

(digital channels only)

You can use Schedule Viewing in Channel List to schedule a digital

- channel programme for viewing.

 The TV will turn on and display the digital channel Programme when the Programme begins.
 - 1. Press the CH LIST button. The Channel List screen appears.
 - 2. Select a desired digital channel.
 - 3. Select cusing your remote. The TV displays the programme list of the selected channel.
- 4. Select a desired programme in the

programme view, and then select Information using your remote.

5. On the Information screen, select Schedule Viewing. The selected programme is scheduled.

Viewing, follow Steps 1 through 4, and then select Cancel schedule.

Channel Status Display Icons

An analogue channel.

- •: A reserved programme,
- A reserved recording programme.
- : A locked channel,

Memorising Channels

Aerial

Menu → Channel → Aerial

Before your television can begin

Memorising the available channels, you
must specify the type of signal source
that is connected to the TV.

The option may differ depending on country.

Country

Menu → Channel → Country

Select your country so that the TV can correctly auto-tune the broadcasting channels.

- The PIN input screen appears. Enter your 4 digit PIN number.
 - Digital Channel: Change the country for digital channels.
 - Analogue Channel: Change the country for analogue channels.

Auto Tuning

Menu → Channel → Auto Tuning

Scans for a channel automatically and stores in the TV.

Automatically allocated programme numbers may not correspond to actual or desired programme numbers. If a channel is locked using the Channel Lock function, the PIN

input window appears.

- Auto Tuning: Scans for channels automatically and stores them in the TV's memory.
- Cable Search Option (when the aerial was set to Cable)

(Depending on the country)

Sets additional search options such as the frequency and symbol rate for a cable network search.

When Aerial Source is set to Air or Cable

- Digital & Analogue / Digital / Analogue:
 Select the channel source to memorise.
 When selecting Cable → Digital &
 Analogue or Digital: Provide a value to
 scan for cable channels.
- Automatic Ordering (Depending on the country): Channels found will be automatically ordered following a criterion established by all the main national and local televisions.

Available only when the aerial source

is set to Air,

 Others Ordering (Depending on the country): If you select this menu you will find others channels ordering directly organized from private national televisions.

Available only when the aerial source is set to Air.

 Operator Selection (Depending on the country): Selects a provider of cable services. Search Mode: If you selected the Cable, the Search Mode screen appears.
 Scans for all channels with active broadcast stations and stores them in the TV.

If you select Quick, you can set up the Network, Network ID, Frequency, Modulation, and Symbol Rate manually by the remote control.

Network: Selects the Network ID setting mode among Auto or Manual.

Network ID: When Network is Manual, you can set up Network ID.

Frequency: Displays the frequency for the channel. (Differs in each country)

Modulation: Displays available

Symbol Rate: Displays available symbol

rates.

When Aerial Source is set to Satellite

(Depending on the country)

modulation values.

- Channel Type: Select the Channel Type to memorise.
- Satellite: Selects the satellite to scan.
 The option may differ depending on country.
- Scan Mode: Select a scan mode for the selected satellite.
- Re-initialise: Selects the scanning mode of the selected satellite.
- Search Mode: Sets search mode using up/down buttons.

Manual Tuning

Menu → Channel → Manual Tuning

Scans for a channel manually and stores in the TV.

- If a channel is locked using the Channel Lock function, the PIN input window appears.
- This function may not be supported depending on the region.

When Aerial Source is set to Air or Cable

 Digital Channel Tuning: Scans for a digital channel.

1. Select the New.

When selecting Aerial → Air:
 Channel, Frequency, Bandwidth

When selecting Aerial → Cable:
 Frequency, Modulation, Symbol
 Rate

2. Select the Search. When scanning has finished, a channel is updated in

the channel list.

- Analogue Channel Tuning: Scans for a analogue channel.
 - 1. Select the New.
 - 2. Set the Programme, Colour System, Sound System, Channel and Search.
 - 3. Select the Store. When scanning has finished, a channel is updated in the channel list.

Channel mode

P (programme mode): When tuning is

- complete, the broadcasting stations in your area have been assigned to position numbers from P0 to P99.

 You can select a channel by entering the position number in this mode.
- C (aerial channel mode) / S (cable channel mode): These two modes allow you to select a channel by entering the assigned number for each aerial broadcasting station or cable channel.

When Aerial Source is set to Satellite

- Transponder: Selects the transponder.
- Scan Mode: Selects either free or all channels to store.
- Network Search: Enable / Disable network search.
- Signal Quality: Display the current status of broadcasting signal.
 - Information on a satellite and its transponder is subject to change

depending on the broadcasting conditions.

When setting is completed, move to Search. Channel scan is started.

Other Features

Guide Type

Menu → Channel → Guide Type

(Depending on the country)

You can select a different type of Guide.

- Samsung: Uses the guide programme by provided Samsung.
- Rovi On Screen: Uses the guide programme provided by Rovi

International Solutions,

PROVI EPG initial setting time can take a while depending on the region or broadcast environment.

Genre Selection for U.K.

Menu → Channel → Genre Selection

Genre Selection is available when Aerial is set to Freesat.

 Genre Selection: Turn the channelgenre selection feature on or off when using the guide.

Transfer Channel List

Menu → Channel → Transfer Channel List

Imports or exports the channel map.

You should connect USB storage to use

this function.

The PIN input screen appears. Enter the PIN using your remote.

 Import from USB: Import channel list from USB. Export to USB: Export channel list to USB. This function is available when USB is connected.

Fine Tune

Menu → Channel → Fine Tune

(Analogue channels only)

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is

weak or distorted, fine tune the channel manually. Scroll to the left or right until the image is clear.

Settings are applied to the channel you're currently watching.

Fine tuned channels that have been saved are marked with an asterisk "*" on the right-hand side of the channel number in the channel banner.

To reset the fine-tuning, select the Reset.

Edit Channel Number

Menu → Channel → Edit Channel Number

(Depending on the model)

Edit the channel number by select the numbers.

This function may not be supported depending on the region.

Crosstalk noise reduction

Menu → Channel → Crosstalk noise

reduction

(Depending on the model)

(Analogue channels only)

This function reduces diagonal noise in the picture caused by signal crosstalk (interference). If your TV picture displays diagonal noise or distortion when you watch, turn on this function.

Satellite System

Menu → Channel → Satellite System

Satellite System is available when

Aerial is set to Satellite, Before running

Auto Store, set Satellite System, Then

channel scan is run normally.

- The PIN input screen appears. Enter your 4 digit PIN number.
- Satellite Selection: You can choose the satellites for this TV.
- LNB Power: Enables or disables the power supply for the LNB.
- LNB Settings: Configures the outdoor

equipment.

Satellite: Selects the satellite for receiving digital broadcasts.

Transponder: Selects a transponder from the list or adds a new transponder.

DiSEqC Mode: Selects DiSEqC mode

for the selected LNB.

Lower LNB Oscillators: Sets the LNB oscillators to a lower frequency.

Upper LNB Oscillators: Sets the LNB oscillators to a higher frequency.

Tone 22 kHz: Selects the Tone 22 kHz depending on the LNB type. For a universal LNB it should be Auto.

Signal Quality: Display the current status of broadcasting signal.

 SatCR/Unicable Settings: Configure single cable installation.

This function may not support depending on the region.

SatCR/Unicable: Enables or disable single cable installation support.

number for this receiver.

Slot Frequency: Enter the appropriate

Slot Number: Select the SatCR user slot

frequency to receive the signal from SatCR.

Detect Slot Frequency: Auto-detect the signal frequency for the selected slot number.

Verify Slot Frequency: Verify that the frequency entered corresponds to the selected slot.

- Positioner Settings: Configures the aerial positioner.
 - Positioner: Enables or disables the positioned control.

Positioner Type: Sets the positioned

type between DiSEqC 1.2 and USALS

- (Universal Satellite Automatic Location System).– My Longitude: Sets the longitude for my location.
 - My Latitude: Sets the latitude for my

location,

 Satellite Longitude Settings: Sets the longitude of user defined satellites.

User Mode: Sets the position of satellite aerial according to each satellite.

If you store the current position of satellite aerial according to a certain satellite, when the signal of that satellite is needed, the satellite aerial can be moved to pre-populated position.

- Satellite: Selects the satellite to set the position for,
- Transponder: Selects a transponder from the list for signal reception.
- Moving Mode: Selects the movement mode between discrete and continuous movement.
- Step Size: Adjusts the step size
 degrees for the aerial rotation. Step
 Size is available when Moving Mode
 is set to Step.

- Go To Stored Position: Rotates the aerial to the stored satellite position.
- Aerial Position: Adjusts and stores
 the aerial position for the selected
 satellite.
- Store Current Position: Stores current position as the selected positioner limit,
 - Signal Quality: Display the current status of broadcasting signal.

Installer Mode: Sets limits to the scope

- of movement of satellite aerial or reset the position. Generally, installation guide uses this function.
- Limit Position: Selects the direction of the positioner Limit.
- Aerial Position: Adjusts and stores
 the aerial position for the selected
 satellite.
- Store Current Position: Stores the current position as the selected positioner Limit,

- Go To Zero: Moves the aerial to the reference position.
- Reset Positioner Limit: Allows the aerial to rotate over the full arc.
- Reset All Settings: All satellite settings
 will be reset to the initial values.

Changing the Preset Picture Mode

Picture Mode

Menu → Picture → Picture Mode

Picture modes apply preset adjustments

to the picture.

When your TV is connected to a PC via an HDMI to DVI cable, you can only select Entertain and Standard.

Dynamic

Suitable for a bright room.

Standard

Suitable for a normal environment.

Natural for LED 5300 Series and above

Relax for PDP 6500 Series

Suitable for reducing eye strain.

Movie

Suitable for watching movies in a dark room.

Entertain

Suitable for watching movies and games.

Only available when the TV is connected to a PC via an HDMI to DVI and an HDMI to HDMI cables.

Samsung MagicAngle for LED 5400 Series

Menu → Picture → Samsung MagicAngle

Adjust screen viewing Angle to optimize screen quality according to your viewing position.

 Samsung MagicAngle: When viewing the screen at an angle from below or

- above by setting the appropriate mode for each position you can obtain a similar picture quality as viewing the screen directly from the front,
- Off: Select when viewing from the front position.
- Lean Back Mode: Select when viewing from a slightly lower position.
- Standing Mode: Select when viewing from the upper position.

- Mode: Adjust screen viewing angle.
 - When Samsung MagicAngle is set to Lean Back Mode or Standing Mode, Gamma is not available.

Adjusting Picture Settings

Backlight for LED TV / Cell Light for PDP TV

Menu → Picture → Backlight / Cell Light
 Adjusts the pixel brightness, 20 is the brightest setting.

Contrast

Menu → Picture → Contrast

Adjusts contrast level. Values closer to 100 mean bigger light/dark contrast.

Brightness

Menu → Picture → Brightness

Adjusts brightness level. Values closer to 100 mean brighter screen.

<u>Sharpness</u>

Menu → Picture → Sharpness

Adjusts sharpness of picture. Values closer to 100 mean a sharp image.

Colour

Menu → Picture → Colour

Adjusts colour saturation level. Values closer to 100 mean more intense colours.

Tint (G/R)

Menu \rightarrow Picture \rightarrow Tint (G/R)

Adjusts tint levels for green and red.

Values closer to 100 mean greater intensity for that colour.

To adjust picture quality, follow these steps:

- Select an option you want to adjust.
 When you select an option, a slider screen appears.
- 2. Adjust the option value using your remote.
- When you change an option value, the change will affect the OSD menu also.
- When your TV is connected to a PC

via an HDMI to DVI cable, Colour and Tint (G/R) is not available.

You can adjust and store settings for each external device connected to the TV.

Lowering picture brightness reduces power consumption.

Changing the Picture Size

Screen Adjustment

Menu → Picture → Screen Adjustment

Using this function, you can select various picture size and aspect ratio options.

Picture Size

Your cable box / satellite receiver may have its own set of screen sizes as well. However, we highly recommend

you use 16:9 mode most of the time.

Auto Wide: Automatically adjusts the

picture size to the 16:9 aspect ratios.

16:9: Adjusts the picture size to 16:9 for DVDs or wide broadcasting.

Wide Zoom: Magnifies the picture size more than 4:3.

Zoom: Magnifies the 16:9 wide pictures vertically to fit the screen size.

4:3: The default setting for a movie or

normal broadcasting.

Do not watch in 4:3 format for a long time. Traces of borders displayed on the left, right and centre of the screen may cause image retention (screen burn) which is not covered by the warranty,

Screen Fit: Displays the full image without any cut-off when HDMI (720p / 1080i / 1080p), DTV (1080i, 1080p) or Component (1080i / 1080p) signals are inputted.

Smart View 1: Reduces the 16:9 picture by 50% for LED 5300, LED 5500 series and

above

Smart View 2: Reduces the 16:9 picture by 25% for LED 5300, LED 5500 series and above

Smart View 1 is enabled only in HDMI mode.

Smart View 2 is enabled only in HDMI or DTV mode.

The picture size can vary when you

play content from Videos in AllShare Play.

Zoom/position

Adjusts the picture zoom and position.

Zoom is only available if Picture Size is set to Zoom, Position is only available if Picture Size is set to Wide Zoom,

Zoom, or Screen Fit.

To use the Zoom function after selecting Zoom, follow these steps:

- 1. Select Zoom.
- 2. On the Zoom/position screen, select Zoom, and then zoom in or zoom out using your remote.
- 3. When done, select Zoom again, and then select Close.
- 4. To reset the picture, press Reset.

To use the Position function after selecting Wide Zoom, Zoom or Screen Fit, follow these steps:

- 1. Select the Position.
- 2. On the Position screen, select Position, and then move the picture to position you want using your remote.
- 3. When done, select Position again, and then select Close.
- **4.** To reset the picture position, select Reset.

Picture Sizes available by Input Source:

- ATV, EXT, AV: Auto Wide, 16:9, WideZoom, Zoom, 4:3
- DTV (576i, 576p, 720p): Auto Wide,
 16:9, Wide Zoom, Zoom, 4:3, Smart
 View 2 for LED 5300, LED 5500 series and
- DTV(1080i, 1080p): Auto Wide, 16:9,
 Wide Zoom, Zoom, 4:3, Screen Fit,
 Smart View 2 for LED 5300, LED 5500
 series and above
- Component (480i, 480p, 576i, 576p,

- 720p): 16:9, Wide Zoom, Zoom, 4:3
- Component (1080i, 1080p): 16:9,
 Wide Zoom, Zoom, 4:3, Screen Fit
- HDMI (480i, 480p, 576i, 576p): 16:9,
 Wide Zoom, Zoom, 4:3, Smart View
 1 for LED 5300, LED 5500 series and above
 Smart View 2 for LED 5300, LED 5500
 series and above
 - HDMI (720p, 1080i, 1080p): 16:9,
 Wide Zoom, Zoom, 4:3, Screen Fit,
 Smart View 1 for LED 5300, LED 5500

series and above Smart View 2 for LED 5300, LED 5500 series and above

Depending on the input source, the picture size options may vary.

The available items may differ depending on the selected mode.

HD (High Definition): 16:9 –1080i/1080p (1920x1080), 720p (1280x720)

You can adjust and store settings for each external device you have connected to an input on the TV.

Select the Source, and then adjust the settings.

• 4:3 Screen Size

Available only when picture size is set to Auto Wide. You can determine the desired picture size at the 4:3 WSS (Wide Screen Service) size or the original size. Each European country requires different picture size.

Not available in Component or HDMI

mode.

PC Screen Adjustment for LED 5400 Series

Available in PC mode only.

 Coarse / Fine: Removes or reduces picture noise. If the noise is not removed by Fine-tuning alone, use the Coarse function to adjust the frequency as best as possible (Coarse) and Fine-tune again. After the noise has been reduced, readjust the picture so that it is aligned

- with the centre of screen.
- position using your remote if it is not centred or does not fit the product screen.

Position: Adjust the PC's screen

default settings.

– Image Reset: Resets the image to the

Auto Adjustment for LED 5400 Series

Menu → Picture → Auto Adjustment

Automatically adjusts the picture's

frequency, position, and fine tune settings in the PC mode.

- Available in PC mode only.
- Not available if you connect your
 PC with an HDMI or an HDMI to DVI cable.

Changing the Picture Options

Advanced Settings

Menu → Picture → Advanced Settings

Using this function, you can configure advanced picture settings to create your preferred picture.

Advanced Settings is available only when the Picture Mode is set to Standard or Movie mode.

When connecting a PC using an

HDMI-DVI cable, you can only make changes to White Balance and Gamma.

• Dynamic Contrast

Adjusts the screen contrast.

Black Tone

Select the black level to adjust the screen depth.

Flesh Tone

Emphasizes pink "Flesh Tone,"

RGB Only Mode

Displays the Red, Green and Blue colours so you can make fine adjustments to hue and saturation.

Colour Space

Adjusts the range and variety of colours (the colour space) available to create images.

For LED 6100 - 7200 Series and PDP 6500

Series To adjust Colour, Red, Green,

Blue and Reset, set the Colour Space to Custom.

White Balance

Adjusts the colour temperature for a more natural picture.

R-Offset / G-Offset / B-Offset:

Adjusts each colour's (red, green, blue) darkness.

R-Gain / G-Gain / B-Gain: Adjusts each colour's (red, green, blue) brightness.

Reset: Resets the White Balance to its default settings.

• 10p White Balance

for LED 4500 - 5800 Series and PDP 550 - 570

Series: This function is not supported.

Lets you control the white balance by adjusting the red, green, and blue brightness in 10 point intervals.

- Available when the Picture Mode is set to Movie. Available for all video source.
- Some external devices may not support this function.

Interval: Select the interval to adjust.

Red: Adjusts the red level.

Green: Adjusts the green level.

Blue: Adjusts the blue level.

Reset: Resets the 10p White Balance to its default settings.

Gamma

Adjusts the primary colour intensity.

Expert Pattern

for LED 4500 - 5800 Series and PDP 550 - 570

Series: This function is not supported.

Use the Expert Pattern function to

calibrate the picture. If the OSD menu disappears or a menu other than the Picture menu is opened, the TV saves the calibration and the Expert Pattern screen disappears.

Off: Turns the Expert Pattern function off.

Pattern1: This test screen demonstrates the effect of your display settings on shades of grey and black.

Pattern2: This test screen demonstrates

the effect of your display settings on colours.

- After selecting Pattern1 or Pattern2, you can adjust any of the advanced settings for the desired effect.
- While the Expert Pattern is running, the TV does not output sound.
- Only enabled in DTV, Component, and HDMI modes.
- xvYCC

Series: This function is not supported.

Setting xvYCC on increases picture detail and enlarges the colour space when you are watching movies input from an external device (e.g. BD/DVD player) connected to the TV's HDMI or Component IN jacks.

Available only when you set the Picture Mode to Movie and the external input to HDMI or Component. Some external devices may not support this function.

Motion Lighting

Reduces power consumption by reducing screen brightness when the picture on the screen is in motion.

- This feature is not supported in 3D mode.
- Only available in Standard mode.
- When you change the Backlight for LED TV / Cell Light for PDP TV,

Contrast, or Brightness, the TV sets

Motion Lighting to Off.

Picture Options

Menu → Picture → Picture Options

Using this function, you can configure additional picture settings to suit your preference.

When your TV is connected to a PC via an HDMI to DVI cable, you can only make changes to Colour Tone.

Colour Tone

Select the colour temperature.

Warm1 or Warm2 will be deactivated when the Picture Mode is set to Dynamic.

You can adjust and store settings for each external device connected to an input on the TV. Select Source and then adjust the settings.

Digital Noise Filter

If the broadcast signal received by your

TV is weak, you can activate the Digital Noise Filter feature to reduce any static and ghosting that may appear on the screen.

Auto Visualisation: When changing analogue channels, displays signal strength.

When the signal is weak, try all the options until the TV displays the best picture.

Only available for analogue channels.

- When the bar is green, you are receiving the best possible signal.
- MPEG Noise Filter

Reduces MPEG noise to provide improved picture quality.

HDMI Black Level

Lets you adjust the screen depth by selecting a black level.

Available only in HDMI mode.

• Film Mode

Sets the TV so that it senses and then

processes film signals from all sources automatically and adjusts the picture for optimum quality.

Ø Available in TV, AV, Component (480i
/ 1080i) and HDMI (1080i).

Motion Plus for LED TV

for LED 5400 - 5500 Series: This function is not supported.

Removes drag from fast scenes with a lot of movement to provide a clearer picture.

- The Info screen on your TV displays the resolution and frequency of the incoming signal (60Hz), but not the frequency the TV is generating for the image it is displaying by using Motion Plus function.
- If noise occurs on the screen, please set up the Motion Plus to Off, If Motion Plus is Custom, you can set up the Blur Reduction, Judder Reduction or Reset manually.

If Motion Plus is Demo, you can compare the difference of on and off modes.

Blur Reduction: Adjusts the blur reduction level from video sources.

Judder Reduction: Adjusts the judder reduction level from video sources when playing films.

Reset: Reset the custom settings to the factory defaults.

LED Motion Plus for LED TV

for LED 4500, 5400 Series: This function is not supported.

Removes drag from fast scenes with a lot of movement to provide a clear picture.

Reset Picture

Menu → Picture → Reset Picture

Resets your current picture mode to its default settings.

Using the TV with Your PC

Using Your TV as a Computer (PC)
Display

Entering the Video Settings (Based on Windows 7)

For your TV to work properly as a computer display, you must enter the correct video settings after you have connected the TV to your PC.

Depending on your version of

Windows and your video card, the procedure on your PC will probably differ slightly from the procedure presented here.

will apply in most cases. (If not, contact your computer manufacturer or Samsung Dealer.)

Mathematical However, the same basic information

- Click "Control Panel" on the Windows start menu.
- 2. Click "Appearance and Themes"

- in the "Control Panel" window. A display dialog box appears.
- 3. Click "Display". Another display dialog box appears.
- 4. Click the "Settings" tab on the display dialog box.
 - On the Settings tab, set the correct resolution (screen size).
 The optimal resolution for this TV is 1920 x 1080.
 - If a vertical-frequency option

exists on your display settings
dialog box, select "60" or "60 Hz".
Otherwise, just click "OK" and exit
the dialog box.

Changing the Preset Sound Mode

Sound Mode

Menu → Sound → Sound Mode

Sound modes apply preset adjustments to the sound.

If Speaker Select is set to External Speaker, Sound Mode is disabled.

Standard

Selects the normal sound mode.

Music

Emphasizes music over voices.

Movie

Provides the best sound for movies.

Clear Voice

Emphasizes voices over other sounds.

Amplify

Increase the intensity of high-frequency sound to allow a better listening experience for the hearing impaired.

Adjusting Sound Settings

Sound Effect

Menu → Sound → Sound Effect

- If Speaker Select is set to External Speaker, Sound Effect is disabled.
 - Available only when the Sound Mode is set to Standard.
 - SRS TruSurround HD

This function provides a virtual 5.1 channel surround sound experience

through a pair of speakers using HRTF (Head Related Transfer Function) technology.

SRS TruDialog

the intensity of voices over background music or sound effects so that dialog can be heard more clearly.

This function allows you to increase

Equaliser

The Equaliser displays a series of sliders. Use the arrow buttons to select

a slider, and then change the slider's value. To Reset the Equaliser, select Reset. A pop-up appears asking if you want to reset. Select Yes. To exit, select Close.

Balance L/R: Adjusts the balance between the left and right speaker. 100Hz / 300Hz / 1kHz / 3kHz / 10kHz

(Bandwidth Adjustment): Adjusts the volume level of specific bandwidth

frequencies.

Reset: Resets the equalizer to its default settings.

Broadcast Audio Options

Menu → Sound → Broadcast Audio Options

Audio Language

(Digital channels only)

Change the default value for audio languages.

The available language may differ depending on the broadcast.

Audio Format

(Digital channels only)

When sound is emitted from both the main speaker and the audio receiver, a sound echo may occur due to the decoding speed difference between the main speaker and the audio receiver. In this case, use the TV Speaker function.

Audio Format option may differ depending on the broadcast, 5.1ch Dolby digital sound is only available when connecting an external speaker through an optical cable.

Audio Description

(Not available in all locations) (Digital channels only)

This function handles the Audio Stream for the AD (Audio Description) which is sent along with the Main audio from the broadcaster.

Audio Description (Off / On): Turn
 the audio description function on or

off.

Volume: Adjust the audio description volume.

Additional Settings

Menu → Sound → Additional Settings

DTV Audio Level

(Digital channels only)

This function allows you to reduce the disparity of a voice signal (which is one of the signals received during a digital

TV broadcast) to a desired level.

According to the type of broadcast signal, MPEG / HE-AAC can be adjusted between -10dB and 0dB.

To increase or decrease the volume, adjust between the range 0 and -10 respectively.

SPDIF Output

SPDIF (Sony Philips Digital InterFace) is used to provide digital sound, reducing interference going to speakers and

various digital devices such as a DVD player,

Audio Format: You can select the
 Digital Audio output (SPDIF) format,

The available Digital Audio output (SPDIF) format may differ depending on the input source.

Audio Delay

Lets you correct timing mismatches
between the audio track and the video
when you are watching the TV and

listening to digital audio output from the TV through an external device such as an AV receiver, When you select the Audio Delay function, a slider screen appears. Adjust the option value using your remote (0ms ~ 250ms).

Dolby Digital Comp

This function minimizes signal disparity between a dolby digital signal and a voice signal (i.e. MPEG Audio, HE-AAC, ATV Sound).

Select Line to obtain dynamic sound, and RF to reduce the difference between loud and soft sounds at night time.

Line: Set the output level for signals greater or less than -31dB (reference) to either -20dB or -31dB.

RF: Set the output level for signals greater or less than -20dB (reference) to either -10dB or -20dB.

Speaker Settings

Menu → Sound → Speaker Settings

Speaker Select

If you are listening to the sound track of a broadcast or movie through an external receiver, you may hear a sound echo caused by the difference in decoding speed between the TV's speakers and the speakers attached to your audio receiver. If this occurs, set the TV to External Speaker.

When Speaker Select is set to External Speaker, the TV's speakers are turned off. You will hear sound through the external speakers only. When the Speaker Select is set to TV Speaker, both the TV's speakers and the external speakers are on. You

When the Speaker Select is set to
External Speaker, the volume buttons
and mute functions will not operate

will hear sound through both.

and the sound settings will be limited.

If there is no video signal, both the TV's speakers and the external speakers will be mute.

Auto Volume

Normal: Automatically equalizes the volume level when switching to another channel.

Night: Automatically equalizes and decrease the volume level on each

channel, so each channel is quieter.

Night is useful at night, when you may want to keep the volume low.

To use the volume control of a connected source device, set Auto Volume to Off. If Auto Volume is set to Normal or Night, adjusting the volume control of a connected source device may have to effect.

Reset Sound

Menu → Sound → Reset Sound

Reset all sound settings to the factory defaults.

Connecting to the Network

The Wired Network Connection

There are three ways to attach your TV to your LAN using cable:

wired network connections, see your paper user's manual.

For illustrations of the three kinds of

You can attach your TV to your
 LAN by connecting the LAN port on
 the back of your TV to an external

- modem using a LAN cable.
- You can attach your TV to your LAN by connecting the LAN port on the back of your TV to a router which is connected to an external modem.
 Use LAN cable for the connection.
- You may be able to attach your TV to your LAN by connecting the LAN port on the back of your TV directly to a network wall outlet using a LAN cable. Note that the wall outlet

is attached to a modem or router elsewhere in your house.

If your network requires a Dynamic IP address, you should use an ADSL modem or router that supports the Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS values your TV

needs to access the Internet so you

do not have to enter them manually.

Most home networks use a Dynamic
IP address.

Some networks require a Static IP address. If your network requires a Static IP address, you must enter the IP address, subnet mask, gateway, and DNS values manually when you set up the network connection. To get the IP address, subnet mask,

gateway, and DNS values, contact

your Internet Service Provider (ISP), If you have a Windows computer, you can also get these values through your computer,

You can use ADSL modems that support DHCP if your network requires a Static IP address, ADSL modems that support DHCP also let you use Static IP addresses.

The Wireless Network Connection

For an illustration of the wireless network connection, see your paper user's manual.

for LED 5300, 5500 - 5800 Series and PDP

550 - 570 Series To connect your TV

to your network wireless, you need
a wireless router or modem and
a Samsung Wireless LAN adapter

(WIS09ABGNX or WIS12ABGNX),

port. Samsung Wireless LAN adapter

which you connect to your TV's USB

is sold separately and is offered by selected retailers, Ecommerce sites and Samsungparts.com.

You can connect your TV to your LAN through a standard wireless router or modem.

This TV supports the IEEE 802,11a/b/g and n communication protocols.

Samsung recommends using IEEE 802,11n. When you play video over a network connection using IEEE 802,11

a/b or g, the video may not play smoothly.

for LED 5300, 5500 - 5800 Series and

PDP 550 - 570 Series The Samsung
Wireless LAN Adapter and the USB
extension Cable are sold separately
and are offered by select retailers,
Ecommerce sites and Samsungparts,
com.

for LED 5300, 5500 - 5800 Series and PDP 550

570 Series Ensure the TV is turned

on before you connect the Samsung Wireless LAN adapter.

- for LED 5300, 5500 5800 Series and PDP

 550 570 Series The Samsung Wireless

 LAN adapter may not be recognized

 when using a connection via a USB

 hub or via a USB extension cable

 other than the cable supplied.
- To use a wireless network, your TV must be connected to a wireless router or modem. If the wireless

router or modem supports DHCP,
your TV can use a DHCP or static IP
address to connect to the wireless
network.

router or modem that is not currently being used. If the channel set for the wireless router or modem is currently being used by another device nearby, this will result in interference and communication failure.

Select a channel on the wireless

- Your TV supports only the following wireless network security protocols:
 - Authentication Mode : WEP,WPAPSK, WPA2PSK
 - Encryption Type : WEP, TKIP, AES
- If you select the Pure Highthroughput (Greenfield) 802,11n mode and the Encryption type is set to WEP or TKIP on your AP (access point) or wireless router, Samsung TVs will not support a connection

in compliance with new Wi-Fi certification specifications.

If your wireless router or modem supports WPS (Wi-Fi Protected Setup), you can connect to the network via PBC (Push Button Configuration) or a PIN (Personal Identification Number). WPS will automatically configure the SSID and WPA key in either mode.

If your router, modem, or device is

not certified, it may not connect to the TV.

- Connection Methods: You can set up the wireless network connection in four ways:
 - Using Auto Setup (with the Auto Network Search function)
 - Using Manual Setup
 - Using WPS(PBC)
 - Using Plug & Access

Notice for LED 5300, 5500 - 5800 Series and PDP

550 - 570 Series

The picture may appear corrupted or have static for some channels when the TV is connected to the Samsung Wireless LAN adapter, If this occurs, establish a connection using one of the following methods or connect the Samsung Wireless LAN adapter using a USB cable in a place that is not affected by radio interference.

Method 1: Connecting the Samsung
 Wireless LAN adapter using the USB right angle adapter.

To connect the Samsung Wireless

LAN adapter using the USB right angle
adapter, follow these steps:

- Connect the USB right angle adapter to the Samsung Wireless LAN adapter.
- 2. Connect the other end of the right

- angle adapter to the USB port.
- Method 2: Connecting the Samsung
 Wireless LAN adapter via an extension cable.

To connect the Samsung Wireless LAN adapter using the extension cable, follow these steps:

- 1. Connect the extension cable to the USB port.
- 2. Connect the extension cable and

- Samsung Wireless LAN adapter,
- 3. Attach the Samsung Wireless LAN adapter to the back of the TV near the top, using double-sided adhesive tape.

Setting up a Wired Network

Network Settings

Menu → Network → Network Settings

Set up the wired or wireless network connection so you can use various Internet services such as Smart Hub and AllShare Play and perform software upgrades.

Automatic Wired Network Setup

You can configure your TV's wired network connection automatically when connecting your TV to a network that supports DHCP.

If you have connected a LAN cable, the wired network set up screen appears automatically.

To set up your TV's wired network connection automatically, follow these steps:

- Go to the Network Settings screen.
 (Network → Network Settings)
- 2. Select Start. The network test screen appears and verifies the network connection.
- verified, the "You are connected to the Internet. If you have any problems using online services, please contact your Internet service provider," message appears. Select

OK.

- If the connection process fails, check the LAN port connection.
- If the automatic process cannot find the network connection values or if you want to set the connection manually, go to the next section, "Manual Network Setup."

Manual Wired Network Setup

You can configure your TV's wired

network connection manually when connecting your TV to a network that requires a Static IP address.

Getting the Network Connection Values

To view the Network connection values on Winows XP computers, follow these steps:

- 1. Right click the Network icon on the bottom right of the screen.
- 2. In the pop-up menu that appears,

click Status.

3. On the dialog that appears, click the Support tab.

4. On the Support Tab, click the Details button. The Network connection values are displayed.

To set up your TV's wired network connection manually, follow these steps:

1. Go to the Network Settings screen,

(Network → Network Settings)

- Select Start. The network connection screen appears and the verification process starts.
- 3. Select Stop. The verification process stops. Select IP Settings on network connection screen. The IP Settings screen appears.
- 4. Select the IP Mode, and then set the IP Mode to Manual.
- 5. Go to the IP Address entry field, and

- then select the IP Address using the remote.
- 6. Enter the first portion of the IP

 Address (for example, 105) into the first entry field using your remote.

 When done, go to the next field.
- 7. Enter the next portion of the IP

 Address. When done, go to the next field.
 - 8. Repeat the entry process for each field in the IP Address.

- If you make a mistake when entering a number, re-enter the number to correct it.
- 9. When done, go to the Subnet Mask fields.
- 10. Repeat the same entry process for Subnet Mask, Gateway, and DNS Server.
- 11. When done, select OK. The network test screen appears and the verification process starts. When the

connection has been verified, the

"You are connected to the Internet. If
you have any problems using online
services, please contact your Internet
service provider." message appears.

Select OK.

Network Status

Menu → Network → Network Status

You can check the current network and Internet status.

If the wired network connection failed...

• No network cable found.

Check if your network cable is plugged in. If it is connected, make sure that the router is turned on. If it is on, try turning if off and on again,

IP auto setting failed.

Try the following to set your IP address automatically or set your IP address manually by selecting IP Settings.

1) Ensure that DHCP server is enabled on the router, 2) Unplug and re-plugin the router, 3) Contact your Internet Service Provider for more information

Try the following: check if your IP address is set correctly in IP Settings

Unable to connect to the network.

- address is set correctly in IP Settings.

 Contact your Internet Service Provider for more information.
- Connected to your local network, but cannot connect to the Internet.

Check the DNS settings in IP Settings or contact your Internet Service Provider to access the Internet.

 Network setup complete, but cannot connect to the Internet.

Contact your Internet Service Provider to access the Internet.

Setting up the Wireless Network

Network Settings

Menu → Network → Network Settings

Set up the wired or wireless network connection so you can use various Internet services such as Smart Hub and AllShare Play and perform software upgrades.

Automatic Wireless Network Setup

Most wireless networks have an optional security system that requires devices that access the network to transmit an encrypted security code called an Access or Security Key, The Security Key is based on a Pass Phrase, typically a word or a series of letters and numbers of a specified length you were asked to enter when you set up wireless security for your wireless network.

If you use this method of setting up the network connection, and have a Security Key for your wireless network, you will have to enter the Pass Phrase during the automatic or manual setup process.

Depending on your router or modem, you may be able to use a WPS PIN instead.

To set up your TV's wireless network

connection automatically, follow these steps:

- Go to the Network Settings screen.
 (Network → Network Settings)
- 2. Select Start. The network function searches for available wireless networks. When done, it displays a list of the available networks.
- 3. In the list of networks, select a network you want to connect to and then select Next.

- If the wireless router is set to Hidden (Invisible), you have to select Add Network and enter the correct Network Name (SSID) and Security Key to establish the connection.
- 4. If the Enter security key screen appears, go to step 5. If you selected a wireless router that does not have wireless security, go to step 7.
- 5. To set wireless security for the router,

enter the Security Key (Security key or PIN).

You can enter the Security Key (Security key or PIN) using a keyboard screen. Enter the Security Key using your remote.

A keyboard can be used to enter the security key via a USB or Bluetooth connection. The Bluetooth feature might not be available depending on model.

- You should be able to find the Pass Phrase on one of the set up screens you used to set up your router or modem.
- 6. When done, select Next. The network connection screen appears and the verification process starts.
- 7. When the connection has been verified, the You are connected to the Internet. If you have any problems using online services, please contact

your Internet service provider, message appears.

If the network does not accept the Security Key or PIN, select Retry or select IP Settings to enter the settings manually.

If you want to set up the connection manually, select IP Settings. Then, go to the next section, "Manual Network Setup".

Manual Wireless Network Setup

You can configure your TV's wireless network connection manually when connecting your TV to a network that requires a Static IP address or if the automatic connection process has failed.

Getting the Network Connection Values

To view the Network connection values on most Windows computers, follow

these steps:

- 1. Right click the Network icon on the bottom right of the screen.
- 2. In the pop-up menu that appears, click Status.
- 3. On the dialog that appears, click the Support tab.
- **4.** On the Support Tab, click the Details button. The Network connection values are displayed.

To set up your TV's wireless network connection manually, follow these steps:

- Go to the Network Settings screen.
 (Network → Network Settings)
- 2. Select Start. The network function searches for available wireless networks. When done, it displays a list of the available networks.
- 3. In the list of networks, select a network you want to connect to and

then select Next.

If the wireless router is set to Hidden (Invisible), you have to select Add Network and enter the correct Network Name (SSID) and Security Key to establish the connection.

4. If the Enter security key screen appears, go to step 5. If you select a wireless router that does not have wireless security, go to step 7.

5. To set wireless security for the router, enter the Security Key (Security key or PIN).

You can enter the Security Key (Security key or PIN) using a keyboard screen. Enter the Security Key using your remote.

You should be able to find the Pass Phrase on one of the set up screens you used to set up your router or modem.

- 6. When done, select Next. The network connection screen appears and the verification process starts.
- 7. Select Stop. The verification process stops. Select IP Settings on the network connection screen. The IP Settings screen appears.
 - 8. Select IP Mode, and then set the IP Mode to Manual.
 - 9. Go to the IP Address entry field, and then select the IP Address using the

remote.

10. Enter the first portion of the IP

Address (for example, 105) into the first entry field using your remote.

When done, go to the next field.

- 11. Enter the next portion of the IP

 Address. When done, go to the next field.
- 12. Repeat the entry process for each field in the IP Address.

If you make a mistake when

- entering a number, re-enter the number to correct it.
- 13. When done, go to the Subnet Mask fields.
- 14. Repeat the same entry process for Subnet Mask, Gateway, and DNS Server.
- 15. When done, select OK. The network connection screen appears and the verification process starts. When the connection has been verified, the

"You are connected to the Internet, If you have any problems using online services, please contact your Internet service provider," message appears.

WPS(PBC) Network Setup

If your router has a WPS(PBC) button, you can configure your TV's wireless network connection using the WPS(PBC) button quickly and easily.

To set up your TV's wireless network connection using WPS(PBC), follow these steps:

- Go to Network Settings screen.
 (Network → Network Settings)
- 2. Select Start. The network function searches for available wireless networks. When done, it displays a list of the available networks.
- 3. Select the WPS(PBC).
- 4. Press the WPS(PBC) button on your

router within 2 minutes. Your TV automatically acquires all the network setting values it needs and connects to your network.

5. The network connection screen appears, and network setup is done.

Plug & Access Network Setup

The Plug & Access function lets you easily connect your Samsung TV to your Samsung wireless router (sold

separately) by using a USB memory stick to transfer the setup information from the router to the TV. If your non-Samsung wireless router does not support Plug & Access, you must connect using one of the other methods.

You can check for equipment that supports Plug & Access on www. samsung.com. To set up your TV's wireless network connection using Plug & Access, follow these steps:

- 1. Turn on the Samsung wireless router and your TV.
- 2. Insert a USB memory stick into the USB port in your Samsung wireless router, Check the router's LED's to make sure it is on (Blinking → on).
- 3. Take the USB memory stick out of the router, and then insert it into

a USB port on your Samsung TV.

The memory stick downloads the connection information.

4. Wait until the connection is automatically established.

If Plug & Access does not connect your TV to your wireless router, a popup screen appears on the screen notifying you of the failure. If you want to try using Plug & Access again, disconnect the USB

memory stick, reset the router, and then try again from Step 1. You can also choose one of the other connection setup methods.

5. The network connection screen appears, and the network setup is done.

If the wireless router's settings change or you install a new wireless router, you must perform the Plug & Access procedure again, beginning from Step 1.

Network Status

Menu → Network → Network Status

You can check the current network and Internet status.

If the wireless network connection failed...

Wireless network connection failed.

No wireless router selected. Go to

Network Settings to select your router.

Unable to connect to wireless router.

Try the following: check if the router is turned on, and if it is, try turning it off and on again. Check if you need to enter a security key to use the router.

Try the following to set your IP address

IP auto setting failed.

automatically or set your IP address manually by selecting IP Settings.

1) Ensure that DHCP server is enabled

on the router, 2) Unplug and re-plug-

in the router, 3) Contact your Internet Service Provider for more information,

Unable to connect to the network.

address is set correctly in IP Settings.

Contact your Internet Service Provider for more information.

Try the following: check if your IP

 Connected to your local network, but cannot connect to the Internet.

Check the DNS settings in IP Settings, or contact your Internet Service

Provider to access the Internet.

 Network setup complete, but cannot connect to the Internet.

Contact your Internet Service Provider to access the Internet.

Managing the Network Connected Devices

Wi-Fi Direct

Menu → Network → Wi-Fi Direct

Set to connect the TV to wireless mobile devices. Using this function, you can connect wireless mobile devices to your TV directly without a router.

To use this function, your mobile device should be supported by the Wi-Fi Direct. available, depending on your model,)

To connect your mobile device with your TV using Wi-Fi Direct, follow these steps:

1. Turn on the Wi-Fi Direct device and activate its Wi-Fi Direct function.

- 2. Go to the Wi-Fi Direct screen.
 (Network → Wi-Fi Direct) The TV starts to search devices and then displays the devices on the Wi-Fi Direct screen.
- 3. Turn on the Wi-Fi Direct function on your device. Select the desired Wi-Fi device.
 - For PBC: Press the WPS(PBC)
 button on your Wi-Fi device
 within 2 minutes. The Connecting

- popup appears, followed by
 the Connected pop-up. When it
 closes, you should see the device
 listed on the Wi-Fi Direct screen
 as connected.
- For PIN: Input the displayed PIN
 on your device. The Connecting
 popup appears, followed by
 the Connected pop-up. When it
 closes, you should see the device
 listed on the Wi-Fi Direct screen

as connected.

If you want to disconnect the device, select the connected Wi-Fi device, and then select Disconnect.

The TV and BD products perform the role of the Group Owner, If a TV or BD is connected via Wi-Fi Direct, the connected device is represented as a Group Owner in the Wi-Fi Direct list. However, even in this case, the TV cannot connect to another TV or BD

through Wi-Fi Direct.

Soft AP

Menu → Network → Soft AP

Using this function, you can connect the TV to your mobile devices if your mobile devices do not support Wi-Fi Direct.

The Soft AP screen lets you set the options for connecting Wi-Fi devices.

Soft AP

Turns Soft AP on or off, When Soft AP is set to On, your mobile devices can find the TV's network name in their Wi-Fi connection list.

Security Key

Enter a Security Key at least 8 characters long using the remote control. Select Done when finished.

If the security key is not at least
 8 characters long, Done is not available.

 To connect a mobile device to the TV, you must input the security key into the device.

If network does not operate correctly,

check the security key again. An incorrect security key may cause a malfunction.

Using Wi-Fi Direct or Soft AP, you can share data through AllShare Play.

(For only some of the mobile device

models among the mobile device models supporting Wi-Fi Direct or Soft AP.)

| | Wi-Fi Direct | Soft AP |
|---|---|-----------------------|
| Number of Wi-Fi devices that can be connected | Up to 5 | Up to 5 |
| Data sharing | Supported through AllShare (only for supported mobile device models.) | Only through AllShare |

AllShare Settings

Menu → Network → AllShare Settings

AllShare Play lets you play Videos,

Photos, or Music located on your PC or

your DLNA compatible device on the TV using a network connection. It also lets you control the TV through these devices.

The AllShare Settings screen lists your network connected AllShare devices and their IP addresses. Through this screen, you can allow a device to access the TV, deny access, or delete the device from the AllShare list.

The AllShare Settings screen only

displays devices if you have established networked connections to AllShare devices. Otherwise, it will be empty.

To use the AllShare network function,

To use the AllShare network function, you must install the AllShare network software on your PC. For details on set up options, refer to "Using the AllShare Play Functions".

Device Name

Menu → Network → Device Name

Enter a name for this TV. This name will be shown on network remote controls and devices using AllShare Play.

A keyboard appears on the screen.
 Key in a name for your TV manually using your remote. When finished, select Done.

To enter letters, highlight and select each letter. To enter numbers, highlight and select each number or press the number buttons on your

remote.

To shift to capital letters (or from capital letters to lower case), select the Caps or Shift button.

Setting the Time

Time

Menu → System → Time

The current time will appear every time you select INFO using your remote.

Clock

Set the clock to use the various timer features of the TV.

If you disconnect the power cord,

you have to set the clock again.

Clock Mode: Set the current time manually or automatically.

- Auto: The TV sets the current time automatically using the time from a digital channel.
 - You must have the cable or an aerial connected to the TV to set the time automatically.
 - Depending on the broadcast station and signal, the auto time

set up may not be correct. In this case, set the time manually.

Manual: Set the current time manually.

Clock Set: Set the Date and Time manually. You can set the current date and time using your remote.

Available only when the Clock Mode is set to Manual.

Time Zone: Select your time zone.

This function is only available when

the Clock Mode is set to Auto.

GMT: Selects your time zone.

When Country is set to Others, you can use this function.

DST: Switches the DST (Daylight Saving Time) function on or off.

This function is only available when the Clock Mode is set to Auto.

Sleep Timer

Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120,

150, or 180 minutes).

Select a period of time using your remote. To cancel the Sleep Timer, select Off.

On Timer

Set On Timer so that your TV turns on automatically at a time and on a day of your choosing. You can set up three separate On Timer configurations (On Timer 1, On Timer 2, On Timer 3) and select the source of the content the TV

plays when it turns on: an air or cable channel, a USB device, or a set-top box connected to one of the TV's inputs (HDMI1, AV, etc.).

You must set the clock before you can use the On Timer function.

Setup: Select Off, Once, Everyday,

Mon~Fri, Mon~Sat, Sat~Sun or Manual, If you select Manual, you can choose the days you want On Timer to turn on your TV.

Time: Set the time that the TV turns on automatically.

Volume: Set the desired volume level.

Change the volume level using your remote.

Source: To select the source of the content that will play when the TV turns on. You can:

Select TV and have the TV display a

Select USB and have the TV play

specific air or cable channel.

- back photo or audio files from a USB device.
- Select a source on your TV (HDMI1, HDMI2, Component, etc.) that you have connected a set-top box to, and have the TV display a channel from the set-top box.
- The USB device must be connected to your TV before you can select

USB.

- If you select a source other than TV or USB, you must:
 - Have a cable or satellite set-top box attached to that source
 - Set the set-top box to the channel you want to watch when the TV goes on
 - Leave the set-top box turned on.
- When you select a source other than
 TV or USB, the Aerial and Channel

options will disappear.

Aerial (when the Source is set to TV):
Select ATV or DTV.

Channel (when the Source is set to TV):
Select the desired channel,

Music / Photo (when the Source is set

to USB): Select a folder in the USB device that contains music that you want played when the TV turns on automatically or a folder that contains music and a folder that contains photo

- files. If you select both, the TV will display the photos you selected as it plays the music you selected.
- To select folders on the USB device, follow these steps:
 - 1. Select Music. The TV displays a single folder (the Root folder) and the type or name of the device.
- 2. Select the type or name of the device you want to play. A list of folders on the selected device appears.

- If there are no folders on your device, move the highlight to the Select, and then select the Root folder. The Timer screen re-appears with the name of the device in the Music field. Go to Step 4.
- 3. Highlight a folder that contains music, highlight the Select next to it. The Timer screen re-appears with the folder name in the Music field.
- 4. If you want the TV to display photos

- as the music you chose plays, select Photos, and then repeat the same process.
- 5. When done, select the Close at the bottom of the screen.
- You must select a music file. You cannot select only a photo file.
- If there is no music file on the USB device or you don't select a folder containing a music file, the Timer function does not operate correctly.

- If there is only one photo file in the USB, the slide show will not play.
- If a folder name is too long, the folder cannot be selected.
- Each USB you use is assigned its own folder. When using more than one of the same types of USB, make sure the folders assigned to each USB have different names.
- We recommend that you use a USB memory stick and a multi card

reader when using the On Timer. The On Timer function may not work with USB devices that have a built-in battery, MP3 players, or PMPs made by some manufacturers because the TV can take too long to recognize these devices.

If you set the On Timer to play a file saved on a USB HDD, it may take up to 40 seconds or more to play the file after the TV is turned on.

Off Timer

Set Off Timer so that your TV turns off automatically at a time and on a day of your choosing. You can set up three separate Off Timer configurations. (Off Timer 1, Off Timer 2, Off Timer 3)

You must set the clock before you can use the Off Timer.

Setup: Select Off, Once, Everyday,

Mon~Fri, Mon~Sat, Sat~Sun or Manual.

If you select Manual, you can choose

the days you want Off Timer to turn off your TV.

Time: Set the time that the TV turns off automatically.

Blocking Programmes

Security

Menu → System → Security

Using this function, you can configure programme related security options. Every time you access the Security functions, the PIN screen will appear and you must enter that PIN. The PIN screen closes and the Security menu appears.

Channel Lock

Lock channels in Channel menu, to prevent unauthorized users, such as children, from watching unsuitable programme.

 Available only when the Source is set to TV.

Programme Rating Lock

(Depending on the country)

When turned on, the Programme

Rating Lock feature can automatically

block programmes that you deem inappropriate for your children.
You must enter a PIN (personal identification number) before you can set or change any of the Programme
Rating Lock restrictions.

The items of Programme Rating Lock differs depending on the country.

You can adjust the Adult genre

Adult genre enabling for U.K.

enabling.

The Adult genre enabling is available for Freesat aerial only.

Change PIN

The Change PIN screen will appear. Choose any 4 digits for your PIN and enter them in the Enter New PIN Reenter the same 4 digits in the Confirm New PIN. When the Confirm screen disappears, select Close. The TV has memorised your new PIN.

How to watch a restricted programme or movie

If the TV is tuned to a restricted programme or movie, the Programme Rating Lock will block it.

The screen will go blank and the message This channel is blocked by Channel lock settings. Please enter PIN to unblock, appears. Enter the PIN to unblock the programme or movie using your remote.

Economical Solutions

Eco Solution

Menu → System → Eco Solution

Energy Saving

Lets you adjusts the brightness of the TV in order to reduce power consumption. If you select Picture Off, the screen is turned off, but the sound remains on. Press any button except the volume button to turn on the

screen.

Eco Sensor

for LED 4500, LED 5400 Series: This function is not supported.

To enhance your power savings, the picture settings will automatically adapt to the light in the room.

If you adjust Backlight for LED TV / Cell Light for PDP TV in the Picture menu, the Eco Sensor is set to Off automatically. Min, Backlight for LED TV / Min Cell
Light for PDP TV: When the Eco Sensor
is set to On, you can manually adjust
the minimum screen brightness.

If the Eco Sensor is set to On, the display brightness may change (become slightly darker or brighter) depending on the surrounding light intensity. You can control the screen' s minimum brightness with the Min. Backlight for LED TV / Min Cell Light

for PDP TV function.

No Signal Power Off

To avoid unnecessary energy consumption, you can set how long you want the TV to remain on if it's not receiving a signal.

Auto Power Off

The TV will automatically turned off when no user operation is detected for 4 hours.

If the Auto Power Off option is set

to Off, the TV will stay on even if no operations are performed on the TV.

Picture In Picture (PIP)

PIP

Menu → System → PIP

signal has passed through the TV's tuner and watch video from one external video source simultaneously.

If you have a Blu-ray player connected to the TV, for example, you can watch

a TV programme and the Blu-ray movie

You can watch a programme whose

at the same time by using the PIP feature.

While Smart Hub or Programme
Rating Lock is on, you cannot use
the PIP.

PIP

Activate or deactivate the PIP function.

Channel

Select the channel for the sub-picture screen.

Size

Select a size for the sub-picture screen.

Position

Select a position for the sub-picture screen.

Sound Select

You can choose to listen to the sound from the main picture or the sub picture.

If you turn the TV off while watching in the PIP mode, the PIP function is reset to Off. When you turn your TV on, you must turn PIP on again to watch in the PIP mode.

You may notice that the picture in the PIP screen becomes slightly unnatural when you use the main screen to view a game or karaoke.

PIP does not work when the 3D function is active.

PIP Settings: The picture from the external video source will be in the main screen and the picture from

the TV's tuner will be in the PIP subpicture screen.

- Main picture: Component, HDMI
- Sub picture: TV

Connecting to the TV with a Samsung

Audio Device

for LED 6100 Series and above, for PDP TV

SoundShare Settings

Menu → System → Device Manager →

SoundShare Settings

Lets you use a Samsung Audio Device with your TV. If you want to use a Samsung Audio Device, connect it using the Bluetooth function.

Using your TV with Samsung Audio
Device, you can experience TV sound
more loudly and clearly.

Add New Device

off. When the Add New Device is set to Off, the connection signals from new devices are ignored.

Turns the SoundShare function on or

Use / Don't Use: Allows/Blocks the devices.

Samsung Audio Device List

Delete from the list: Deletes the devices from the list.

Supported Samsung Audio Device List models

- DA-E650 / E651 / E660 / E661 / E670/ E680 / E750 / E751 / E760 / E761
- For more detailed information about the Pairing instructions with your TV, visit Samsung homepage (www.samsung. com).
 - Depending on the region, the Samsung

Audio Device may not be sold.

Other Features

Language

Menu → System → Language

Menu Language

Set the menu language.

Teletext Language

Set a desired language for teletext.

English is the default in cases where the selected language is unavailable in the broadcast. Preferred Language

Select a language, which will be the default language when a channel is selected

Device Manager

Menu → System → Device Manager

Using this function, you can set up a keyboard or mouse to use with the TV. You can view your device lists and adjust keyboard or mouse settings in

this menu,

Depending on the model of the USB HID keyboard and mouse may not be compatible with your TV.

You can connect a keyboard and mouse at the same time.

Keyboard Settings

Lets you use a USB or Bluetooth keyboard with your TV. If you want to use a USB keyboard, connect it to the USB port.

for LED 6100-7200 Series and PDP TV If you want to use a Bluetooth keyboard, connect it using the Bluetooth function.

Available only when the QWERTY keypad screen appears.

Select Keyboard

Select which keyboard to use from your keyboard list. You can only use one keyboard at a time even if several are connected.

Add Bluetooth Keyboard

for LED 6100-7200 Series and PDP TV

You can add a Bluetooth keyboard.

Keyboard Options

Sets the default options for the keyboard language and type.

- Keyboard Language: Set a language for your keyboard.
- Keyboard type: Set what a type of keyboard you're using to enter text.
- Switch Input Language: Select a key sequence to change switching input

language.

Mouse Settings

Lets you use a USB or Bluetooth mouse with your TV. If you want to use a USB mouse, connect it to the USB port.

for LED 6100-7200 Series and PDP TV If
you want to use a Bluetooth mouse,
connect it using the Bluetooth function.

You can use a mouse in the TV's menu in the same way you use a mouse on your PC.

Select Mouse

Select which mouse to use from your mouse list. You can only use one mouse at a time even if several are connected.

Add Bluetooth Mouse

for LED 6100-7200 Series and PDP TV

You can add a Bluetooth mouse.

Mouse Options

Sets the default options for the mouse buttons.

- Primary Button: Select the main button you want to use to click and select on screen.
- Pointer Size: Set the size of the onscreen mouse pointer.
- Pointer Speed: Select the speed of the mouse pointer.

Using the TV's menu with a mouse

 Connect a USB or Bluetooth mouse on your TV.

- 2. Click a primary button you selected.

 The Go To pop-up appears.
- 3. Click a menu you wish, and then you can use the menu to same way as on a PC.

Subtitle

(On-Screen Text Messages)

Menu → System → Subtitle

Use this menu to set the Subtitle mode,

• Subtitle

Switches subtitles on or off,

Subtitle Mode

Sets the subtitle mode.

Subtitle Language

Sets the subtitle language.

If the programme you are watching does not support the Hearing Impaired function, Normal automatically activates even if the Hearing Impaired mode is selected.

English is the default in cases where

the selected language is unavailable in the broadcast.

Digital Text for U.K.

Menu → System → Digital Text

If the programme broadcasts with digital text, this feature is enabled.

MHEG (Multimedia and Hypermedia Information Coding Experts Group):

An International standard for data encoding systems used in multimedia

and hypermedia. This is at a higher level than the MPEG system which includes data-linking hypermedia such as still images, character service, animation, graphic and video files as well as multimedia data. MHEG is user runtime interaction technology and is being applied to various fields including VOD (Video-On-Demand), ITV (Interactive TV), EC (Electronic Commerce), teleeducation, tele-conferencing, digital

libraries and network games.

Screen Burn Protection for PDP TV

Menu → System → Screen Burn Protection

To reduce the possibility of screen burn, this unit is equipped with Pixel Shift screen burn prevention technology. Pixel Shift moves the picture slightly on the screen.

The Pixel Shift Time setting allows you to programme the time between

movements of the picture in minutes.

Your TV also has the following additional screen burn protection functions:

- Pixel Shift
- Auto Protection Time
- Scrolling
- Side Grey
- Pixel Shift

Using this function, you can set the

TV to move pixels minutely on the PDP screen in a horizontal or vertical direction to minimize after images on the screen.

Available Pixel Shift settings and optimum settings:

Horizontal

- Available Settings: 0 4 (pixels)
- Optimum settings for TV/AV/Component/HDMI: 4

Vertical

- Available Settings: 0 4 (pixels)
- Optimum settings for TV/AV/Component/HDMI: 4

Time (minutes)

- Available Settings: 1 4 min
- Optimum settings for TV/AV/Component/HDMI: 4 min
 - The Pixel Shift value may differ depending on the monitor size (inches) and mode.

This function is not available in the Screen Fit mode.

Auto Protection Time

If the screen displays a still image for a certain period of time you define, the TV activates the screen saver to prevent the formation of burnt in ghost images on the screen.

Scrolling

This function removes after-images on the screen by illuminating all the pixels on the screen according to a pattern.

Use this function when there are after images or symbols on the screen,

especially when you displayed a still image on the screen for a long time.

The after-image removal function
has to be executed for a long time
(approximately 1 hour) to effectively
remove after-images on the screen.

If the after-image is not removed
after you apply the function, repeat

the function.

Press any button to cancel this feature.

Side Grey

When you watch TV with the screen ratio set to 4:3, using the Side Grey function can prevent damage to the edges of the screen by adjusting the white balance on the extreme left and right sides.

Auto Protection Time for LED TV

Menu → System → Auto Protection Time

If the screen displays a still image for a certain period of time you define, the TV activates the screen saver to prevent the formation of burnt in ghost images on the screen.

General

Menu → System → General

Game Mode

When you have connected a game console such as a PlayStation[™] or Xbox[™] to the TV, you can enjoy a more realistic gaming experience if you set the Game Mode on.

Precautions and limitations for Game Mode

 Before disconnecting a game console and connecting another external device, set Game Mode to Off.

- If you display the TV menu in Game
 Mode, the screen shakes slightly.
- Game Mode is not available when the input source is set to TV.
- Set Game Mode to On only after connecting a game console, If you turn Game Mode on before you have attached the game console, you may notice reduced picture quality.
- If Game Mode is set to On, Picture
 Mode is set to Standard and Sound

Mode is set to Movie automatically.

BD Wise

for LED 4500 - 5800 Series: This function is not supported.

Provides the optimal picture quality for Samsung DVD, Blu-ray, and Home Theatre products which support BD Wise. When the BD Wise is set to On, the picture mode is automatically changed to the optimal resolution.

Available when you connect

Samsung products that support BD Wise through an HDMI cable to the TV.

Menu Transparency

Adjust transparency of menu box.

Sound Feedback

Your TV gives sound feedback when you use TV. Sound Feedback is enabled by default. Turn off Sound Feedback or adjust its volume.

Panel Lock

Lock or unlock all the keys on the TV

Controller at once. When Panel Lock is

on, the TV Controller does not operate.

Boot Logo

Displays the Samsung logo when the TV is turned on.

Anynet+ (HDMI-CEC)

Menu → System → Anynet+ (HDMI-CEC)

Allows you to control all connected

Samsung devices that support anynet+

with your Samsung TV's remote.

For details on set up options, refer to the "Anynet+ (HDMI-CEC)" instructions.

DivX® Video On Demand

Menu → System → DivX® Video On

Demand

Shows the registration code authorized for the TV. If you connect to the DivX web site and register with 10-digit

registration code, you can download the VOD activation file. Once you play it using Media Play, the registration is completed.

Programmer information on DivX(R)

VOD, visit http://vod.divx.com.

VOD, visit http://vod.divx.com.

Programmer information on DivX(R)

VOD, visit http://vod.divx.com.

VOD, visit http://vod.div

Common Interface

Menu → System → Common Interface

 CI Menu: This enables the user to select from the CAM-provided menu. Select the CI Menu based on the menu PC Card.

- Application Info: View information
 on the CAM inserted into the CI slot
 and on the "CI or CI+ CARD" which is
 inserted into the CAM. You can install
 the CAM anytime whether the TV is on
 or off.
 - 1. Purchase a CI CAM module at your nearest dealer or by phone.
 - 2. Firmly insert the "CI or CI+ CARD"

into the CAM in the direction of the arrow.

- 3. Insert the CAM with the "CI or CI+ CARD" into the common interface slot, in the direction of the arrow so that it aligns parallel with the slot.
- **4.** Check if you can see a picture on a scrambled signal channel.

CAM video transcoding

Menu → System → CAM video transcoding

You can configure the setting to transcode the video codec from the CAM automatically.

Turn it Off if you do not want to use it.

You must use a CAM that supports transcoding the video codec.

Support Menu

e-Manual

Menu → Support → e-Manual

The e-Manual is built into your TV.

Open the e-Manual to learn how to use your TV are many features.

For the detailed information about the e-Manual Screen, refer to "How to view the e-Manual" in the User's Manual.

Self Diagnosis

Menu → Support → Self Diagnosis

Picture Test

Use to check for picture problems,

Picture Test displays a high definition

picture that you can examine for flaws

or faults.

Yes: Select Yes if the test picture does not appear or there is noise or distortion in the test picture. There

may be a problem with the TV. Contact Samsung's Call Centre for assistance.

No: Select No if the test picture

displays properly. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.

Sound Test

Use the built-in melody to check for sound problems.

- If you hear no sound from the TV's speakers, before performing the sound test, make sure Speaker Select is set to TV Speaker in the Sound menu, and then try the speakers again.
- You will hear the melody during the test even if you have set Speaker
 Select to External Speaker or have muted the sound.

Yes: Select Yes if you can hear sound

from only one speaker or from neither speaker during the sound test. There may be a problem with the TV. Contact Samsung's Call Centre for assistance.

No: Select No if you can hear sound from the speakers. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.

Signal Information

(Digital channels only)

The reception quality of over-theair HD channels is either perfect or the channels are unavailable. Signal Information displays HD channel signal strength so you can adjust your aerial to increase signal strength and receive HD channels.

Reset

Reset all setting to factory defaults except for your network settings.

To reset your TV to its default settings, follow these steps:

- Go to the Reset menu. (Support →
 Self Diagnosis → Reset)
- 2. The PIN input screen appears. Enter the four digit security PIN using your remote.
 - ☑ If you have not changed the PIN, enter the default PIN, 0-0-0-0.

 You can change the PIN using the Change PIN option. (System →)

Security → Change PIN)

- 3. When done, the PIN screen disappear.

 The message "All the settings will return to factory defaults," appears.
- 4. Select Yes. All settings are reset.

 The TV will turn off and on again automatically. The Setup screen appears. For more information about Setup, see the paper user manual.
- Troubleshooting

If your TV seems to be having a

problem, access the troubleshooting guide for a solution.

Software Update

Menu → Support → Software Update

The Software Update menu lets you upgrade your TV's software to the latest version.

Current Version: This is the software version already installed in the TV.

Upgrading to the Latest Version you can upgrade in five ways:

- By USB
- Online
- By Channel
- Alternative Software
- Standby Mode Upgrade

The five methods are explained in the following pages.

Be careful not to turn off the power until the upgrade is complete. The TV will turn off and on automatically after completing the software upgrade. When you upgrade software, all video and audio settings you have made will return to their default settings. We advise you to write down your settings so that you can easily reset them after the upgrade,

By USB

To upgrade the By USB, follow these

steps:

- 1. Visit www.samsung.com.
- 2. Click Support at the top of the page.
- 3. On the Support page, enter your model number in the Find Your Product field, and then press Enter or click Find Product.
 - 4. Under Downloads on the left side, click Get downloads. The Download Centre screen appears.
- 5. Click Firmware on the left side of the

page.

- 6. On the Firmware tab, click the file icon on the right, and then click Save File on the pop-up that appears.
- 7. Unzip the downloaded file. A folder with the same name as the file is created.
- 8. Copy the folder to a USB drive.
 - 9. Turn on the TV, and then insert the USB drive into the USB port of the TV.

10. In the TV's menu, go to Support → Software Upgrade.

11. Select the By USB.

Please be careful not to remove the USB drive until the upgrade is complete.

Online

The Online function lets you download the upgrade software directly from the Internet into your TV and then upgrade the software in one operation. To use

Online, you must have configured your TV to connect to your network and the TV must be connected to the Internet.

See the "Setting up the Network" instructions.

To upgrade using the Online, follow these steps:

- 1. Select the Online. The Connecting to Server message appears.
- 2. If there is a download available,

- the Download popup appears with a progress bar and the download starts.
- 3. When the download is complete, the Upgrade Query screen appears with three choices: Upgrade Now, Upgrade Later, or Don't Upgrade.
 - If you select Upgrade Now, the TV upgrades the software, turns off, and then turns on automatically.
 - If you do not make a selection

in one minute or select Upgrade

Later, the TV stores the new

upgrade software. You can

upgrade the software later using

the Alternative Software function.

- If you select Don't Upgrade, the
 TV cancels the upgrade.
- By Channel

Upgrade the software using the broadcasting signal.

If the function is selected during

the software transmission period, software will be automatically searched and downloaded.

The time required to download the software is determined by the signal status.

Alternative Software

The Alternative Software option
lets you upgrade using a file the TV
downloaded earlier, but you decided
not to install immediately, or a file

downloaded by the TV in Standby

Mode (See Standby Mode Upgrade in
the next section).

To upgrade using Alternative Software, follow these steps:

- 1. If upgrade software has been downloaded, you will see the software version number to the right of Alternative Software.
- 2. Select Alternative Software.

- 3. The TV displays a message asking if you want to upgrade. Select Yes. The TV begins the upgrade.
- TV turns off automatically, and then turns on.

4. When the upgrade is complete, the

Standby Mode Upgrade

You can set the Standby Mode Upgrade function so that the TV downloads new upgrade software when it is in Standby mode.

In Standby mode, the TV is off, but its Internet connection is active. This allows the TV to download upgrade software automatically, when you are not using it. Because the TV is turned on internally, the screen may glow slightly. This phenomenon may continue for more than 1 hour until the software download is complete.

To set Standby Mode Upgrade, follow

these steps:

- 1. Select the Standby Mode Upgrade.
- 2. Select Off, 1 hour later, 2 hours later, 00:00, 02:00, 12:00 or 14:00.
 - Off: If you select Off, the TV will notify you with a pop up message when new upgrade software is available.
 - 1 hour later / 2 hours later / 00:00
 / 02:00 / 12:00 / 14:00: The TV
 will automatically download new

upgrade software when it is in Standby mode with the power off.

To use the Standby Mode Upgrade function, your TV must be connected to the Internet.

Contact Samsung

Menu → Support → Contact Samsung

View this information when your TV does not work properly or when you want to upgrade the software. You

can find information regarding our call centres and how to download products and software.

Remote Management

Menu → Support → Remote Management

Remote Management lets our Call

Samsung Product remotely to

Centre access and control your

troubleshoot a problem. Use Remote

Management only when you have a

problem, and contact our Call Centre first, before you activate Remote Management.

You can find the current number of our Call Centre on the Support page at www.samsung.com under Contact support.

Smart Hub

Menu → Support → Smart Hub

Smart Hub lets you connect to the

Internet and enjoy a variety of Internet and multimedia contents. For more information on how to use the Smart Hub, see "Smart Hub" in the e-Manual.

Using the 3D function

for LED 4500 - 5800 Series: This function is not supported.

<u>3D</u>

Menu → Picture → 3D

This exciting new feature enables you to view 3D content. To fully enjoy this feature, you must need a pair of Samsung 3D Active Glasses to view 3D video.

FULL HD 3D support is determined by the quality of the content.

IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D PICTURES.

Read and understand the following safety information before using the TV's 3D function.

△ Warning

 Some viewers may experience discomfort while viewing 3D TV such as dizziness, nausea and headaches.

- If you experience any such symptom, stop viewing 3D TV; remove the 3D Active Glasses and rest.
- Watching 3D images for an extended period of time may cause eye strain.
 If you feel eye strain, stop viewing
 - 3D TV; remove your 3D Active
 Glasses and rest.
- A responsible adult should frequently check on children who are using the 3D function. If there are any reports

- of tired eyes, headaches, dizziness, or nausea, have the child stop viewing 3D TV and rest.
- Do not use the 3D Active Glasses for other purposes (such as general eyeglasses, sunglasses, protective goggles, etc.)
 - Do not use the 3D function or 3D
 Active Glasses while walking or moving around. If you use the 3D function or 3D Active Glasses while

walking or moving around you can injure yourself by running into objects, tripping, or falling.

• 3D Mode

Select the 3D input format.

If you want to experience the 3D effect fully, put the 3D Active Glasses on first, and then select the 3D Mode from the list below that provides the best 3D viewing experience.

Turns the 3D function off.

- Changes a 2D image to 3D.
- Displays two images next to each other.
- : Displays one image above another.
- The 3D Mode may differ depending on the input signal.
- Some file formats may not support
- 3D Perspective

Adjusts overall 3D perspective of onscreen image. Depth

Adjusts overall depth.

L/R Change

Swaps the left and right pictures.

• 3D → 2D

Displays the image for the left eye only.

This function is deactivated when 3D Mode set to or or.

• 3D Optimisation for LED TV

Automatically adjusts the picture overall to provide an optimal 3D effect.

Support resolution (16:9 only)

HDMI

| 3D Format | Resolution | Frequency (Hz) |
|--|--------------|--|
| * * / * | 1280 x 720p | 50 / 59.94 / 60 Hz |
| | 1920 x 1080i | 50 / 59.94 / 60 Hz |
| ··········/ ·························· | 1920 x 1080p | 23.98 / 24 / 25 / 29.97 / 30 / 50 / 59.94 / 60 Hz |
| Frame Packing | 1280 x 720p | 50 / 59 _. 94 / 60 Hz |
| | 1920 x 1080i | 50 / 59 _. 94 / 60 Hz |
| | 1920 x 1080p | 23.98 / 24 / 25 / 29.97 / 30 Hz |

Component

| Resolution | Frequency (Hz) |
|--------------|---|
| 1280 x 720p | 50 / 59.94 / 60 Hz |
| 1920 x 1080i | 50 / 59.94 / 60 Hz |
| 1920 x 1080p | 23.98 / 24 / 25 / 29.97 / 30 / 50 / 59.94 / 60 Hz |

DTV

| Resolution | Frequency (Hz) |
|--------------|--------------------|
| 1280 x 720p | 50 / 59.94 / 60 Hz |
| 1920 x 1080i | 50 / 59.94 / 60 Hz |
| 1920 x 1080P | 25 Hz |

Videos / Photos (In AllShare Play)

Refer to "Supported Subtitle and AllShare Play file formats" in the

Other Information section.

Resolution supported for HDMI PC mode

The optimal resolution for 3D in the HDMI PC mode is 1920 x 1080.

If the input resolution is not 1920 x 1080, the TV may not display images properly in 3D display or full screen mode.

How to watch the 3D images

Some 3D modes may not be available depending on the format of the image source.

To watch in 3D, you must wear 3D Active Glasses and turn the glasses on by pressing the power button.

1. Go to the 3D screen. (Picture \rightarrow 3D)

2. Select the 3D Mode, The 3D Mode

screen appears.

3. Select the 3D Mode option for the image you want to view. The screen

goes blank for a moment, and then reappears in the 3D mode you selected.

Read These Notes Before Using the 3D Function

- The 3D Mode is set to Off
 automatically when you access
 Smart Hub function.
 - The 3D Mode is set to its memorised configuration value automatically

Some Picture functions are disabled

when you change the input source.

in 3D mode.

PIP is not supported in 3D mode.

- 3D Active Glasses from Samsung's previous IR type 3D products and 3D glass from other manufacturers are not supported.
- When the TV is initially powered on, it may take some time until the 3D display is optimized.

- The 3D Active Glasses may not work properly if there is any other 3D product or electronic device turned on near the glasses or TV. If there is a problem, keep other electronic
- devices as far away as possible from the 3D Active Glasses.
 Be sure to stay within the viewing angle and optimum TV viewing distance when watching 3D pictures.

Otherwise, you may not be able to

- see 3D effects properly.
- The ideal 3D viewing distance is three times or more the height of the screen. For example, if your screen is two feet high, you should sit at least six feet from the screen. We recommend sitting so that your eyes are level with the screen.

Smart Hub

Menu → Support → Smart Hub

Using Smart Hub, you can stream movies, videos, and music from the Internet, access various for pay or free-of-charge applications and view them on your TV.

Application content includes news, sports, weather forecasts, stock market quotes, maps, photos, and games.

You can also start this function by

pressing the button on the remote control.

Notice

- Samsung Electronics takes no legal responsibility for any interruption of the Smart Hub service caused by the service provider for any reason.
 - Application services may be provided in English only and the contents available may vary, depending on

your area.

- For more information about a Smart
 Hub service, visit the web site of the
 applicable service provider.
- The Smart Hub service downloads and processes data via the Internet so that you can enjoy the Internet contents on your TV screen. If the Internet connection is unstable, the service may be delayed or interrupted, Furthermore, the

player may turn off automatically in response to conditions on the Internet. If this occurs, check the Internet connection and try again.

- The services provided are subject to change by the Smart Hub service provider without notice.
- The Smart Hub service contents may differ depending on the player's firmware version.

To start Smart Hub for the first time, follow these steps:

1. Press the 🖯 button.

remote.

- 2. The Smart Hub screen appears. In a few cases, the Country screen appears immediately.
- 3. If the Country screen has appeared, select your country using your
 - Some applications are available only in certain countries.

- 4. The General Disclaimer screen appears. Select Agree.
 - Screens can take a few seconds to appear.
- 5. The Samsung Service Privacy policy screen appears. Select Agree.
- 6. The Update Pop-up appears. Select OK.
- 7. The Service Update screen appears and installs a number of services and applications. When done, it closes.

The Smart Hub screen displays
the downloaded applications and
services. This may take some time.

Smart Hub may close momentarily during the installation process.

- A number of screens may appear after installation. You can close them or let them close on their own.
- 8. To start an application, select an application using your remote.

Using the Keypads and Keyboards

A number of Smart Hub applications display a numeric keypad or a QWERTY keyboard so you can enter account names, passwords, and other data. In most applications, you can toggle between the numeric keypad and the QWERTY keyboard by selecting the B button.

With the IME virtual keyboard, only

those characters and symbols used in a standard English keyboard are allowed for the password. If you use a physical keyboard, the virtual keyboard will be disabled. The input language of the physical keyboard can be configured in the OSD settings of the keyboard language.

Using the Numeric Keypad

When the keypad is displayed, you

can use your remote to enter letters in lower or upper case, numbers, punctuation, and symbols.

There are two ways to enter characters, in the ABC mode and in the XT9 mode.

Method 1: Using the keypad of ABC type.

Example: Inputting "105Chang".

1. Select the TTX/MIX key three times using your remote to change the

- input mode from lower case to numbers.
- 2. Select 1, 0 and 5 in numerical order on your remote.
- 3. Select the TTX/MIX key three times using your remote to change the input mode from numbers to upper case.
 - 4. Select 2 three times using your remote to input C.
- 5. Input the rest of "Chang" using your

remote in the same way. When done, select OK.

Method 2: Using the Keypad of XT9 type.

To change to XT9 mode, follow these steps:

A. With the Numerical keypad displayed, open the Tools menu using your remote.

B. On the Tools menu, select XT9 text

input.

C. Select On, and then select OK.

Example: Inputting "105Chang".

- 1. Select the TTX/MIX key three times using your remote to change the input mode from lower case to numbers.
- 2. Select 1, 0 and 5 in numerical order on your remote.
- 3. Select the TTX/MIX key three times using your remote to change

the input mode from numbers to capitalized case.

4. Select in sequence: 2, 4, 2, 6, 4. A

thin window appears at the top of the screen displaying a list of words you can enter.

Using the QWERTY Keypad

If you have a USB or Bluetooth keyboard attached to the TV, and the screen is displaying the QWERTY

keyboard, you can use the attached keyboard just like a regular keyboard.

Type a character and the character appears on the screen.

If you don't have a USB or Bluetooth keyboard attached and the QWERTY keyboard is displayed, use your remote to highlight and then select letters, numbers, and symbols on the keyboard one at a time.

Select the Caps or Shift button to

display Capital letters. Select again to re-display lower case.

Select the 1
 button to display symbols and icons. Select again to re-display letters.

☑ If XT9 text input is On, words will
appear in a ribbon at the top of the
page. Select the □ button to select a
word in the ribbon.

Using the coloured and function

buttons with the QWERTY Keypad

A Delete All

Delete all inputted character,

B Numeric / QWERTY

Toggles the keypad mode between

Numeric keypad mode and QWERTY

mode,

When the keypad is set to

QWERTY mode, you can input

characters using a USB or

Bluetooth keyboard connected on

the TV.

C Space

You can enter a space character.

• 🖈 Settings

Displays the options menu.

Input Language: Select an input language

language.

XT9 text input: Turns the XT9 word function on or off, Available in both Numeric Keypad and QWERTY mode

when you use the remote or a mouse

to select and enter characters.

• **Enter**

Enter the selected character,

• 5 Return

Return to the previous menu.

■ Prev Page

Display the previous set of symbols/icons.

Next Page

Display the next set of symbols/icons.

Creating an Account

To establish your own, exclusive configuration of Smart Hub, create your own Samsung Account.

- You must use an e-mail address as an ID.
- You can register up to 10 User Accounts.
- You do not need an account to use Smart Hub.

To create an account, follow these steps:

1. On the Smart Hub screen, select A using your remote. The Login screen

- appears.
- 2. Select Create Account using your remote. The Create Account screen appears.
- 3. Select Samsung Account. An entry screen and keypad appear.
- 4. Use the keypad to enter your e-mail address. This will serve as your ID.
 - If you have a Bluetooth or USB keyboard attached to the TV, use the keyboard to enter the e-mail

- address. Then, in Steps 6 through 10, use the keyboard to enter the required password. Note that after you type in the e-mail address and password, you will need to use your remote to continue.
- 5. When done, select OK. The Login screen reappears.
- 6. Select Password. The Password screen and a keypad appear.
- 7. Use the keypad to enter a password.

The password can be any combination of letters, numbers, and symbols.

Select A using your remote to display or hide the password as you enter it.

- 8. When done, select OK.
- 9. Select Confirm Password, The Password screen and a keypad reappear.
- 10. Repeat Steps 7 and 8.

- 11. When done, select Create Account.

 The Confirmation window appears.
- 12. Select OK. The Continue to register service ID window appears.
- 13. Select OK.
- If you don't have existing provider accounts or do not want to register existing accounts at this time, select Cancel. You can also let the window close on its own in about a minute.
- 14. The Register service account window

appears.

If you have existing accounts with any of the listed providers, you can associate the provider account and the provider account password with your Samsung Account, Registration makes it easier to access the provider' s web site. For registration instructions, go to Step 2 in Account Manager under Settings

in the "Configuring Smart Hub with the Settings Menu" section of this manual.

Customizing the Home Screen

A Login / Logout

To log in to your Samsung Account, follow these steps:

- 1. With the Smart Hub main screen displayed on your TV, select A using your remote. The Login screen appears.
- 2. Select the next to the Samsung

 Account entry filed. A drop down list

appears.

Account name manually, select the Samsung Account entry field.

A keypad screen appears. Input your Samsung Account manually.

When done, go to Step 4.

- 3. Select your ID from the list that appears. The Login screen reappears.
- 4. Select Password. The Password

window and a keypad appear.

- **5.** Enter your password using your remote. When done, select OK.
- If you want Smart Hub to enter your password automatically, select Remember my password, after you have entered your password. A 🗸 mark appears, Smart Hub will now enter your password automatically when you select or enter your ID.
- If you want to log in to Smart Hub

automatically when Smart Hub function starts, select Sign me in automatically. A

mark appears.

If you forget your Samsung account password, you can reset it. Select Reset password. A popup message appears, Select OK, Smart Hub will send a guide to your e-mail address that explains how to reset your password.

B Wallpaper

You can change the background image on the Smart Hub home screen.

C Account Manager

Lets you register your service provider accounts, delete or deactivate your Samsung account. For more information about Account Manager, see "Configuring the Smart Hub with the Settings Menu" in this section.

Available only when you have logged in to Smart Hub.

Using the Tools menu with Smart Hub

- Depending on the icons and folders displayed on the Smart Hub screen, some of the functions listed below may not appear.
 - Login / Logout
 Log in or log out of your Samsung
 Account.
 - Wallpaper

You can change the background image

on the Smart Hub home screen.

Move

The Move function lets you change the screen position of an application or a folder,

To use the Move function, follow these steps:

 Select an application icon or a folder, and then open the Tools menu using your remote.

- 2. Select the Move. A position change screen appears.
- 3. Move the icon using your remote.

 When the icon is in the position of your choice, select the icon. The application icon moves to its new location.
- Move to Folder

The Move to Folder function lets you move an application to a folder.

To use the Move to Folder function, follow these steps:

- 1. Select an application, and then open the Tools menu using your remote.
- 2. Select the Move to Folder. The Move to Folder window opens.
- 3. Select a folder using your remote.

 A move finished message appears.

 Select OK, The message window closes. The application has been moved to the folder.

If you select an application in a folder, you can use the Move to Folder to move the application to the Smart Hub screen.

To access an application in a Folder

- 1. On the Smart Hub screen, select a folder. The folder opens.
- 2. Select an application you want to execute. The application service starts.

Delete

The Delete function lets you delete applications from Smart Hub.

To use the Delete function, follow these steps:

- 1. Select an application, and then open the Tools menu using your remote.
- 2. Select the Delete. The message Do you want to delete the selected item(s)? appears.

- 3. Select OK. The application is deleted.
- New Folder

The New Folder function lets you create and name new folders. You can move applications into the folders you have created.

To use the New Folder function, follow these steps:

1. Open the Tools menu using your remote.

- 2. Select the New Folder in the menu.

 The New Folder pop-up and a keyboard screen appear.
- 3. Using the keyboard and your remote, enter a name for the folder.
- 4. When done, select OK. The New Folder screen closes and the New Folder appears on the Smart Hub screen.
- Rename Folder

The Rename Folder function lets you

rename folders.

To use the Rename Folder function, follow these steps:

- 1. Select a folder, and then open the Tools menu using your remote.
- 2. Select the Rename Folder. The Rename Folder window and a keyboard screen appear.
- 3. Enter a new name using your remote or edit the old name.

4. When done, select OK. The Rename Folder window closes and the new or revised name appears below the folder.

Lock

The Lock function lets you lock some applications in Smart Hub so they cannot be opened without entering the password.

To use the Lock function, follow these

steps:

- 1. Select an application, and then open the Tools menu using your remote.
- 2. Select Lock. The Security window appears.
- 3. Enter your security PIN using the remote. If you have not created a PIN, enter "0-0-0-0".
- **4.** A confirmation message screen appears. Select OK. The message screen closes and a lock symbol

appears to left of the application.

Unlock

To use the Unlock function, follow these steps:

- Select a locked application, and then open the Tools menu using your remote.
- 2. Select Unlock. The Security window appears.
- 3. Enter your security PIN using the

remote. If you have not created a PIN, enter "0-0-0-0".

4. A confirmation message screen appears. Select OK. The message screen closes and the lock symbol to left of the application disappears.

Information

Depending on application, you can view the detailed information about the selected application.

You can also lock or unlock

the application on the Detailed Information screen.

Configuring Smart Hub with the Settings Menu

The Settings menu gives you access to Account Manager, Service Manager, Reset, and About Smart Hub functions. To use these three functions, you must be logged into your Samsung Smart Hub account.

To access the Settings menu, and then select a menu item, follow these steps:

- 1. Open the Tools menu using your remote.
- 2. Select Settings. The Settings window appears.
- 3. Select a menu item using your remote.
- Account Manager

The Account Manager menu contains

functions that let you register your service provider accounts and delete or deactivate your Samsung Account.

Link to other accounts: If you have

existing accounts with any of the providers listed by the Link to other accounts function, you can associate the provider account and the provider account password with your Samsung Account. If you associate the account, you will be able to log onto the

account through Smart Hub easily, without entering your account name or password.

Before register your site account, corresponding application should be installed in the Smart Hub.

To use the Link to other accounts function, follow these steps:

1. In the Account Manager menu, select the Link to other accounts. The Link

- to other accounts window appears.
- 2. Select an application you want to associate with your Samsung Account.
- 3. In the pop-up that appears, select Register.
- 4. In the Link to other accounts entry screen, enter your site ID and password using your remote. When done, select OK.
 - This is the ID and password you

- normally use to access your account on this application.
- 5. If you have entered the ID and password correctly, the Registered successfully, message appears.
- 6. If want to add another service application, and then repeat Steps 2 through 4 to associate another service application.
- 7. When done, select OK.

Remove from TV account list: Cancels all the currently registered Service Accounts that appear on the Register service account screen.

Samsung Account and deletes it and all your account settings entirely from the Smart Hub.

Deactivate account: Deactivates your

Service Manager

Auto Ticker: You can set Auto Ticker to come on when the TV powers.

- The Ticker application provides useful News, Weather, and Stock Market information. Before you can set the Auto Ticker on, you must download the Ticker application into Smart Hub.
- Depending on your country, the Ticker application may have a different service or not be supported.

Push Notification Settings: When on, Push Notification that displays a

notification message when an event takes place in an application installed on Smart Hub. The TV will display the notification message and allow you to view details of the event even while you are viewing TV.

Reset

The Reset function initializes all downloaded applications, erases all user accounts and settings from the TV, and resets all Smart Hub settings to the

factory default settings. It then restarts

Smart Hub as if it were starting for the
first time.

Your account, however, remains on the Smart Hub server. To log into your account, enter your ID and password on the Login screen.

To use the Reset function, follow these steps:

1. In the Settings menu, select Reset.

- The Reset screen appears.
- 2. Enter security PIN using your remote.
- 3. After a few moments, Smart Hub automatically resets. The screen may go black, and then Smart Hub reappears. In a few moments, it starts

4. To complete the re-initialization, go to Step 2 in "To start Smart Hub for the first time, follow these steps:" section of this manual.

the re-initialization procedure.

About Smart Hub

The About Smart Hub menu contains functions that display information about Smart Hub.

More: Lists information about Smart
Hub including version number, the
number of services installed, memory
usage, and the unique product ID.

Terms of Service Agreement: Display the Terms of Service Agreement.

Using Samsung Apps

Samsung Apps

Depending on the version of an application, the instructions may differ. In this case, please follow the instructions on the screen.

Samsung Apps is a store from which you can download applications to use on Samsung TV/AV equipment.

You can enjoy a variety of contents such as videos, music, photos, games, useful information etc. using the downloaded applications.

New applications are added regularly.

Using the coloured and function buttons with Samsung Apps

A Login / Logout

Log in to or log out of your Samsung Account.

• B Filter by Price

To toggle the view between All, Paid and Free.

• C Sort

To sort the applications by Recommended, Name, Date or Downloaded.

You can sort all categories except
Most Popular.

D View Mode

Each time you select **D** using your

remote, the View Mode toggles between basic mode and thumbnail mode.

Move to next or previous page.

I Tools
 Displays the option menu.

D Return
 Moves to previous menu.

Using Samsung Apps by category

The following categories are available:

Most Popular

Displays the most popular applications for users.

Video

Includes apps that provide video media such as movies, TV shows, and short length videos.

Game

Includes various game apps such as sudoku and chess.

Sports

Includes apps that provide sports content such as game results, images, and short length video.

Lifestyle

Includes apps that provide lifestyle media services such as music, personal photo management tools, and social networking such as Facebook and Twitter.

Information

Includes apps that provide information content such as news, financial information, stock quotes, weather, etc.

Education

Includes apps that provide education content such as story books, dictionary, VOD (Video on Demand) for kids etc.

My Apps

My Apps provides information about your available App cash coupon and information about the apps you have

already purchased or installed on your TV.

You can purchase App cash that you can use to buy applications through ty.samsungapps.com.

Downloaded apps displays the list of free apps that are installed on the TV.

Help

If you have questions about Samsung Apps, check this section first.

To search for an application in Samsung Apps, follow these steps:

- 1. On the Samsung Apps screen, select Search Samsung Apps. The Search window and keyboard appears.
- 2. Enter a keyword using your remote.

 The keyword should be part of the name of an application. For example, enter f-a-c-e to search for Facebook.
- 3. When done, select OK at the bottom

of the keyboard.

4. Wait until the search result screen displays. After Samsung Apps displays the results, you can select an application you want in the search result screen.

You can find a keyword in the search history If you have searched using that keyword before.

If you have a keyboard and/or a mouse connected to your TV, you can use the mouse to select the Search Samsung Apps field and the keyboard to type in the keyword.

Search

 \bigcirc \rightarrow Search

(May not be available, depending on your country.)

Easily search for and access content from diverse sources (e.g. applications, Your Video, AllShare Play)

1. On the Smart Hub, select Search at the top of the screen or press the Search button on your remote.

2. If you want to input a search term

directly, select Enter search keyword, entry field A keypad screen appears. Enter the search term using your remote.

If you want to search by category,

select a category below the field using your remote.

Using the Search function by category

Your Video

Personalize your movie-watching with

a customized video on demand (VOD) recommendation service.

Most searched

in the key word list. The key word list displays words you frequently use for searches.

You can search by selecting a key word

Top application

services in the application list. The application list displays apps that users

You can search applications and

download frequently.

Search history

Lets you delete previously used keywords from the search history list.

Also, If you select Delete All, you can delete all your search history.

Using the coloured and function buttons with Search

B Refresh

Refresh the Search function.

• \$\int \text{Tools}

You can set general parameters for the Search function or delete the search history.

• 5 Return

Return to the previous menu.

Using the Tools menu with Search

General Settings

Keyword recommendation: Turns the Keyword Recommendation function on or off.

Search area: Sets a search scope. The default is allowed all application.

To customize a search area, follow these steps:

- 1. On the Search screen, open the Tools menu using your remote.
- 2. Select General Settings.
- 3. Select an application in the Search area. A ✓ mark disappears from the

check box.

When you remove the
 ✓ mark,
 you remove that application from
 the search scope. Only checked
 applications are included.

- 4. When done, press the RETURN'S button.
- Search history

Lets you delete previously used keywords from the the search history list. Also, If you select Delete All, you

can delete all your search history.

To delete a search history keyword, follow these steps:

- 1. On the Search screen, open the Tools menu using your remote.
- 2. Select Search history.
- 3. Select a keyword in the Keyword list.
- **4.** Press the button. The keyword disappears from the list.

Your Video



Depending on the version of an application, the instructions may differ. In this case, please follow the

instructions on the screen.

(May not be available, depending on your country.)

Using this service from Smart Hub, you

can get video recommendation, search for movies from multiple providers, and

stream or purchase movies. To stream or purchase movies, you must have the vendors app installed in Smart Hub.

Depending on the vendor, you may also need a vendor account.

Using the Your Video Search Tab

- 1. On the Smart Hub screen, select Your Video.
 - 2. If this is the first time you have accessed Your Video, the Privacy

Notice appears. Read the notice, and then select Agree.

- 3. When the Your Video screen appears, it displays a list of recommended movies with Recommended at the top of the screen highlighted. Move the highlight from the top of the screen down to the first movie, and then scroll the movies to the right to view all the movies in the list.
 - 4. To see additional lists of movies,

- move the highlight back to the top of the screen. You can select in addition to Recommended New releases, Top 20 films, Top 20 TV shows, and From friends.
- 5. To select a movie, highlight it, and then press the displayed button. The movie's Data screen appears. On this screen you can view Basic Information, Director/Cast, Photos, Awards, and Related Movies.

- 6. To watch the movie, select Watch. A list of online vendors that have the movie available for rent or purchase appears. Renting usually means you can stream the movie for a certain number of hours or days.
 - To go to a vendor's web site,
 you must have that vendor's app
 installed in Smart Hub. To install
 apps, access Samsung Apps on
 the main Smart Hub screen.

- 7. You can search for a particular movie. To search, select with your remote. The Search Entry screen and a keyboard appear.
- 8. Enter the name of the movie into the Search field. As you enter characters, the Search function will display suggestions below. You can either continue entering characters, or, if your movie appears, move the highlight down and select it. The

movie's Data screen appears (See Steps 5 and 6).

If you are entering using a keyboard, you can either press Enter or you can move the highlight down using the down arrow key.

Using the Function and Coloured Buttons on the Search Tab

A Login / Logout

To login to your Smart Hub account or log out.

C Search

To search for movies or videos (Steps 7 and 8).

My Page

Displays your My Video Bookmarks,
Likes/Shares (if you have a Facebook
or Twitter account registered in Smart
Hub), and lets you establish certain
Preferences.

• 5 Return

Return to the previous menu.

Using Function and Coloured Buttons on a Movie's Data Page

- A Login / Logout
- To log in to your Smart Hub account or log out.
- B Bookmark / Unbookmark

To bookmark a movie or video or to remove the bookmark. When you

left side of the screen. Bookmarked movies or videos are listed on My Page.

bookmark, Bookmark appears on the

G Search

7 and 8).

• D Home

To search for movies or videos (Steps

To go to the My Video Home screen.

My Page

Displays your My Video Bookmarks,

Likes/Shares (if you have a Facebook or Twitter account registered in Smart Hub), and lets you establish certain Preferences.

• 'S Return

Return to the previous page or menu.

Using the Your Video Genre Tab

When you start Your Video, the Your Video screen displays the Search tab.
You can also display the Genres tab

- which sorts movies and videos by genre.
- 1. On the Your Video Search tab, move the highlight to the bottom of the screen, and then select Genres. The Genres tab appears.
- 2. On the Genres tab, select either
 Movies or TV show on the left side
 of the screen.
- 3. On the right side of the screen, select the genre (Action/adventure,

Animated, etc.). Your Video displays the Genre Movie or TV Show List screen with the movies or TV shows in the genre you selected.

4. Highlight a movie or TV show and then select it. The Data screen for that movie or TV show appears.

Using the Function and Coloured
Buttons on a Genre Movie or TV Show
List Screen

A Login / Logout

To log in to your Smart Hub account or log out.

B Genres

To re-display the Genres tab.

• C Search

To search for movies or videos.

• D Sort

To sort movies or videos by Ratings, Year, or Title.

My Page

Likes/Shares (if you have a Facebook or Twitter account registered in Smart Hub), and lets you establish certain Preferences.

• D Return

Displays your My Video Bookmarks,

Return to the previous page or menu.

Using My Page

My Page displays your My Video Bookmarks, Likes/Shares (if you

have a Facebook or Twitter account registered in Smart Hub), and lets you establish certain Preferences When the My Page icon is displayed at the bottom of a screen, select or press **归.** My Page appears displaying your bookmarked movies and videos. Select a bookmarked movie or video, access your Likes/Shares, or view or change your Preferences.

Using the Function and Coloured Buttons on the My Video Screen

A Login / Logout

To log in to your Smart Hub account or log out.

C Search

To search for movies or videos.

D Home

To go to the My Video Home screen.

ら Return

Return to the previous page or menu.

Family Story

- **⋈** → Family Story
- Depending on the version of an application, the instructions may differ. In this case, please follow the instructions on the screen.
 - share photos, messages, and events with your family.

Family Story feature allows you to

Create Group

If you are starting Family Story for

the first time, you can create a family group and invite members to join.

Invite Members

the family members who you want to share your family's photos and events with to join.

After creating a group, you can invite

Join Group

If you were invited to join a family group by a family member, you can select Join Group to enjoy Family Story

services.

You must be logged into your Smart Hub account to create a family group, access your group, or use Family Story.

To create a family group, follow these steps:

1. On the Smart Hub screen, select Family Story. The Family Story screen appears.

- 2. Select Create Group. The Create and invite pop-up appears.
- 3. Select OK. The Family Story agreement appears. Read the agreement, and then select Accept.
 - It is required to agree with the terms prior to using Family Story.
- 4. Enter a Group Name, Your Name, and Your Phone Number without dashes using your remote.
 - If you want to add a group image,

select an image box. (An external device containing photos must be connected to your TV via USB.)

Fields marked with an asterisk
 are required.

5. When done, select Done. The group creation is completed.

If you want to invite members to your group, select Invite Members.
If you want to go your Family

Story, select Go to Family Story, If

you selected Invite Members, go to Step 4 in the procedure below.

To invite members to your Family Story group, follow these steps:

- 1. From the starting menu in Family
 Story, open the Tools menu using
 your remote, and then select Group
 Members. The Group Members
 screen appears.
- 2. Select Invite Members. The Invite

- pop-up appears.
- 3. Select OK. The Invite Members screen appears.
- 4. Select Select to enter message.. The keypad screen appears.
- 5. Enter message using your remote.

 When finished, select OK on the bottom of the keyboard, and then select Done.
- 6. Select Phone number or Samsung account ID. The keypad screen re-

appears.

7. Enter the prospective member's phone number or Samsung account ID using your remote. When finished, select OK on the bottom of the keyboard, and then, select Done.

If you want to add more prospective members, select
Add Member, and repeat Steps 4
through 7.

8. When finished adding members,

select Done. The Member Invitation

Completed screen appears.

9. If invited by phone number, 4-digit invite code will be generated and the code needs to be shared with the member, If invited by Samsung Account, the member will be notified about the invitation via e-mail. Select OK to finish.

To join a group using the received invite

code, follow these steps:

- 1. Start Family Story and accept the terms.
- 2. You will see a pop-up message asking about invitation type. If you were invited by phone number, please select Invite Code. If you were invited by Samsung account, please select Samsung Account.
 - 3. If joining by Samsung Account, a list of invitations from your family

- groups will be displayed. Select

 Accept to join. You can select Deny
 if you don't want to join the inviting
 group.
- 4. If joining by Invite Code, first enter your phone number using your remote. When done, select Done.
 Then you will see a list of invitations
- from your family groups, Select

 Accept to join, You can select Deny

 if you don't want to join the inviting

group. Enter the 4-digit invite code shared by your family member, and then select Done to finish.

5. Select OK, Joining your family group has been completed.

Creating an Album

You can upload pictures from a USB device and create a picture album which other group members can view and add to.

To create a picture album, follow these steps:

- 1. Attach a USB device containing the pictures you want to upload to the picture album to your TV.
- 2. Log into your Smart Hub account, and then start Family Story.
- 3. Highlight and select the "create album" icon on the left side of the Family Story screen or select

 B

4. Highlight and select Add on theAlbum tab. The File Browser screen

Create using your remote. The Create

5. Highlight and select the USB device.

The device opens, displaying either

appears.

6. If picture files are displayed, highlight and select each file you want to upload. A check appears on

folders or picture files.

each file.

7. If folders are displayed, highlight and select the folder that contains the pictures you want to upload. Then, select each file you want to upload. A check appears on each file.

Your can highlight and select the Select All button on the right side if you want to select all displayed pictures.

8. When finished, highlight and select

the OK button on the right side. The Create screen re-appears displaying some or all the photos you want to upload.

upload.

☑ To delete a photo from the

upload queue, select ☐ Tools.

In the Tools menu, select Delete

Photos, Either highlight and select

In the Tools menu, select Delete

Photos. Either highlight and select
individual photos or select Delete

All. When done, select the Delete
button on the bottom of the page.

A pop-up appears asking whether you want to delete the photos.

Select Yes.

- 9. Highlight and select the Done button on the bottom of the screen. The photos are uploaded, and then the Story of the Day screen appears, displaying the photos.
- 10. Select 'D Return. The Cover Story

 (Main Family Story) screen appears
 displaying the photos.

The Cover Story screen runs a continuous slide show of photos you uploaded. It also displays some of the photos on a "shelf" below the slide show area.

Deleting a Picture

To delete a picture, follow these steps:

1. On the Cover Story screen, highlight and select the strip of photos on the

- bottom left. The Story of the Day screen appears.
- 2. Highlight and select the photo you want to delete.
- 3. Select 7 Tools.
- 4. In the Tools menu, select Delete. A message appears asking if you want to delete the photo.
- 5. Select OK. The picture is deleted.

Editing a Picture

The Edit function lets you add a memo to a picture or add the picture to an event.

To edit a picture, follow these steps:

- 1. On the Cover Story screen, highlight and select the strip of photos on the bottom left. The Story of the Day screen appears.
- 2. Highlight and select the photo you want to edit.

- 3. Select 7 Tools.
- 4. In the Tools menu, select Edit. The Edit screen appears.
- 5. To add a memo, highlight and select the "enter Memo" field. The Enter Memo screen and keyboard appear.
- 6. To add the picture to an event, highlight and select Find event.

 The Events list screen appears. Use the left and right arrow buttons to change the month. Use the up and

down arrow buttons to select an event. Press Enter when done.

7. After you have added a memo or added the photo to an event, highlight and select Done on the bottom of the screen.

Creating a Memo

You can create a memo that all group members can see.

To create a memo, follow these steps:

- Log into your Smart Hub account, and then start Family Story.
- 2. Highlight and select the "create memo" display on the right side of the Family Story screen or select
 Create using your remote. The Create screen appears.
 - 3. On the Memos tab, highlight and select the "enter Memo" area. The Enter memo screen and keyboard

appear.

4. Use your remote to highlight and select letters. If you have a USB or Bluetooth keyboard attached to the TV, use the Keyboard to type in letters.

5. When done, select OK on the on screen keyboard, press the → button. If you are using a physical keyboard, press the Enter key on the key board. The Create screen re-

- appears displaying the memo.
 - To edit the memo, highlight and select the "enter Memo' area again. The Enter memo screen and key board re-appear.
- 6. Highlight and select the Done button on the bottom of the screen. The Story of the Day screen appears displaying the memo.
- 7. Select 5 Return to go back to the main Family Story screen.

Deleting a Memo

To delete a memo, follow these steps:

- 1. On the Cover Story screen, highlight and select the memos on the right side of the screen. The Story of the Day screen appears.
- 2. Highlight and select the memo you want to delete.
- 3. Select 🖅 Tools.

- 4. In the Tools menu, select Delete. A message appears asking if you want to delete the memo.
- 5. Select OK. The memo is deleted.

Editing a Memo

To edit a memo, follow these steps:

1. On the Cover Story screen, highlight and select the memos on the right side of the screen. The Story of the

- Day screen appears.
- 2. Highlight and select the memo you want to edit.
- 3. Select 🖈 Tools.
- 4. In the Tools menu, select Edit. The Edit screen appears.
- 5. Highlight and select the Edit field.

 The Memo screen and keyboard appears. Edit the memo, and then press Enter when done.
- 6. The Edit screen re-appears. Highlight

and select Done on the bottom of the screen.

Creating an Event

You can create a record of an event, such as a birthday party or a wedding, with pictures, that all group members can see. You can also create a record for a future event.

To create an event, follow these steps:

- Attach a USB device containing the pictures of the event that you want to upload to your Family Story.
- 2. Log into your Smart Hub account, and then start Family Story.
- 3. Highlight and select the "create event" display on the right side of the Family Story screen or select Create using your remote. The Create screen appears.
- 4. On the Event tab, highlight and select

the Event title field. The Event Title screen and keyboard appear.

- 5. Use your remote to highlight and select letters. If you have a USB or Bluetooth keyboard attached to the TV, use the keyboard to type in letters.
- 6. When done, select OK on the on screen keyboard, press the dutton. If you are using a physical keyboard, press don the keyboard.

- 7. Highlight and select Done on the Event Title screen with your remote.

 The Event Tab reappears.
- 8. User your remote to highlight and select the "Enter Description" field.

 The Enter Description screen and keyboard appear.
 - 9. Enter a description of the event the same way you entered the Event Title in Step 5. When done, close the Enter Description screen the

- same way you closed the Event Title screen in Steps 6 and 7.
- 10. Highlight and select the From field. The Time Settings screen appears. Use the up and down arrow buttons on your remote to change the values in each field. Use the left and right arrow buttons to move from field to field Press Enter when done
- 11. Highlight and select the to field. The Time Setting screen appears. Set the

- To time the same way you set the From time in Step 10.
- 12. To define the Event Type, highlight and select the Change button. The Event Type list appears.
- 13. Use the up and down arrow buttons on your remote to select an event type. When done, press the double. The Event Tab re-appears.
- 14. To add photos, highlight and select the Add button. The File Browser

- appears.
- 15. Highlight and select the USB device.
 The device opens, displaying either folders or picture files.
- 16. If picture files are displayed, highlight and select each file you want to upload. A check appears on each file.
 - 17. If folders are displayed, highlight and select the folder that contains the pictures you want to upload. Then,

select each file you want to upload.

A check appears on each file.

You can highlight and select the Select All button on the right side if you want to select all displayed pictures.

18. When finished, highlight and select the OK button on the right side. The Event Tab re-appears displaying some or all the photos you want to upload.

To delete a photo from the upload queue, select 7 Tools. In the Tools menu, select Delete Photos. Either highlight and select individual photos or select Delete All. When done, select the Delete button on the bottom of the page. A pop-up appears asking whether you want to delete the photos. Select Yes.

19. When done entering all information

and selecting all photos, highlight and select the Done button at the bottom of the Event Tab. Family Story uploads the photos you selected and then displays the Story of the Day screen.

20. Select S Return to go back to the main Family Story screen.

Deleting an Event

To delete an event, follow these steps:

- 1. On the Cover Story screen, highlight and select the events on the bottom right side of the screen. The Story of the Day screen appears.
- 2. Highlight and select the event you want to delete.
- 3. Select 7 Tools.
- 4. In the Tools menu, select Delete. A message appears asking if you want to delete the event.

5. Select OK. The event is deleted.

Editing an Event

To edit an event, follow these steps:

- 1. On the Cover Story screen, highlight and select the events on the bottom right side of the screen. The Story of the Day screen appears.
- 2. Highlight and select the event you want to edit.

- 3. Select \$\int \text{Tools}\$.
- 4. In the Tools menu, select Edit. The Edit screen appears.
- 5. Edit the elements in the event in the same fashion you first entered them.
- 6. To remove a photo, highlight the

photo, and then Select \$\int_{\textsup} \textsup \textsup

- 7. In the Tools menu, select Disconnect photos.
- 8. Highlight and select individual photos or highlight and select Select All.

- 9. Highlight and select Delete. A message appears asking if you want to delete the photos. Select Yes.
- 10. When finished editing, highlight and select Done at the bottom of the page.

Functions on the Cover Story (Main) Screen

On the Cover Story screen, you can launch a slide show, display individual pictures, view memos, and view events.

Launching a Slide Show

1. On the Cover Story screen, highlight and select the large Slide Show area. This is the portion of the screen that displays constantly changing pictures. The slide show starts. The

slide show controls are displayed

momentarily, then disappear,

Enter on your remote.

2. To stop or start the slide show and to re-display the controls, press

- 3. To view individual pictures, stop the slide show, and then press the left or right arrow button on your remote.
- 4. To change the speed of the slide show, select the ◀ or ▶ button.

5. To end the slide show, select 5

Viewing Individual Pictures

Return.

1. On the Cover Story screen, highlight and select the strip of photos on

- the bottom right. The Story of the Day screen appears displaying the individual photos.
- 2. Highlight and select a photo. The individual photo is displayed.
- To add a comment about the photo, highlight and select the Add Comment button or select Add Comment. The Comment screen and keyboard appear.
- To watch a slide show that includes

the picture, highlight and select the picture. The slide show begins.

 To watch a slide show together with another member of your group, select Watch together now. This function lets you and another member of your group watch the same slide show on your own TVs, even if you are thousands of miles apart.

Viewing Individual Memos

- 1. On the Cover Story screen, highlight and select the memos displayed on the right side. The Story of the Day screen appears displaying the individual memos.
- 2. Highlight and select a memo. The individual memo is displayed.
 - To add a comment about the memo, highlight and select the Add Comment button or select Add Comment. The Comment screen and

keyboard appear.

individual events.

Viewing Individual Events

1. On the Cover Story screen, highlight and select the events displayed on the right side. The Story of the Day screen appears displaying the

- 2. Highlight and select an event. The individual event is displayed.
- To add a comment about the

event, highlight and select the Add
Comment button or select Add
Comment. The Comment screen and
keyboard appear.

To watch a slide show of the pictures

saved in the event, highlight and select the pictures at the bottom left of the screen. The slide show begins.

The Tools Menu Functions

The Tools Menu appears on most of

the Family Story screens. This section provides a run down of all the Tools Menu functions by screen.

Tools Menu Functions on the Cover Story Screen

Group Members: Lists the current group

members with invitations.

My groups: Lists the groups you are a member of. Also lets you access your

groups.

members and the current prospective

Settings: Lets you edit your profile information and set whether your group will allow new content, new members, new invitations, and issue event reminders.

Logout: Logs you out of Family Story and your Smart Hub account, Returns you to the Smart Hub screen.

Create: Takes you to the Create screen where you can create a photo album, memo, or event record.

Updates: Lets you know if there is an update for the Family Story application, and lets you download and install it.

Tools Menu Functions on the Story of the Day Screen

Filter: Lets you select what to view on the Story of the Day screen by category: All, Album, Memos, Event.

View by Member: Lets you view entries (Albums, Memos, Events) by member.

The rest of the functions - Group

Members, My groups, Settings, Logout,

and Updates - are the same functions

as the Cover Story screen functions.

Other Functions on the Story of the Day Screen

The Story of the Day screen also has a date filter function on the bottom of the screen.

Date created / Date Uploaded: You

can sort the items on the Story of the Day screen by Date created or Date Uploaded by highlighting and then selecting the Date created / Date Uploaded slider button.

You can also quickly move to the month certain items occurred or were uploaded by selecting a highlighted number on the monthly number bar.

You can also select a year, and then a month. When you select a month, Family Story displays the items that were uploaded or occurred in that month.

Fitness



Depending on the version of an application, the instructions may differ. In this case, please follow the instructions on the screen.

The Fitness application provided by
Smart Hub lets you track and manage
a fitness and exercise programme you
create.

To use Fitness, you should be logged

in the Smart Hub.

Read these notes before exercising...

- Please warm-up or stretch before exercising.
- Stop exercising immediately if you feel pain, or dizzy, exhausted, or short of breath.

Create Your Profile

When you start Fitness for the first

- time, you should create your own profile. On the Fitness screen, select Create your profile. A pop-up message appears. Select Create your profile. The Personal Trainer/Create Profile screen appears.
 - 1. To go to next step, press the right arrow button. The Name pop-up appears.
 - 2. Select First Name. The Username screen and keyboard appear. Enter

- your name. When done, Select OK.
- 3. Select Last Name. The Username screen and keyboard re-appear.

 Enter your last name. When done, Select OK.
 - 4. Press the right arrow button on your remote. The Gender pop-up appears.
- 5. Highlight and select your gender.

 When you select our gender, you
 will see a black dot appear in your
 selection.

- 6. Press the right arrow button on your remote until the Date of birth pop-up appears.
- 7. Enter your birth date using your remote. It will be used to personalize some parameters for you.
 - some parameters for you.

 8. Press the right arrow button remote.

 The Units pop-up appears.
 - 9. Select your preferred units. The selected units will be applied

throughout the Fitness app. Move to

the right again. The Height pop-up appears.

- 10. Enter your height. This will be used to calculate your body mass index (BMI). Move to the right again. The Weight pop-up appears.
- 11. Enter your weight. This will be used to calculate your body mass index (BMI). Move to the right again. The application calculates your BMI.
 - 12. The creation of your profile is

finished. The TV displays your profile information and BMI. To start the Fitness app, select Enjoy Fitness.

Using Fitness with categories

- Exercise
- Provides information on your exercise goal, current status and recommended contents.
- Progress

Provide information on your basic body

profile, exercise progress, achievement of your goals, etc.

Browse All

You can use all the exercise contents more easily because the contents are classified into groups such as Abs, Strength, Yoga and so on by their types.

Selecting Exercise Programs

Fitness displays a number of exercise

videos and programs you can use to help you reach your fitness goals. Each of these videos and programs must be downloaded from Samsung Apps. Videos labeled VOD (Video on Demand) are part of a group of free exercise videos. We suggest you download those first.

To download a VOD programme or video, follow these steps;

1. On the Fitness screen, highlight and select a program. A message appears asking you if you want to go to

2. Select Yes. The Samsung Apps screen appears.

Samsung apps.

- This may take a few minutes.
- 3. If this is the first time you have download a VOD programme or video, you will be directed to download the VOD video app that

- lets you download and play all the VOD exercise videos.
- **4.** Follow the directions on the screen to download the VOD video app.
- 5. After the video app has been downloaded, press RETURNS several times to go back to the Fitness screen.
- 6. You can now select and play any of the VOD videos.
 - As you play these videos, Fitness

notes the video you are using and calculates the number of calories you have burned, base on the video.

Kids

The Smart Hubs Kids app provides a quick app launcher and a recommended list of kids and education-related applications and contents your kids can start easily and quickly. It also provides management tools that let you control what your kids can view in the app and how long they can watch.

Using Kids with categories

Playground

Displays recommended contents and applications. When you select an application or content, the TV executes the application or contents immediately.

- You can add up to 40 items to the recommended list. See "My choice" in this section.
- You can edit the contents list. For more detailed information, refer to

"My choice" in this section.

Most of the content must be downloaded from Samsung apps. To download, follow the directions on the screen. When the download is complete, press RETURN'S repeatedly until the Kids app reappears, Start the contents or app by highlighting and then selecting it.

Sticker Book

Displays the Sticker Books with the

stickers your kids received. Also, it can be share with your Family Story.

Your kids can receive the sticker through these methods:

- By User (parent): You can present a sticker using the Present Stickers function in the Parents menu.
- Automatically: Kids presents a sticker
 while the child is watching content.

Creating a Sticker Book

- 1. If you want to create a new Sticker
 Book, select Sticker Book on the
 top of the screen, and then Create a
 New Sticker Book at the bottom of
 the screen. The Create a New Sticker
 Book screen appears.
- 2. Enter the Sticker Book's name using your remote. When done, select Next.
- 3. Select a colour for the Sticker Book.

When done, select Next.

- 4. Check the created sticker book. If you want to change a name, select Edit. If you want to change a colour, select Back.
- 5. When done, select Done. A new Sticker Book is created.
- You can create a new sticker book.Maximum number of books is 10.
- You can check arrived stickers by highlighting and selecting New

Sticker, Only ten new sticker types are displayed in New Sticker at one time.

Browse All

Displays the kids or education-related applications list and all contents list.

When you select an application or contents, if the application or contents has not been installed on the TV, the TV displays the corresponding download screen from

the Samsung Apps screen.

To use Browse All, follow these steps:

- 1. On the Browse All screen, select a character. The contents for that character appears on the right.
- 2. Select the kind of contents you want.
- 3. The detailed information screen for the selected contents appears. You can play the contents, share the contents with your Family Story, add

the contents to My choice, and give the contents a rating.

If you were purchased already, you can play the contents. If you are not purchased, you can download the contents in the Samsung Apps.

Parents

Lets you edit the Playground, give stickers to your kids, check usage time, and set the watching limit alarm.

My choice

You can add or delete contents in the Playground. The Playground displays the added contents only.

To add or delete contents in the Playground, follow these steps:

- On the Parents screen, select My choice. The My choice screen appears.
 - My choice contains content you added through the Browse All

screen.

- 2. Select contents you want to add or delete in the list. A pop-up message appears.
- 3. Select Yes.
- **4.** The selected contents is added or deleted.

Present Stickers

When your kids do a good job today, you can present a sticker to them.

To present a sticker to your kids, follow these steps:

- On the Parents screen, select Present Stickers. The Present Stickers screen appears.
- Select a sticker you want to present.A pop-up message appears.
- 3. Select Yes.
- **4.** Select a sticker book you want to put the sticker into, and then select

Present.

If you want to check a sticker book, select Check Now. You can check the stickers in the selected sticker book.

5. The sticker is placed in the sticker book you selected.

Viewing History

Lets you check how long your kids have used the app through a graph.

Also, lets you check how long your kids have used each video or content item. Change a date or content title using your remote.

Set Alarm

Lets you set how long your kids can watch. When the time is up, the alarm window appears.

To set the time your kids can watch, follow these steps:

- 1. On the Parents screen, select Set Alarm. The Set Alarm screen appears.
- 2. Select Timer,
- **3.** Select amount of time. The alarm is set.

Web Browser

Depending on the version of an

application, the instructions may differ. In this case, please follow the

instructions on the screen.

(May not be available, depending on your country.)

Using this function provided by the Smart Hub, you can surf the Internet on your TV.

- 1. On the Smart Hub screen, select Web Browser. The Web Browser screen appears.
- 2. Surf the Internet in the same way as on a PC.

Using the coloured and function buttons with the Web Browser

B Control Panel

Shows or hides the control panel at the top of the screen.

C Link Browsing / Pointer Browsing

You can change the cursor to Link **Browsing mode or Pointer Browsing** mode. In Pointer Browsing mode, you use a pointer to select items on the screen in the same way you use a pointer on a computer. In Link Browsing mode, you move a blue rectangle from link to link on the screen by pressing the directional keys on your remote. Pointer Browsing is best if

you have a mouse attached to the TV.

Link Browsing only works if you are
browsing using your remote.

- When you select Pointer Browsing, you cannot use the remote to select items in the Tools Menu.
- In Pointer Browsing Mode, you can use the arrow keys on your remote to move the pointer.
- D PIP

Turns PIP on or off. With PIP on, you

can watch TV while using the Web Browser.

• 🞵 Tools

Displays the Tools menu.

Control Panel: Shows or hides the control panel in the top of the screen.

Link Browsing / Pointer Browsing: You can change the cursor to Link Browsing mode or Pointer Browsing mode.

PIP: Turns PIP on or off.

PIP Settings: Lets you select where

the PIP window is displayed on the screen and which sound source the TV plays, sound from the main screen (the browser) or sound from the sub screen (the PIP window).

Add to Bookmark: Add the current page to your Bookmarks.

Enable Grabbing / Disable Grabbing:
You can move a current web page in
the direction you choose. To move

a web page, select a page, and then

move it in the direction you wish using your remote.

Available only when the cursor is set
 to Pointer Browsing.

- Scroll up/down
 You can scroll the page up or down.
- D Return
 Close the Web Browser.

Using the Control Panel with Web Browser

The Web Browser has a series of icons

across the top of the screen which provide a number of useful functions. With these icons, you can easily use the Web Browser. The icons are described below, starting with the icon on the far left of the screen.

Back

Moves to the previous web page.

If there is no previous web page, this icon will not work.

Forward

Moves to the next web page.

If there is no next web page, this icon will not work.

Refresh / Stop

Refreshes the current page or stops the current connection from loading.

Home Page

Goes to the URL you specified as you're the home page.

Zoom

You can select a zoom level of 50%,

75%, 100%, 125%, 150%, 200%, 300% and Fit to screen.

Bookmarks

Displays the Bookmarks screen, You can bookmark the current page or select a favourite page to visit from the bookmark list. You can also sort by Date, Name, or Times Visited, To sort, select the Sort. When you select Enter URL, you can enter in a new URL address directly using your remote or

mouse and bookmark it. When you highlight a bookmark, the Option button appear on the right. In the Option popup, you can edit the selected page or delete the selected page from bookmark list.

Using the Tools menu with Bookmark

- Delete All
 - Delete all bookmark lists.
- Add to Bookmark

Bookmarks the current page.

Import bookmarks

You can import a bookmark file saved on another device such as a PC.

Export bookmarks

You can export a bookmark file from your TV to another device connected to your TV.

History

Displays the History screen. You can

select a web page to visit in the History list. You can also sort by Date, Name, or Times Visited. To sort, select Sort. When you select Enter URL, you can enter in a new URL address directly using your remote or mouse. When you highlight a page, the Option button appear on the right. In the Option popup, you can delete the selected page from the history list or add the selected page to bookmark.

If you want to delete all entries in the history lists, open the Tools menu and then select Delete All.

URL Field

Shows the URL of the current page. If you select the URL field, the URL popup up appears. Using your remote, you can enter a new URL directly.

Windows List

Displays list or images of open windows (the Windows List). You can open new

window from list (using Open new window), select and access a window in the list, select and close a window in the list, or close all windows. When you select Enter URL, you can enter a new URL address directly using your remote or mouse. By clicking the Text/ Image button in the upper right of the screen, you can toggle the Windows list between text descriptions of open windows and images of the open

windows.

Using the Tools menu with Windows List

Open new window

Open a new web browser window.
The new web browser page
automatically displays the home
page.

Close all windows

Close all the currently opened

windows listed in Windows List.

After closing all windows, the TV
opens a new web browser window
automatically. The new web browser
window automatically displays the
home page.

Search

Lets you search the web. When you access the Search entry field, the Search screen appears.

To search the web by word input, follow these steps:

- 1. On the Search screen, select the search engine.
- Select Enter search keyword. The keyboard screen appears.
- 3. Enter the word you want to use as the keyword using your mouse or remote. The TV searches using the keyword and search engine you selected.

Share

Share the current web page with your Family Story.

Options

You can configure the Web Browser settings.

Configuring the Web Browser Using Options

Move the cursor to the top of the screen, and then select the Options icon.

Reading Tools

Provides an easy-to-read page by enlarging the main text. Reading Tools is not available for all pages.

Approved Sites

Allows to restrict your children's access to inappropriate web pages.

Therefore, this function allows access of only the registered web sites.

Every time you access the Approved Sites, the PIN screen appears. The first time you access Approved Sites, enter the default PIN, 0-0-0-0 using the numbers keypad on your remote. You can change the PIN using the Reset password for Approved Sites function. See below.

Approved Sites feature: Turns the Approved Sites function on or off.

Change the Approved Sites password.

Reset password for Approved Sites.:

Add current site: Lets you add the

currently displayed web site to the Approved Sites list.

Manage Approved Sites: Lets you key in URLs to add to the Approved Sites list and delete sites from the Approved Sites list.

If you turn Approved Sites on and have not added any sites to the Approved Sites list, you will not be able to access any Internet sites.

Private Browsing

Enable or disable the Privacy mode.

When the Privacy mode is enabled, the browser does not retain the URLs of sites you visit. If you want to enable Private Browsing, select Yes.

If the Private Browsing function is running, the "Stop" icon appears in front of the URL at the top of the screen. To disable Private Browsing, select it again when Private Browsing is enabled.

PIP Settings

Lets you configure the PIP function.

Position: Select a position for the PIP sub-picture.

Sound Select: Select the audio source you will hear - Main or Sub - when PIP is on.

Web Browser Settings

You can configure Web Browser options.

Set as homepage: You can set the

- home page.
 - Most visited: Set the most frequently visited URL as the home page.
- Current Page: Sets the current page
 as the home page.
- Bookmarks: Sets the bookmarks URL as the home page.
- Enter URL: Lets you key in the URL
 of the page you want for your home
 page. The keyboard works like a cell
 phone texting keyboard.

Pop-up Block: Turns the Pop-up Block on or off.

Ad block: You can determine whether

to block advertisements and select the

URLs for which advertisements areblocked.Ad Blocker: Turns the Ad Blocker on

 Block current page: Adds the current page to the blocked list.

or off.

Manage blocked sites: You can add

a website for which advertisements will be blocked by directly keying in the URL, or you can delete a website from the list.

General: You can delete your personal information.

- Delete history: Deletes the website history.
- Delete browsing data: Deletes
 Internet access information such as cookies,

- Reset Settings: Reset all web
 browser settings to the factory defaults.
- Hide Menu: Turns the control panel auto-hide on or off. If you select on, the control panel on the top will be hidden and only appear when you move the pointer to the top of the screen.

Encoding: You can set the Encoding setting for web pages to Automatic or

Manual.

- Auto select: Turns automatic
 Encoding for web pages on or off.
 The browser selects the appropriate encoding format automatically.
- Settings: Select an encoding format
 from a list of encoding formats
 manually. The format is applied to all
 pages.

Pointer: You can set the speed of the cursor when the cursor is set to Pointer

Mode.

Pointer Speed: Select a pointer speed.

Browser Information: Displays the version and copyright information for the Web Browser.

Skype



Depending on the version of an application, the instructions may differ. In this case, please follow the instructions on the screen.

Skype created a little piece of software that makes communicating with people around the world easy and fun.

With Skype you can say hello or share a laugh with anyone, anywhere. And

if both of you are on Skype, it's free.

Communicate with people around the world!

- To use Skype, you need the Samsung TV Camera (sold separately). Other company's TV Cameras are not compatible with Skype on your TV.
- For more information, download the Skype user's manual from "www. samsung.com."

[Legal Statement]

Due to the various capabilities of products featuring the Samsung Smart Hub - Content Service, as well as limitations in the available content, certain features, applications, and services may not be available on all devices or in all territories.

Some features on Smart Hub may also require additional peripheral devices or membership fees that

are sold separately. Please visit http://www.samsung.com for more information on specific device information and content availability. The services and availability of content through Smart Hub are subject to change from time to time without prior notice.

AllShare Play



View or play photos, music, and movie files located on a USB Mass Storage Class (MSC) device, a PC, or a DLNA device (a cell phone, for example) on your TV.

To view content on a USB device, you must plug the device into a USB port on the TV.

If you want using a USB HDD, we

recommend using a USB HDD that has a power adapter.

To play content located on your PC or on a DLNA compatible cell phone, you must connect your PC and the TV to your network and download and install the AllShare network software on your PC.

Connecting a USB Device

1. Turn on your TV.

- 2. Connect a USB device containing photo, music and/or movie files to the USB port on the TV.
- 3. When a USB device is connected to the TV, the New device connected, window appears. Select a category you want to play among Videos, Photos and Music.
- The TV may display the files on the USB device automatically if it is the only device connected.

- 4. The AllShare Play Music, Photos, or Videos screen appears. If the USB device has folders, the TV displays a list of folders. Highlight and then select a folder. If the USB device does not have folders, the TV will display files or thumbnails.
- 5. Highlight and then select a file to view or play.

To select a different Content
Type or Device Type, press the

RETURNS button repeatedly until the AllShare Play main screen appears.

For more information about playing back files, see the section of this manual starting with "Controlling Video Playback".

Read this information before using AIIShare Play with a USB device.

Restrictions and Cautions

- Before connecting your device to the TV, please back up your files ensure against file damage or data loss,
 SAMSUNG is not responsible for any data file damage or data loss,
- Connect a USB HDD to the dedicated
 USB 1 (HDD 5V 1.0A) port.
- Do not disconnect a USB device while it is being read by the TV.
- If you connect a USB device with a

USB extension cable, the TV may not recognize the USB device or read the files on the device.

If a USB device you connect to the

TV is not recognized, the files on the device are corrupted, or a file in the list is not played, connect the USB device to a PC, format the device, re-copy the files to the device, and

If a file you deleted from the PC is

then try playing again.

- still found when you run Smart Hub, use the "Empty the Recycle Bin" function on the PC to permanently delete the file.
- If your PC cannot construct a functional database of saved files on a USB device because there is no free space on the USB device, you may not be able to view any new files you have added, even though you have saved these files to the

USB device.

Supported Devices

- Certain types of USB Digital camera and audio devices may not be compatible with this TV.
- AllShare Play supports only USB
 Mass Storage Class (MSC) devices.
 MSC is a Mass Storage Class Bulk Only Transport device, Examples of
 MSC include Thumb drives, Flash

Card Readers, and USB HDD (USB HUB are not supported). Devices should be connected directly to the TV's USB port.

A USB HDD is not supported in

LED 4500 and LED5400 series.

• More than 2TB USB HDD is not

supported.

 If more than 2 PTP (Picture Transfer Protocol) devices are connected, you can only use one at a time.

- If more than two MSC devices are connected, some of the devices may not be recognized.
- A USB device that requires high power (more than 500mA or 5V) may not be supported.
- If the TV has no input during the time set in Auto Protection Time, the Screensaver will run.
- The power-saving mode of some external hard disk drives may be

released automatically when you connect them to the TV.

File system and formats

- The USB function might not work properly with unlicensed multimedia files.
- MTP (Media Transfer Protocol) is not supported.
- The file system supports FAT16,
 FAT32, and NTFS.

- AllShare Play supports only the Sequential jpeg format. It does not support the Progressive jpeg format.
- The higher the resolution of the image, the longer it takes to display on the screen.
- The maximum supported JPEG resolution is 15360 X 8640 pixels.
- If a file is corrupted or the TV does not support the file type, the Not Supported File Format, message

- appears.
- If the files are sorted by Folder view,
 the TV can display the names of up
 to 1000 files in each folder.
- If the number of files and folders saved on a USB storage device is over approximately 8000, some files and folders may not appear and some folders may not be unopenable.
 - The TV cannot play MP3 files with DRM that have been downloaded

from a for pay site. Digital Rights Management (DRM) is a technology that supports the creation, distribution, and management of digital content in an integrated and comprehensive way, including protecting the rights and interests of content providers, preventing illegal copying of contents, and managing billings and settlements.

Even if a file you want to play is

encoded in a supported format, an error message may appear due to a sub container or profile problem.

Connecting to a PC through a network

You can play pictures, music, and videos located on your PC through a network connection using AllShare Play.

For more information on how to configure your TV and connect it to your network, refer to "Setting up the Network" in this manual.

PC, you must have connected your TV and your PC to your LAN and downloaded and installed AllShare PC Software on your PC.

We recommend you locate both your TV and PC in the same network subnet. IP addresses have four parts, separated by periods (111,222,333,444). If your TV and PC are in the same subnet, the first 3 parts of the TV IP address and the PC IP address (111,222,333) will be the same and only the last part (the host address) will be different.

The following AllShare Play functions are not supported when you are playing media from a PC connected through a network:

The Background Music and

Background Music Setting functions.

- Sorting files by preference in the Photos, Music, and Videos folders.
 - The
 « (REW) or
 » (FF) function
 while a movie is playing.

Additional Notes

- DivX DRM is not supported.
- Set your PC firewall programme so that AllShare PC Software is a permitted programme.

- Depending on the Internet server, when you use AllShare Play through a network connection:
 - The sorting method may vary.
 - The Scene Search function may not be supported.
 - The Resume function, which resumes playing of a video, may not be supported.
 - The Resume function does
 not support multiple users. (It

memorizes only the point where the most recent user stopped playing a video.)

- The search function may not work depending on the content information.
- You may experience file stuttering while playing a video in AllShare Play through a network connection.

You can play the content in the Web storage

on TV. Follow the instructions below:

- Enter the AllShare Play service
 on TV → Select a content type of
 Music, Photos, and Videos → Select
 SugarSync → Select a file to play
- Visit www,sugarsync,com and you can upload PC contents to the Web stroage (SugarSync). However, you can use the TV to play the content in the PC only where the uploading path is Web Archive -AllShare Play -

Music / Photos / Videos.

 You can also use the TV to play the content in a AllShare Play -enabled mobile device where the uploading path is specified as above.

Using the AllShare Play

following services. You need to log in to your Samsung account to use web storage or social services.

AllShare Play can play various contents

AllShare Play enables you to enjoy the

in three ways:Using USB Device: You can play videos, photos, or music from a

connected USB device.

Using DLNA or Web storage: You can

play various contents from devices connected to your home network or web storage.

 Using Social Services: You can play some content from social services such as Family Story, Facebook or Picasa.

Before using Facebook or Picasa, it should be installed in the Smart Hub.

To use SugarSync, Facebook, or Picasa, you should log in

to corresponding application. Alternatively, you can register your application account in to your Samsung account. To register your application account, refer to "Configuring the Smart Hub with Settings" in the Smart Hub section.

To use Family Story, you should log in to your Samsung account. Before using Family Story, you should join a group at least one more.

You can transfer a desired content to other device connected to the TV.

| Contents Type | Supported transfer device |
|---------------|---------------------------|
| USB | DLNA, SugarSync, Family |
| | Story, Picasa, Facebook |
| Camera | DLNA |
| DLNA | USB |
| SugarSync | USB |
| Family Story | USB |
| Picasa | USB |
| Facebook | USB |
| Mobile device | USB |

My list (In AllShare Play)

Using this function, you can access content easily and quickly.

Recently played

Displays a list of recently played video, photo or music files. If you have a file you want to play again, use this list.

Recently played list, and the USB device is not connected or the file

When you play a file from the

is not found, the "Unable to find the file." message appears.

The Recently played list can have up to 48 files. The files are arranged so that the most currently played files are at the top of the list.

Recently played files located on a mobile phone may not play.

What's new

Displays newly saved videos, photo, or music files on a connected USB


device or your PC. If you have a newly updated file you want to play, use this category.

Playlist

Displays the Playlist files saved on the USB device or your PC. If you want to play a playlist, select the playlist. The selected playlist plays immediately.

You can create up to 12 playlists.

You can add up to 100 files to a single playlist.

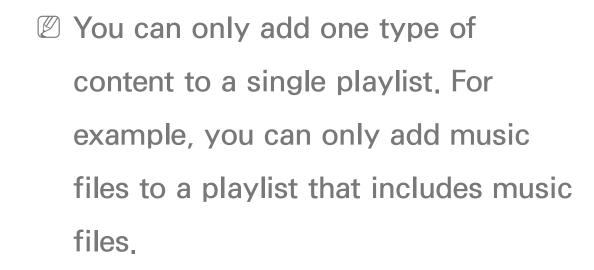

Creating a Playlist

- 1. On the AllShare Play main screen, select Videos, Photos, or Music on the left side of the screen.
- 2. On the right side of the screen,

- highlight and select the device that has the files you want in the playlist.

 AllShare Play displays the folders and/or files on the device.
- 3. If AllShare Play is displaying folders, highlight and select the folder that contains the files you want. If it is only displaying files, go to Step 4.
 - 4. Highlight a file, and then open the Tools menu using your remote,
 - 5. Highlight and select Add to Playlist.

- 7. Repeat Step 6 to select additional files.
 - To select all the files in the list, select Select All. To cancel a selection, select the file again.
 - 8. When done, select Add. The Add to Playlist screen appears.
- 9. Select Create new. The Create a new

playlist, screen appears.

- 10. Enter playlist name using your remote or accept the default name.
- 11. When finished, Select Done. The new playlist is created. The Added popup up appears.
- 12. Select Play to play now or OK to play later.

To add music files a playlist, follow these steps:

1. On the AllShare Play main screen, select Videos, Photos, or Music on the left side of the screen.

You must select the kind of

- content that is already in the playlist. For example, if you want to add files to a music playlist, you must select Music.
- 2. On the right side of the screen, highlight and select the device that has the files you want in the playlist.

- AllShare Play displays the folders and/or files on the device.
- 3. If AllShare Play is displaying folders, highlight and select the folder that contains the files you want. If it is only displaying files, go to Step 4.
 - 4. Hiighlight a file, and then open the Tools menu using your remote,
- 5. Highlight and select Add to Playlist.
- 6. Highlight and select a file you want to add. The ✓ mark appears in the

check box.

7. Repeat Step 6 to select additional files.

To select all the files in the list, select Select All. To cancel a selection, select the file again.

- 8. When done, select Add. The Add to Playlist screen appears.
- 9. Highlight and select the playlist you want to add the files to. The Added pop-up appears.

10. Select Play to play now or OK to play later.

Using Play Selection with music files

- 1. Highlight a music file in the file list.
- 2. Open the Tools menu using your remote, and then select Play selection.

- 4. Repeat Step 3 to select additional tracks.
 - To select all the files in the list, select Select All. To cancel a selection, select the file again.
- **5.** Select Play. The selected music files play.

Using View with Music files

When you use the AllShare Play function with your Web storage

rather than a USB device, View is not supported.

- 1. To sort files in the file lists, select using your remote. The View screen appears.
- 2. Select sort criteria you want.
- Folder view

Displays the folders on the device in alphabetical order. To view the file names and thumbnails, select a folder.

Title

Sorts and displays the files by title in Symbol / Number / Alphabet / Special order.

Artist

Sorts the music files by artist in alphabetical order.

Album

Sorts the music files by album in alphabetical order.

Genre

Sorts the music files by the genre.

Send your music files

Lets you send your music files to your Web storage or other devices.

- To use the Send Function, you must be logged in to Smart Hub.
 - 1. To send music files in the file list, open the Tools menu using your remote, and then select Send.
- 2. Select a music file you want to send.

- The \checkmark mark appears in the check box.
- 3. Repeat Step 2 to select additional tracks.
 - To select all the files in the list, select Select All. To cancel a selection, select the file again.
- 4. When done, select Send. The Send screen appears.
- **5.** Choose the destination device to send, and then select Send.

6. From these steps, please follow the instructions on the screen.

To delete one or more files in the Playlist, follow these steps:

- 1. On the AllShare Play main screen, select My list.
- 2. In the Playlist area at the bottom of the screen, highlight the playlist you want to edit.
- 3. Open the Tools menu using your

remote, and then select Edit playlist.

The Edit playlist screen appears.

- ✓ mark appears in the check box.
- **5.** Repeat Step 5 to select additional files.
 - To select all the files in the list, select Select All. To cancel a selection, select the file again.
- 6. When done, select Remove. A popup up message appears.

7. Select Yes. The selected file(s) has been removed from the playlist.

Videos (In AllShare Play)

You can play video files saved on USB device and/or your PC.

For more information about the subtitle formats and codec formats, refer to "Supported Subtitle and AllShare Play file formats" in the Other Information section.

Playing a Video

- 1. On the AllShare Play screen, select Videos.
- 2. Highlight and select the device you want to play.
- want to play.

 3. If AllShare Play displays folders,
 highlight and select the folder that
- to Step 4. If AllShare Play displays files only, go directly to Step 4.
- 4. Highlight and select the desired video on the file list screen.

If you stop the video while it is playing, you can play the video later from the point where you stopped it.

The file name appears on the top

of the screen with the video's playing time.

If video time information is

Press and hold the rewind or fast-

unknown, the playing time and

progress bar are not displayed.

forward button for 3 seconds while a video is playing to move to the next video.

Video playback control buttons

• **4**, **>**

Each time you select
or
using
your remote, the playback speed
change as follows. (
1 /
2 /
3 /

1 /
2 /
3 /

◀, ▶

Jump to backward or forward from current position.

• 11

Pause the scene.

For Slow Motion: In pause mode,
select ▶. Each time you select ▶
using your remote, the playback
speed is reduced in this order ▶
1/8 / ▶1/4 / ▶1/2. The playback
speed is displayed in the upper

left corner

For Step Mode: In pause mode,
 select II. Each time you select II
 using your remote, a new frame
 will be appear.

The product does not play sound in Step mode or Slow Motion.

Slow Motion and Step Mode

operate only in the forward direction.

Using the Tools menu with Videos

- On the file list screen, you can use the following these options:
 - View

Lets you sort the file list by one of four sort criteria.

- Play selection

Lets you select one or more files to

play immediately.

Send

Lets you send your video files to your Web storage or other devices.

If you want to use this function, you must log in to Smart Hub.

Login / Logout

You can login to or logout of your Samsung Account.

Add to Playlist

Lets you create playlists. When you

create

playlists, you can play a series of videos that you want to watch easily and quickly,

Displays detailed information about

Go to playlist

the selected file

Information

During playback, you can use the

following options on the Tools menu:

Moves to the Playlist screen.

Go to Videos List

Stops the video and takes you to the file list screen.

Play from the beginning

You can restart a video file from the beginning.

Scene Search

You can use the Scene Search function during playback to view or start a movie from the scene of your choice.

If the index information in the file damaged or the file does not support indexing, you will not be able to use the Scene Search function.

- Title Search

You can search the video using the left and right arrow keys or input a playing time directly using your remote.

Time Search

Search the video or input the play time directly using your remote.

Repeat Mode

You can play a single movie file or all the files on the play list screen repeatedly.

Picture Size

Lets you adjust the picture size to your preference.

Picture Mode

You can change the Picture Mode.

Sound Mode

You can change the Sound Mode.

Audio Language

You can listen to the video in one of supported languages. The function is enabled only when you play streamtype files which support multiple audio formats.

Subtitle

Lets you view with language subtitles. You can select a specific

language if the subtitle file contains multiple languages.

- Subtitle Settings

Displays the Subtitle Settings. You can select subtitle options such as colour and transparency.

Information

Displays detailed information about the selected file.

The functions available on the Tools menu at one time depend on the

characteristics of the video you are playing. All functions are not necessarily available for all videos.

Using the View function with Video Files

When you use the AllShare Play function with your Web storage rather than a USB device, View is not supported.

1. To sort files in the file lists, select using your remote. The View screen

appears.

2. Select sort criteria.

Folder view

Displays the folders on the device in alphabetical order. To view the file names and thumbnails, select a folder.

Title

Sorts and displays the file by title in Symbol / Number / Alphabet / Special order.

Latest Date

Sorts and displays files by the latest create date.

Earliest Date

Sorts and displays files by the earliest create date.

Send your video files

Lets you send your video files to your Web storage or other devices.

To use Send, you must be logged in

to Smart Hub.

- 1. To send video files in the file list, open the Tools menu using your remote, and then select Send.
- 2. Select a video file you want to send.
 The mark appears in the check box.
- 3. Repeat Step 2 to select additional files.
 - To select all the files in the list, select Select All. To cancel a

- selection, select the file again.
- **4.** When done, select Send. The Send screen appears.
- **5.** Choose the destination device to send, and then select Send.
- **6.** From these steps, please follow the instructions on the screen.

Photos (In AllShare Play)

⊘ → AllShare Play → Photos

Viewing a photo (or slide show)

For more information about the supported image formats, refer to "Supported Subtitle and AllShare Play file formats" in the Other Information section.

1. On the AllShare Play screen, select Photos.

- 2. On the right side of the screen, select the device that has the photos you want to view.
- 3. If AllShare Play displays folders, select the folder that contains the photos you want, then go to Step 4. If AllShare Play displays photo thumbnails, go directly to Step 4.
 - 4. To start a slide show, select ► using your remote.

To view another photo manually,

press the < or > button.

During the slide show, all files in the file list are displayed in order, starting from the file you selected.

When viewing a photo file or slide show, you can add background music if you have music files on same device.

If you select the wrong background music, you cannot change the music until the BGM

(Background Music) has finished loading.

Photo playback control buttons

• 4/ >>

The slide show speed change as follow (Slow, Normal, Fast). The speed is displayed in the upper right of the screen.



Go to the previous or next photo.

- - Return to the file list screen.
- •
 - Start the slide show.
- 11

Pause the slide show.

Using the Tools menu with Photos

To use the Tools menu with photos,
 you must first highlight a photo file
 on the file list screen. After you have

highlighted a photo on the file list screen, you can use the following options in the Tools menu:

View

Lets you sort the file list by one of four sort criteria.

Play selection

Lets you select one or more files to play immediately.

Send

Lets you send your photos with

your Family Story account or photorelated application.

To use Send, you must be logged in to Smart Hub.

Login / Logout

You can login to or logout of your Samsung Account.

Add to Playlist

Lets you create playlists. When you create playlists, you can play a series of photos easily and quickly

- Go to playlist
 - Moves to the Playlist screen.
- Information
- Displays detailed information about the selected file.
- When playing a photo file, you can use the following options:
 - Go to Photos List
 - Moves to the file list screen.
 - Start Slide Show / Stop Slide Show

You can start or stop a slide show.

Alternatively, select ► to start a slide show or II to stop a slide show using your remote.

You can select the slide show speed

during the slide show. Alternatively,

Slide Show Speed

select

or

using your remote.

Background Music On / Background

Music Off

You can turn on or turn off background music.

Background Music Setting

You can set and select background music when watching a photo file or slide show.

- Picture Mode
 You can change the Picture Mode,
- Sound Mode

You can change the Sound Mode.

Available only when Background
 Music is set to on.

Zoom

You can zoom into images in full screen mode.

Rotate

You can rotate images.

Information

Displays detailed information about the selected file.

Using the View function with Photo Files

When you use the AllShare Play function with Family Story, Facebook,

or Picasa rather than a USB device, View is not supported.

- 1. To sort files in the file lists, select using your remote. The View screen appears.
- 2. Select sort criteria.
- Folder view

Displays the folders on the device in alphabetical order. To view the file names and thumbnails, select a folder.

Title

Sorts and displays the files by title in Symbol / Number / Alphabet / Special order.

Latest Date

Sorts and displays files by the latest create date.

Earliest Date

Sorts and displays files by the earliest create date.

Monthly

Sorts and shows photo files by month.

Send your photos

Lets you send your photos with your Family Story account or to other devices.

- To use Send, you must be logged in to Smart Hub.
- 1. For example, suppose that you want to send with your Family Story.

- 2. To send photo files in the file list, highlight a file, open the Tools menu using your remote, and then select Send.
- 3. Select a photo file you want to send.A ✓ mark appears in the check box on the left.
 - **4.** Repeat Step 3 to select additional tracks.
 - To select all the files in the list, select Select All. To cancel a

- selection, select the file again.
- 5. When done, select Send. The Send screen appears.
- 6. Choose the destination device to send to.
- 7. Choose the family group to share with. A pop-up window appears.
- 8. Enter a message to send to the family group you selected.
 - In the OWERTY keyboard screen is displayed, you can use a keyboard

connected to the TV to enter the message.

9. When done, select Send.

Music (In AllShare Play)



 \rightarrow AllShare Play \rightarrow Music

Playing Music

- For more information about the supported music file formats, refer to "Supported Subtitle and AllShare Play file formats" in the Other Information section.
 - 1. On the AllShare Play screen, press the arrow button to select Music.

- 2. Select the device that contains the files you want to play.
- 3. If AllShare Play displays folders, highlight and select the folder that contains the music files you want, then go to Step 4. If AllShare displays only files, go directly to

Step 4.

- 4. Select the desired music file in the file list or select ► using your remote.
 - To move to a previous page, select

B using your remote. To move to the next page, select c using your remote.

When the music is playing, you can fast forward or fast rewind the music file by selecting
 using your remote.

If the sound is abnormal when you play MP3 files, adjust the Equaliser in the Sound menu. (An over modulated MP3 file may

cause a sound problem.)

Press and hold the rewind or fastforward button for 3 seconds while a music file is playing to move to the next music file.

Music playback control buttons

During playback, you can use additional functions at the bottom right of the screen.

Play / Pause

You can start or pause a music file.

Alternatively, you can select ► or II

using your remote.

Repeat Mode

You can play one or all the music files shown in the file list repeatedly.

Shuffle Mode

You can play the music files sequentially or randomly.

Sound Mode

You can change the Sound Mode.

Using the Tools menu with Music

 To use the Tools menu with Music, you must first highlight a music file on the file list screen. After you have highlighted a music file on the file list screen, you can use the following options in the Tools menu:

View

You can sort the file list by one of four sort criteria.

Play selection

Lets you select one or more files to play immediately.

Send

Lets you send your music files to your Web storage or other devices.

To use Send, you must be logged in to Smart Hub.

Login / Logout

You can login to or logout of your Samsung Account.

- Add to Playlist
 - Lets you create playlists. When you create playlists, you can play a group of music files easily and quickly.
- Go to playlist
- Moves to the Playlist screen.
- Encoding
- You can select an encoding format from the encoding format list.
- Information
- Displays detailed information about

the selected file.

Recorded TV (In AllShare Play)

for LED 4500 - 5400 Series : This function is not supported.

→ AllShare Play → Recorded TV

(Depending on the country)

To use the recording or Timeshift function, the connected USB device must be available for recording. Device format is recommended to use USB HDD.

During the Device formatting, do

not disconnect the device while formatting is in progress. If you format the device, all files will be deleted.

Before formatting your device to the TV, please back up your files to prevent them from damage or loss of data, SAMSUNG is not responsible for any data file damage or data loss.

To record a current broadcasting programme

Allows you to record a programme currently being broadcasted.

Set the current time first to use this function.

- When you record a broadcast programme, press the button on the remote to record. A pop up window will appear.
 - We recommend using a USB
 HDD with at least 5,400 rpm, but

- a USB HDD of RAID type is not supported.
- A USB storage device cannot record until it completes the Device Performance Test.
- 2. Select Length to set up the recording time, and then select OK.

Playing Recorded TV Programme

1. On the AllShare Play screen, select Recorded TV.

- 2. Select the device you want to play.
- 3. Select the desired recorded TV file in the file list.
- 4. Select ►.
- The selected file is displayed on the top with its playing time.

Playback control button with Recorded TV

₩, ₩

Each time select \blacktriangleleft , \Rightarrow your remote, the playback speed change as follows. (\blacktriangleleft 1 / \blacktriangleleft 2 / \blacktriangleleft 3 / \blacktriangleleft 4 / \blacktriangleleft 5 / \blacktriangleleft 6 / \blacktriangleleft 7, \Rightarrow 1 / \Rightarrow 2 / \Rightarrow 3 / \Rightarrow 4 / \Rightarrow 5 / \Rightarrow 6 / \Rightarrow 7)

• •, •

Jump to backward or forward from current position.

• |

Pause the scene.

In pause mode, select ➤ using your

remote. Each time select ➤ using your remote, the playback speed is reduced to ►1/8 / ►1/4 / ►1/2.

In pause mode, select u using your remote. Each time the u function is selected, a new frame will be appear.

The product does not play sound in stop mode.

Stop motion operates only in the forward direction.

Using the Tools menu with Recorded TV

- On the file list screen, you can use the following these options:
 - Play Current Group
 Will play the contents of the selected groups.
 - View

You can sort the file list by selecting

- sort criteria you want.
- Play selection
 - You can play by selecting the desired recorded TV file in the file list.
- Delete
- Add to Playlist
- Lets you make your own playlist.

Deletes the file from the list.

When you use the playlist, you can play recorded TV file you want to

listen easily and quickly.

- Go to playlist
 Moves to Playlist screen.
- Lock / Unlock
 To enable or disable the lock
- Device Management
 On the device can scan and format.
- The following functions are available only in selected content item.
 - RenameChange the name of the content.
 - Information

Displays detailed information about the selected file.

- During playback, you can use the following these options:
 - Go to Recorded List
 Moves to the file list screen.
 - Play from the beginning
 You can restart a recorded TV file from the beginning.
 - \/

Title Search

You can move directly to another

title.

- Time Search

Search the video or input the play time directly using your remote.

Repeat Mode

You can play recorded TV file repeatedly.

Picture Size

You can adjust the picture size to your preference.

Picture Mode

You can change the Picture Mode.

Sound Mode

You can change the Sound Mode.

Information

Displays detailed information about the selected file.

Timeshift

(Depending on the country)

for LED 4500 - 5400 Series: This function is not supported.

Using the Timeshift function

If you missed a live broadcast, you can see from the recorded broadcast using this feature.

When you watch a broadcast programme, select busing your

remote to start the Timeshift function.

2. If you want to stop the Timeshift function, select using your remote.

The Timeshift mode operates for a maximum of 90 minutes.

The Timeshift function is not supported for analogue channels.

The Timeshift functions are disabled for channels locked with Channel Lock.

Before using the Timeshift and a record function...

Recorded videos are DRM (digital rights management) protected and cannot be played on a PC or other TVs. Note that files saved on the TV cannot be used after the main board is changed.

NOTE

We recommend using a USB HDD with

- at least 5,400 rpm, but a USB HDD of RAID type is not supported.
- The availability of both recording and the Timeshift function may differ depending on picture quality and the free space on the hard disk drive.
- USB memory stick is not compatible.
- When the Timeshift is used to the gunwales, the pause may be cancelled.
- When recording is performed by both the PVR (Personal Video Recorder)

- function and a device that supports the HDMI-CEC feature, recording by the PVR function takes precedence.
- If the USB device has failed the Device
 Performance Test, the USB device must
 go through the Device Format and
 Device Performance Test again before
 you record with the Guide or Channel,
 - The Timeshift functions can only be used with a USB storage device that completed the Device Performance

Test.

- If you attempt the recording or
 Timeshift function with a device that
 did not have the Device Performance
 Test, the function will not start.
- If any function that turns off the TV
 (Sleep Timer, Off Timer, etc.) is set for
 a time that conflicts with recording,
 the TV will be turned off once the
 recording is complete.
- For the Timeshift operation, the USB

- device requires 1.5GB of free space.
- The Schedule Recording function requires 100MB of free space on the USB device.
- If the free space of the USB device decreases to less than 50MB while a Schedule Recording is operating, the Schedule Recording function is automatically terminated.
- When both the Schedule Recording and Timeshift functions are running,

- and the free space on the USB device decreases to less than 500MB, only the Schedule Recording function is automatically terminated.
- The Timeshift function continues even after changing the digital channel and users can watch past programs using the saved Timeshift data.
 - If the TV enters a state where the Timeshift function is not supported (application execution, input signal

switching, analogue channel change, etc.), the Timeshift data are not saved.

 If the TV enters a state where the Timeshift function is not supported (application execution, input signal switching, analogue channel change, etc.) while the Timeshift function is running, it is automatically terminated without an additional message being displayed.

 If a user tunes to a digital channel, the suspended Timeshift function resumes automatically.

Using the DLNA Function

♦ → AllShare Play

You can play media contents including videos, photos, and music saved on your mobile phones or the other devices (such as your PC) by controlling them

For more information, visit

on the TV via the network

the Samsung call centre. Mobile devices may need additional software

"www.samsung.com" or contact

installation. For details, refer to each device's user's guide.

If your Samsung TV connects to a non-Samsung DLNA server, a compatibility issue may occur during video playback.

By connecting your Samsung TV to a network via AllShare Play, you can use Samsung's original functions as follows:

Playback of various video formats

- (DivX, MP4, 3GP, AVI, ASF, MKV, etc.)Video thumbnail feature
- Bookmark function (to resume

Auto-chaptering (scene navigation)

video playback)

- Digital content management
- Compatibility with various subtitle formats (SRT, SMI, SUB, TXT,

- Search with file names
- And many others

AllShare Settings

Menu → Network → AllShare Settings

Shows a list of mobile phones or connected devices which have been set up to use AllShare Settings with this TV.

The AllShare Settings function is available in all devices which support

DLNA DMC.

- Allowed / Denied: Allows / Blocks the devices.
- Delete: Deletes the devices from the list.
 - This function only deletes the name of the device from the list. If the deleted device is turned on or tries to connect to the TV, it may appear on the list again.

To play the media contents of the devices connected to DLAN function, follow these steps:

- 1. On the AllShare Play screen, select the kind of content you want to play: Videos, Photos, Music.
- 2. On the right side of the screen, select DLNA. The TV displays the list of devices connected using the DLNA function.
- 3. Select a device. AllShare displays

- the accessible files or folders on the device.
- **4.** Select a file in the file list. The selected file will play.

Playing media contents saved on DLNA devices

- Connect the mobile phone or other devices which support AllShare Play function,
- 2. Play media contents on the device. A

popup screen appears on the bottom of your TV.

3. Select Allow to accept the connected device. The media contents of the device can now play on your TV.

You can find the allowed devices on AllShare Settings.

An alarm window appears informing you that media contents (videos, photos, music) sent from a mobile phone will be displayed on your TV. The contents are played automatically 3 seconds after the alarm window appears.

- If you close the alarm window using your remote when the alarm window appears, the media contents are not played.
- The first time a device accesses your
 TV through the media function, a
 warning pop up window appears.
 Select Allow. This permits the phone

to access the TV freely and use the Media function to play content.

To turn off media contents transmissions from a mobile phone, set the device to Denied in the AllShare Settings.

Contents may not play on your TV depending on their resolution and format.

Some buttons may not work depending on the type of media

content.

Using the mobile device, you can control the media play. For details, refer to each device's user's guide.

Anynet+ (HDMI-CEC)

Menu → System → Anynet+ (HDMI-CEC)

Anynet+ is a function that enables

you to control all connected Samsung

devices that support Anynet+ with your Samsung TV's remote. The Anynet+ system can be used only with Samsung devices that have the Anynet+ feature. To be sure your Samsung device has this feature, check if there is an Anynet+ logo on it.

- You can only control Anynet+
 devices using the TV's remote
 control, not the buttons on the TV.
- The TV remote control may not work under certain conditions. If this occurs, reselect the Anynet+ device.
- The Anynet+ functions do not operate with other manufacturers' products.
- For instructions explaining how to connect Anynet+ external devices,

You must connect an Anynet+ device using an HDMI cable, Some HDMI cables may not support Anynet+ functions,

refer to the device's user manual.

Anynet+ works when the AV device supporting Anynet+ is in the standby or on status.

Anynet+ supports up to 12 AV devices in total. Note that you can connect up to 3 devices of the same

type.

Mowever, you can connect only one Anynet+ Home Theatre. To connect an Anynet+ Home Theatre, connect the Home Theatre to the TV using an HDMI cable then:

To hear sound from the Home
 Theatre's front, left and right
 speakers and the subwoofer only,
 connect a digital optical cable
 between the DIGITAL AUDIO OUT

(OPTICAL) port on your TV and the Digital Audio Input on the Home Theatre.

To hear 5.1 channel audio, connect

- HDMI cables to your Anynet+ DVD player, satellite box, etc. Then, connect the DIGITAL AUDIO OUT
 - (OPTICAL) port on your DVD player, Satellite Box, etc. (i.e. Anynet+ Device 1 or 2) directly to

the Home Theatre, not the TV.

Anynet+ (HDMI-CEC) Menu

TOOLS → Anynet+ (HDMI-CEC)

The Anynet+ menu changes depending on the type and status of the Anynet+ devices connected to the TV.

View TV

Change from Anynet+ mode to TV broadcast mode.

Device List

Shows the Anynet+ device list.

(device_name) Menu

Shows the menu of the connected device. E.g. if a DVD player is connected, the disc menu of the DVD player will appear.

(device_name) Tools

Shows the Tools menu of the connected device, E.g. if a DVD player is connected, the Tools menu of the DVD player will appear.

Depending on the device, this

menu may not be available.

• (device_name) Title Menu

Shows the title menu of the disc in the connected device, E.g. If a DVD player is connected, the title menu of the movie in the DVD player will appear.

Depending on the device, this menu may not be available.

Receiver

Sound is played through the receiver.

Setting up Anynet+ (HDMI-CEC)

Anynet+ (HDMI-CEC)

To use the Anynet+ Function, Anynet+ (HDMI-CEC) must be set to On.

When the Anynet+ (HDMI-CEC)
function is disabled, all the Anynet+
related operations are deactivated

Auto Turn Off

Set an Anynet+ Device to turn off automatically when the TV is turned

off,

If Auto Turn Off is set to Yes, running external devices will turn off at the same time as the TV powers off.

May not be enabled depending on the device.

Receiver

You can listen to sound through a receiver (i.e. Home Theatre) instead of the TV Speaker.

Switching between Anynet+ Devices

- Open the Tools menu using your remote, and then select Anynet+ (HDMI-CEC).
- 2. Select Device List. The Device List screen appears.
 - If you cannot find a device you want, select Refresh to refresh the list.
- 3. Select a device, and then wait until

the switch to the selected device is completed.

The Device List menu appears only when you set Anynet+ (HDMI-CEC) to On in the System menu.

Switching to the selected device may take up to 2 minutes. You cannot cancel the switching operation while switching is in progress.

If you have selected an Anynet+ device using the Source function, you cannot use the Anynet+ function. Make sure to switch to an Anynet+ device using the Device List function. (TOOLS → Anynet+ (HDMI-CEC) → Device List)

Listening through a Receiver

You can listen to sound through a

receiver (i.e. Home Theatre) instead of the TV Speaker. To listen to sound through a receiver, go to Receiver screen (System → Anynet+ (HDMI-CEC) → Receiver). Then select Receiver and set to On.

If your receiver supports audio only, it may not appear in the device list.

The receiver will work when you have properly connected the

optical in jack of the receiver to the **DIGITAL AUDIO OUT (OPTICAL)** port of the TV.

When the receiver (i.e. Home)

Theatre) is set to on, you can hear sound output from the TV' s Optical jack. When the TV is displaying a DTV (air) signal, the TV will send out 5.1 channel sound to the receiver. When the source

is a digital component such as a

DVD player and it is connected to the TV via HDMI, you will hear only 2 channel sounds from the receiver.

Using the ARC function

for LED 6500 Series and above, for PDP TV

You can listen to sound from the TV through a receiver connected using an HDMI cable without connecting a separate optical cable. To listen to

sound through a receiver using the ARC function, go to Receiver screen (System → Anynet+ (HDMI-CEC) → Receiver).

Then select Receiver and set to On.

To use the ARC function, a receiver which supports the HDMI-CEC and ARC features must be connected to the HDMI IN 2 (ARC) port.

To disable the ARC function, set the Receiver to Off, Even if the TV transmits the ARC signal continuously, the receiver will be blocked from receiving the signal.

Troubleshooting

Menu → Support → Self Diagnosis →

Troubleshooting

To view a list of all troubleshooting items, go to e-Manual home screen (Menu → Support → e-Manual → Other Information) or press the SUPPORT button, and then search a desired item by selecting a chapter.

Picture Quality (Troubleshooting)

First, perform the Picture Test and to see if your TV is properly displaying the test image.

(Go to Menu → Support → Self

Diagnosis → Picture Test)

If the test image is properly displayed, the poor picture may be caused by the source or signal.

The TV image does not look as good as it

did in the store.

contents.

- If you have an analogue cable / set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (High Definition) picture quality.
- quality.Many HD channels are up scaled from SD(Standard Definition)
- Cable / Satellite subscribers: Try HD stations from the channel lineup.

- Aerial connection: Try HD stations after performing Auto Tuning.
- Adjust the Cable/Set top box video output resolution to 1080i or 720p.
- Make sure you are watching the
 TV at the minimum recommended
 distance based on the size and
 definition of the signal.

The picture is distorted: macro block error, small block, dots, pixelization

- The compression of video contents
 may cause picture distortion
 especially in fast moving pictures
 such as those in sports and action
 movies.
- A weak or bad quality signal can cause picture distortion. This is not a TV issue.
- Mobile phones used close to the TV (cca up to 1m) may cause noise in the picture on analogue channels.

Colour is wrong or missing.

 If you're using a component connection, make sure the component cables are connected to the correct jacks. Incorrect or loose connections may cause colour problems or a blank screen.

There is poor colour or brightness.

Adjust the Picture options in the TV

menu (go to Picture mode / Colour / Brightness / Sharpness)

- Adjust the Energy Saving option in the TV menu (go to Menu → System
 → Eco Solution → Energy Saving)
- Try resetting the picture to view the default picture settings (go to Menu
 → Picture → Reset Picture)

There is a dotted line on the edge of the screen.

- If the Picture Size is set to Screen
 Fit, change it to 16:9.
- Change cable / satellite box resolution.

The picture is black and white,

 If you are using an AV composite input, connect the video cable (yellow) to the Green jack of component on the TV.

When changing channels, the picture freezes or is distorted or delayed.

- If the TV is connected to a cable box, try to reset the box. (Disconnect and then reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes.)
- Set the output resolution of the cable box to 1080i or 720p.

Sound Quality (Troubleshooting)

First, perform the Sound Test to

determine if your TV audio is operating

properly. (Go to Menu → Support →

Self Diagnosis → Sound Test)

If the audio is OK, the sound problem may caused by the source or signal.

There is no sound or the sound is too low at maximum volume.

Check the volume setting of the

device (Cable/Sat Box, DVD, Blu-ray etc.) connected to your TV.

The picture is good but there is no sound.

Speaker in the Sound menu.

• If you are using an external device,

Set the Speaker Select option to TV

- make sure the audio cables are connected to the correct audio input jacks on the TV.
- If you are using an external device,

option (ex. you may need to change your cable box's audio option to HDMI if you have the box connected to your TV using an HDMI cable.

If you are using a DVI to HDMI cable,

check the device's audio output

a separate audio cable is required.
If your TV has a headphone jack,
make sure there is nothing plugged

• Reboot the connected device by

into it.

disconnecting, and then reconnecting device's power cable.

The speakers are making an inappropriate noise.

- Check the cable connections, Make sure a video cable is not connected to an audio input,
 - For aerial or cable connections,
 check the signal strength. Low signal level may cause sound distortion.

 Perform a Sound Test, (Support → Self Diagnosis → Sound Test)

No Picture, No Video (Troubleshooting)

The TV won't turn on.

- Make sure the AC power cord is securely plugged in to the wall outlet and the TV.
- Make sure the wall outlet is working.
- Try pressing the button on the TV
 to make sure the problem is not the
 remote. If the TV turns on, refer to

"The remote control does not work"

below.

The TV turns off automatically,

- Ensure the Sleep Timer is set to Off in the Setup menu.
- If your PC is connected to the TV, check your PC power settings.
- Make sure the AC power cord is plugged in securely to the wall outlet and the TV.
- When watching TV from an aerial or

cable connection, the TV will turn off after 10~15 minutes if there is no signal.

There is no picture/Video.

- Check cable connections (remove and reconnect all cables connected to the TV and external devices).
 - Set your external device's (Cable / Set top Box, DVD, Blu-ray etc) video outputs to match the connections

to the TV input. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV.

- Make sure your connected devices are powered on.
- Be sure to select the TV's correct source by select Source using your remote.

Aerial (Air / Cable) Connection (Troubleshooting)

The TV is not receiving all channels.

- Make sure the Aerial cable is connected securely.
- Please try Setup to add available channels to the channel list, Go to Menu → System → Setup and wait for all available channels to be stored,

Verify the Aerial is positioned correctly.

The picture is distorted: macro block error, small block, dots, pixelization.

- The compression of video contents
 may cause picture distortion,
 especially with fast moving pictures
 such as those in sports and action
 movies.
 - A weak signal can cause picture

distortion. This is not a TV problem.

PC Connection (Troubleshooting)

A "Mode Not Supported" message appears.

Set your PC's output resolution so it

matches the resolution supported by the TV.

The video is OK but there is no audio.

 If you are using an HDMI connection, check the audio output setting on your PC.

Network Connection (Troubleshooting)

The wireless network connection failed.

- The Samsung Wireless LAN adapter
 is required to use a wireless network.
 for LED 5300, 5500 5800 series and PDP 550
 570 series
- Make sure the TV is connected to a wireless IP sharer (router).

Recording / Timeshift (Troubleshooting)

The USB device is not recognized or a

Device Format, Checking Device or Device

Performance Test fails.

- See the manual for the USB device to check that the USB device supports recording.
 - If the USB device has a lock, ensure it is off.
 - Check that the USB device can be

formatted when connected to the PC. Connect the USB to the TV and format it. (Formatting may fail intermittently.)

 If a Device Performance Test or formatting failed, it means that there is a problem with the USB hardware or the performance of the USB hardware is too low.

A message prompts me to format a USB

device that has been working well.

- If the USB device has a lock, ensure it is off.
- Recover the USB device using the recovery function in Checking Device.

The recording function does not work,

- Check that a USB device is connected.
- Check that the channel is a

- recordable digital channel.
- If the signal is weak or does not exist, the recording function will automatically be closed.
- The TV will not record if the USB device has no free memory space.
 Check that this is not the case.

Timeshift Mode does not work.

 Check that a USB device is connected. broadcasts are not supported.
 Data broadcast channels are not supported.
 If the signal is weak or does not

exist, the Timeshift Mode function

Radio channels and analogue

 Timeshift Mode cannot be performed if the USB device has no free memory space. Check that this is not the case.

will automatically be closed.

USB memory stick is not supported.
 Please use the USB HDD type.

A message indicates a performance test failure, and the recording and Timeshift Mode functions do not work.

 These problems may occur if you use a low-performance USB device that does not support recording. We recommend using a USB HDD with at least 5 400 rpm, but a USB HDD

of RAID type is not supported.

A scheduled recording has failed.

- A scheduled recording is disabled for certain operations (formatting, performance test, error checking, deleting) that access the file system of a USB device.
 - If there is no USB device connected,
 the TV will not record even if the
 scheduled time is reached.

 The TV will not record if the USB device has no free memory space.
 Check that this is not the case.

If you record a channel locked with

Programme Rating Lock, the PIN input window will appear when you try to play back the recording.

Several recording devices are connected but the TV stopped recording.

If multiple recording devices are

connected and the device set as Default Recording Device has no free memory space, the recording function will be closed. Attempt recording again. The device with the most free memory space will automatically be set as Default Recording Device and the TV will start recording,

Others (Troubleshooting)

contents.

The picture won't display in full screen.

 HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3)

Black bars will appear on the top
 and bottom of the screen when you
 watch movies that have aspect ratios
 different from your TV.

 Adjust the picture size options on your external device or set the TV picture size to full screen.

The remote control does not work.

- Replace the remote control batteries with the poles (+ / -) in the right direction.
 - Clean the sensor's transmission window on the remote.
 - Try pointing the remote directly at

the TV from 5~6 feet away.

The cable/set top box remote control doesn't turn the TV on or off, or adjust the volume.

 Programme the Cable/Set top box remote control to operate the TV.
 Refer to the Cable/Set user manual for the SAMSUNG TV code.

A "Mode Not Supported" message appears.

 Check the supported resolution of the TV, and adjust the external device's output resolution accordingly. Refer to the resolution settings in the User manual.

There is a plastic smell from the TV.

 This smell is normal and will dissipate in a short time.

The TV Signal Information is unavailable in

the Self Diagnosis menu,

 This function is only available with digital channels from an Aerial / RF/ Coax connection.

The TV is tilted to the side.

 Remove the base stand from the TV and reassemble the stand.

There are difficulties assembling the stand base.

 Make sure the TV is placed on a flat surface. It is necessary to use magnetized screw driver if you cannot remove the screws from the TV.

The channel menu is greyed out. (Unavailable)

 The Channel menu is only available when you select the TV source.

Your settings are lost after 30 minutes or every time the TV is turned off.

 If the TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. Change the settings from Store Demo mode to Home Use mode in the Setup procedure. Select TV in the Source using your remote, and go to Menu \rightarrow System \rightarrow Setup.

It is possible to disable the Store

Demo via Tools as well. (Tools → Demo → Off)

You have intermittent loss of audio or video.

- Check the cable connections and reconnect them.
- Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are

flexible enough for long term use.

If mounting the TV to the wall, we recommend using cables with 90 degree connectors.

closely at the edge of the frame of the TV.

You see small particles when you look

 This is part of the product's design and is not a defect.

The PIP menu is not available.

PIP functionality is only available

when you are using a HDMI or components source.

The message "Scramble signal" or "Weak Signal/No Signal" appears.

- If you are using a CAM CARD (CI / CI+), check that it is installed into the common interface slot.
 - If there is still a problem, pull the CAM CARD out of the TV and insert it into the slot again.

You turned the TV off 45 minutes ago, and it turned on again.

 It is normal. The TV operates the OTA (Over The Aerial) function itself to upgrade firmware downloaded whilst your watching TV.

There are recurrent picture/ sound issues.

Check and change the signal/source.

A reaction may occur between the rubber cushion pads on the base stand and the top finish of some furniture.

 To prevent this, use felt pads on any surface of the TV that comes in direct contact with furniture.

You can keep your TV as optimum condition to upgrade the latest firmware on web site (samsung.com → Support → Downloads) by USB.

POP (TV's internal banner ad) appears on the screen.

Select Home Use under Setup mode.

For details, refer to the Setup Feature.

The Plasma TV is making humming noise.

for PDP TV Plasma TVs typically make a soft humming sound. This is normal. It's caused by the electrical charges

that are used to create the images on

the screen.

If the humming sound is loud, you may have set the brightness on the TV too high. Try setting the brightness lower.

You can also have loud humming if the back of your Plasma TV is too close to a wall or other hard surface. Also, try rerouting your connection cables.

An improperly installed wall mount can also create excessive noise.

Image Retention (Burn In) Issue.

for PDP TV To minimize the possibility of screen burn, this unit is equipped with Pixel Shift screen burn reduction technology. Pixel Shift lets you set the picture so it moves slightly up and down (Vertical Line) and side to side (Horizontal Dot). The regular, slight movement of the picture reduces screen burn in.

Anynet+ (HDMI-CEC) (Troubleshooting)

Anynet+ does not work.

Check if the device is an Anynet+
device. The Anynet+ system supports
Anynet+ devices only.

You can connect only one receiver

(home theatre).

Check if the Anynet+ device power

cord is properly connected.

Check the Anynet+ device's Video/

set to On in the Anynet+ setup menu.

Check whether the TV remote control is in TV mode.

Anynet+ compatible.

Audio/HDMI cable connections.

Check whether Anynet+ (HDMI-CEC) is

Check whether the remote control is

Anynet+ doesn't work in certain

situations, (Searching channels,

If you have removed and then

operating Smart Hub or Setup, etc.)

reconnected the HDMI cable, please make sure to search devices again or turn your TV off and on again.

I want to start Anynet+.

connected to the TV and check if the Anynet+ (HDMI-CEC) is set to On, $(Menu \rightarrow System \rightarrow Anynet+ (HDMI-CEC))$

Open the Tools menu using your

Check if the Anynet+ device is properly

remote and then select Anynet+ (HDMI-CEC). Then select a menu you want.

I want to exit Anynet+.

Select View TV in the Anynet+ menu.

Go to the Source screen using your remote and select a non- Anynet+ device.

The message Connecting to Anynet+ device ... appears on the screen.

You cannot use the remote control when you are configuring Anynet+ or switching to a view mode.

Use the remote control after the TV has completed Anynet+ configuration or has finished switching to Anynet+.

The Anynet+ device does not play.

You cannot use the play function when Setup is in progress.

The connected device is not displayed.

supports Anynet+ functions.

Check whether or not the HDMI cable is

Check whether or not the device

properly connected.

Check whether Anynet+ (HDMI-CEC) is

set to On, (Menu → System → Anynet+
(HDMI-CEC))

Search Anynet+ devices again.

Anynet+ requires an HDMI connection.

Make sure the device is connected to

Some HDMI cables may not support

your TV with an HDMI cable.

Anynet+ functions.

If the connection is terminated because

there has been a power failure or the HDMI cable has been disconnected, please repeat the device scan.

The TV sound is not output through the receiver.

Connect the optical cable between TV

and the receiver.

The ARC function enables digital output of sound using the **HDMI IN 2(ARC)** port and can only be operated when the TV is connected to an audio receiver that supports the ARC function.

AllShare Play (Troubleshooting)

This file may not be playable properly.

This may appear because of the high bit rate of the content. Content generally will play but could experience some playability issue.

Smart Hub (Troubleshooting)

Some application contents only appear in English, How can I change the language?

The Application content language may be different from the application user interface language.

The ability to change the language depends on the service provider.

Some application services do not work,

Check with the service provider,

Refer to the help website for application service provider information.

When a network error occurs, I can only use the setting menu.

If network connection doesn't work, your service might be limited, as all functions except the setting menu need to be connect to the internet.

Web Browser (Troubleshooting)

- To open Web Browser, select Web Browser. The Web Browser may be displayed differently with PC.
- 2. The Web Browser is not compatible with a Java application.
- 3. When attempted to download a file, but the file could not be saved and an error message appeared.
- **4.** Access may be blocked to some websites or to web browsers

- operated by certain businesses.
- 5. Playback of Flash video may be restricted.
- **6.** E-commerce, for purchasing products online, is not supported.
- 7. Scrolling a web page that allows only part (and not the whole) of the page to be scrolled may cause corrupted characters.
 - 8. ActiveX is not supported.
- 9. Some options cannot be accessed in

- Tab mode. (To access such options, switch to Pointer mode.)
- 10. Some text may appear corrupted because the number of supported fonts is limited.
- 11. The response to a command on the remote or the screen display may be delayed temporarily if a web page is currently loading.
- 12. The loading of a web page may delay or stop with some operating

- systems.
- 13. Copy and Paste are not supported.
- 14. When writing emails or posting messages, some functions (Such as changing the size or colours.) may not be supported.
 - 15. The number of bookmarks and logs that can be saved is limited.
- 16. The maximum number of windows that can open at the same time may vary depending on the browsing

17. The web browsing speed depends on

condition or TV model.

- the network conditions.
- 18. PIP will automatically be deactivated
- if a video is played in the browser.

 Videos may not commence playback after PIP interruption and a possible refresh for the page may be required.
- 19. The Web Browser can play MP3 audio files only.
 - 20. The function for importing or

- exporting bookmarks is compatible with bookmark files in a particular file format only. (Compatible format: Netscape-bookmark-file-1)
- 21. When you import or export the bookmark, the folder tree is not included.
- 22. If you import the bookmark file to a
 Computer from a TV, the bookmark
 file will be saved in "Samsung Smart
 TV Bookmark" folder.

- 23. If the time is not set in the menu
 (Menu → System → Time → Clock),
 the history information may not be saved.
- 24. Visited web site history is saved in chronological order and it will be removed from the list according to oldest page accessed.
- 25. Some video or audio content may not play during Flash playback depending on the video/audio codec

supported.

- 26. A sudden change in the picture brightness inside the video window may affect the brightness of the surrounding stationary picture. for PDP TV
- 27. Video Content that requires

 Flash Player 10.2 or higher is not supported.
- 28. Video sources from PC-optimized streaming service providers may not

play properly on our proprietary web browser.

Supported Subtitle and AllShare Play file formats

Subtitle

External

- MPEG-4 timed text (.ttxt)
- SAMI (.smi)
 - SubRip (.srt)
 - SubViewer (.sub)
 - Micro (.sub or .txt)

- SubStation Alpha (.ssa)
- Advanced SubStation Alpha (.ass)
- Powerdivx (.psb)

Internal

Xsub

Container: AVI

- SubStation Alpha
- Container: MKV
 - Advanced SubStation Alpha

Container: MKV

SubRip

Container: MKV

— MPEG-4 timed text

Container: MKV

Supported image resolutions

| File Extension | Type Resolution | | |
|-----------------|-----------------|--------------|--|
| *.jpg *.jpeg | JPEG | 15360 x 8640 | |
| *.png | PNG | 1920 x 1080 | |
| *.bmp | BMP | 1920 x 1080 | |
| *.mpo | MPO | 15360 x 8640 | |

Supported music file formats

| File Extension | Туре | Codec | Comments |
|-------------------------|-------|---------------------|--|
| *.mp3 | MPEG | MPEG1 Audio Layer 3 | |
| *.m4a *.mpa *.aac | MPEG4 | AAC | |
| *.flac | FLAC | FLAC | The Seek (jump) function is not supported. Supports up to 2 channel |
| *.ogg | OGG | Vorbis | Supports up to 2 channel |
| *.wma | WMA | WMA | WMA 9, 10 Pro supports up to 5.1 channel and M2 profile (except LBR mode of M0). |

Video Codec

| File Extension | Container | Video Codec | Resolution | Frame rate (fps) | Bit rate (Mbps) | Audio Codec |
|---|--|--------------------------|-------------|---------------------|--------------------------|---|
| *.avi *.mkv | *.mkv *.asf *.wmv *.mp4 *.3gp AVI *.vro MKV *.mpg ASF *.mpeg MP4 | Divx 3.11/4.x/5.x/6.x | 1920 x 1080 | 6 - 30 | 30 | AC3 LPCM ADMPCM(IMA, MS) AAC HE-AAC WMA DD+ MPEG(MP3) |
| *.wmv | | MPEG4 SP/ASP | | | | |
| * 3gp | | H.264 BP/MP/HP | | | | |
| | | Motion JPEG | 640 x 480 | | 8 | |
| *.tp *.trp | VRO VOB | Window Media Video v9 | | | | |
| *.mov PS *.flv TS *.vob *.svi *.m2ts *.mts *.divx | MPEG2 | 1920 x 1080 | | 30 | DTS Core G.711(A-Law, | |
| | | MPEG1 | | | | μ-Law) |
| | | VP6 | 640 x 480 | | 4 | |
| *.webm | WebM | VP8 | 1920 x 1080 | 6 - 30 | 8 | Vorbis |

Other Restriction

Video content will not play, or not play correctly, if there is an error in

the content or the container.

Sound or video may not work if the contents have a standard bit rate/ frame rate above the compatible Frame/sec listed in the table above.

If the Index Table is in error, the Seek (Jump) function is not supported.

When you play video over a network connection, the video may not be played smoothly.

The menu may take longer to appear

if the video's bit rate exceeds 10Mbps.

Some USB/digital camera devices may not be compatible with the player.

Video decoder

- Supports up to H.264, Level 4.1.
- H.264 FMO / ASO / RS, VC1 SP / MP /
 AP L4 are not supported.
- For all Video codecs except VP8, VP6:

- Below 1280 x 720: 60 frame max
- Above 1280 x 720: 30 frame max
- GMC is not supported.
- Supports only SVAF Top/Bottom and Side by Side.

Audio decoder

- WMA 9, 10 Pro supports up to 5.1 channel and M2 profile (except LBR mode of M0).
- WMA lossless audio is not supported.

 If Vorbis is only in WebM container, supports up to 2 channel.

Data Service

(text, still images, graphics, documents, software, etc.) transmitted via broadcast media.

Allows the user to use information

Menu → System → Auto Run Data Service Sets whether or not to automatically run data service, Auto Run Data Service

automatically runs data service without

Auto Run Data Service (On / Off) for Italy

user intervention.

If any other secondary function is under way, Auto Run Data Service may not work.

Using Data Service

Provided Data Service information

may vary depending on broadcast.

While using data service, changing the channel using the numeric functions may not be possible depending on the service.

- 1. Select A using your remote. Select a desired service.
 - If Auto Run Data Service is On,
 the data service will automatically
 run with loading banner, In this
 case, the A function does not

work.

- 2. Select \(\text{\tiny{\text{\tinx}\text{\tinx}\text{\tilitet{\text{\t
- 3. Move to a desired option by your remote control on the data service screen and then select **OK**. The selected service will be started.
 - If a Colour function of a certain function appears on the screen, you can use the offered function by select corresponded function.

4. If you select **EXIT**, data service will be closed.

Main Data Service buttons and their functions

- A (Data Service)
 - Displays the Data Service list and immediately starts Data Service.
- BACK
 - Returns to the previous screen.
 - Colour Button

Perform functions corresponding to each Colour button image displayed on the screen during Data Service.

Operations may differ depending on the service provider.

Symbol

Text can be inputted using the numbers and letters printed on and above the numeric keys on the remote control.

If you input the numeric keys on the remote control one by one into the

blank where the cursor is located on the text input screen, the corresponding lettering, numbers or special characters will be displayed, e.g., if you press the number 3 key in rapid succession, then the assigned letters (D, E, and F) and the number 3 will alternately appear in order of input.

TEXT

Switches to teletext mode or Returns to the previous screen.

Operations may differ depending on the service provider.

• **^** / **** / ****

Moves the Data Service menu up, down, left and right.

OK

Runs a selected item.

• EXIT

Stops a running Data Service.

HbbTV

(Depending on the country)

You will be able to access services from entertainment providers, online providers and CE manufactures through the HbbTV.

In some countries, HbbTV is a data

service.

This service may be supported in

other countries.

Some broadcasting may not support

the HbbTV.

- HbbTV is turned off by default. To use HbbTV, go to System → Data
 Service and set it Enable. (Depending on the country)
- 2. HbbTV is not available when

 Timeshift is running or when a
 recorded video is being played back.
- 3. An application on HbbTV may malfunction temporarily depending on the circumstances of the

- broadcast station or application provider.
- 4. An application is only available for use on HbbTV when the TV network is connected to an external network. The application may malfunction depending on the network conditions.
- 5. If the current channel is compatible with both the HbbTV and non-HbbTV text input modes, activate TTX by

select TTX key twice.

When the screen indicates (with the A, etc.) that HbbTV is being accessed.

- Select TTX using your remote, once to enter the HbbTV text-input mode.
- Select TTX using your remote, twice to


enter the non-HbbTV text-input mode.

Connecting to a TV Viewing Card slot

To connect the CI CARD Adapter, follow

these steps: for LED 4500~6300 Series and PDP TV

Using the "CI or CI+ CARD"

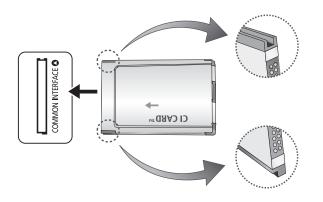

To watch paid channels, the "CI or CI+

- CARD" must be inserted.
- If you don't insert the "CI or CI+ CARD", some channels will display the message "Scrambled Signal".
- The pairing information containing a telephone number, the "CI or CI+ CARD" ID the Host ID and other information will be displayed in about 2~3 minutes.
 If an error message is displayed, please contact your service provider.
 - When the configuration of channel

information has finished, the message "Updating Completed" is displayed, indicating the channel list is updated.

NOTE

- You must obtain a "CI or CI+ CARD"
 from a local cable service provider.
 - When removing the "CI or CI+
 CARD", carefully pull it out with your hands since dropping the "CI or CI+
 CARD" may cause damage to it.

Insert the "CI or CI+ CARD" in the direction marked on the card.

The location of the COMMON

- INTERFACE slot may be differentdepending on the model.- "CI or CI+ CARD" is not supported in
- some countries and regions; check with your authorized dealer.
 - If you have any problems, please contact a service provider.
 - Insert the "CI or CI+ CARD" that


The screen will be distorted or will not be seen.

supports the current aerial settings.

these steps: for LED 6500 Series and above

To connect the CI CARD Adapter, follow

We recommend attaching the adapter before installing the wall mount, or inserting the "CI or CI+ CARD".

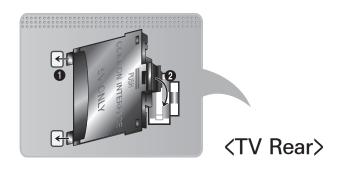

- 1. Insert the CI CARD Adapter into the two holes on the product 1.
 - Please find two holes on the rear of the TV. Two holes are beside the COMMON INTERFACE port.
- 2. Connect the CI CARD Adapter into the COMMON INTERFACE port on the product 2.

3. Insert the "CI or CI+ CARD"

Warning

We recommend that you insert the CI card before you mount the TV on a wall. It may be difficult to insert after the mounting. Insert the card after attaching the CI-Module on TV. It is difficult to attach the module if you insert the card before attaching.

Using the "CI or CI+ CARD"



To watch paid channels, the "CI or CI+ CARD" must be inserted.

- If you don't insert the "CI or CI+ CARD", some channels will display the message "Scrambled Signal".
- The pairing information containing a telephone number, the "CI or CI+ CARD"
 ID the Host ID and other information

will be displayed in about 2~3 minutes. If an error message is displayed, please contact your service provider.

 When the configuration of channel information has finished, the message "Updating Completed" is displayed, indicating the channel list is updated.

NOTE

You must obtain a "CI or CI+ CARD"
 from a local cable service provider.

CARD", carefully pull it out with your hands since dropping the "CI or CI+

CARD" may cause damage to it.

When removing the "CI or CI+

- Insert the "CI or CI+ CARD" in the direction marked on the card.
 - The location of the COMMON
 INTERFACE slot may be different

depending on the model.

Teletext Feature

(Depending on the country)

The index page of the Teletext service gives you information on how to use the Service. For Teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.

You can change Teletext pages by select numeric using your remote

control.

Teletext on / mix / off: Activates the Teletext mode for the current channel. Press the button twice to overlap the Teletext mode with the current broadcasting screen. Press it one more time to exit teletext.

Store: Stores the Teletext pages.

Size: Displays the teletext on the upper half of the screen in double-size.

To move the text to the lower half of

the screen, press it again. For normal display, press it once again.

Hold: Holds the display at the current page, in the case that there are several secondary pages that follow automatically. To undo, press it again.

Colour buttons (red, green, yellow, blue): If the FASTEXT system is used by the broadcasting company, the different topics on a Teletext page are colourcoded and can be selected by coloured

buttons. Press the colour corresponding to the topic of your choice. A new colour coded page is displayed. Items can be selected in the same way. To display the previous or next page, select corresponding coloured button.

Mode: Selects the Teletext mode

(LIST / FLOF). If pressed during LIST

mode, switches the mode to List save

mode. In List save mode, you can save

a Teletext page into a list using the 8

Sub-page: Displays the available sub-page. Page up: Displays the next Teletext page. Page down: Displays the previous Teletext page. (contents)

(store) button.


page at any time while you are viewing Teletext.

Reveal: Displays the hidden text

(answers to quiz games, for example).
To display the normal screen, press it again.


EX Cancel: Shrinks the Teletext display to overlap with the current broadcast.

Typical Teletext page

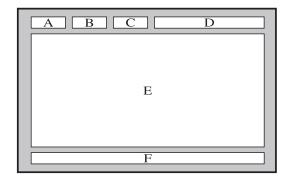

| Part | Contents |
|------|--|
| Α | Selected page number |
| В | Broadcasting channel identity. |
| С | Current page number or search indications. |
| D | Date and time. |
| E | Text. |
| F | Status information. FASTEXT information. |

Anti-theft Kensington Lock

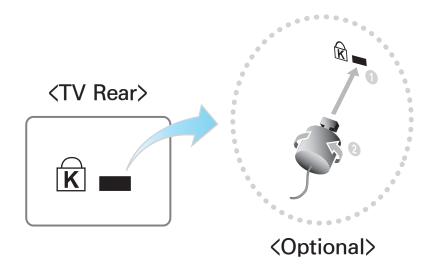


A Kensington Lock is a device you can use to physically fix your TV in place when using it in a public place.

You wrap the Kensington Lock's cable

around a large, immobile object and then attach the lock to the Kensington slot on the back of the TV.

The appearance and locking method may differ from the illustration below depending on the manufacturer.

Refer to the manual provided with the Kensington Lock for additional information on proper use. The Kensington Lock is not supplied by Samsung.

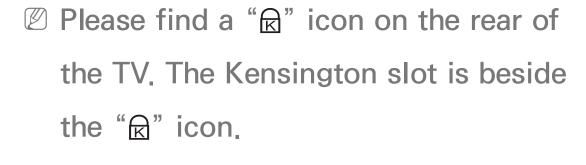

To lock the product, follow these steps:

- 1. Wrap the Kensington Lock cable around a large, stationary object such as desk or chair.
 - 2. Slide the end of the cable with the lock attached through the looped end of the Kensington Lock cable.

- 3. Insert the locking device into the Kensington slot on the product.
- 4. Lock the lock.
- These are general instructions. For exact instructions, see the User manual supplied with the locking device.
- The locking device has to be purchased separately.
- The location of the Kensington slot may be different depending on the

TV model.

Licence

Open Source Licence Notice

In the case of using open source software, Open Source Licences are available on the product menu.

Open Source Licence Notice is written only English.



DivX Certified® to play DivX® video up to HD 1080p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274



TheaterSound, SRS and symbol are trademarks of SRS Labs, Inc.

TheaterSound technology is incorporated under licence from SRS Lab, Inc.



Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under licence under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks. & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product Includes software. © DTS, Inc. All Rights Reserved.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Trademark: Rovi and Rovi Guide are trademarks of Rovi Corporation and/or its subsidiaries.

Licence: The Rovi Guide system is manufactured under licence from Rovi Corporation and/or its subsidiaries.

Patent: The Rovi Guide system is protected by patents and patent applications filed in the US, Europe, and other countries including one or more of the United States patents 6,396,546; 5,940,073; 6,239,794 issued to Rovi Corporation and/or its subsidiaries.

Disclaimer: Rovi Corporation and/or its subsidiaries and related affiliates are not in any way liable for the accuracy or availability of the programme schedule information or other data in the Rovi Guide system and cannot guarantee service availability in your area. In no event shall Rovi Corporation and/or its related affiliates be liable for any damages in connection with the accuracy or availability of the programme schedule information or other data in the Rovi Guide system.